

# Owner's Handbook



# Assistance

## Retailer Network

The Authorised McLaren Retailer network is constantly expanding and a full list with contact details can be found at:

[www.retailers.mclaren.com](http://www.retailers.mclaren.com)

In the event of an emergency, call your local emergency telephone number.

For non-emergency assistance, contact your nearest McLaren retailer.

Contact details for McLaren Client Services can be found at:

<https://cars.mclaren.com/contact-us>

**Australia only:** If you have been unable to obtain assistance using the number(s) listed for towing/roadside assistance, or the dealer is unable to provide towing/roadside assistance, please call 1800 626 768.





## **Contents**

- 1.01 Before You Drive**
- 2.01 Driving Controls**
- 3.01 Instruments**
- 4.01 Central Display**
- 5.01 Comfort and Convenience**
- 6.01 Maintaining Your McLaren**
- 7.01 Vehicle Data and Glossary**
- 8.01 Conformity Information**

# Introduction

## Introduction

Please read this information to familiarise yourself with your McLaren and its features before you drive. This provides the necessary information for you to get the optimum benefit and enjoyment from your McLaren.

This publication describes all options and features available for your McLaren. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, optional equipment or the fitment of McLaren approved accessories.



**NOTE: The images shown in this publication may not exactly reflect your unique vehicle.**

The documents supplied with your McLaren are an integral part of the vehicle. Ensure that you pass them onto the new owner if you sell the vehicle.

The information is divided into specific sections, to assist in finding the particular information you require:

### Before You Drive

Details the settings you need to make in the cockpit to ensure you are fully prepared and have safe and easy access to all controls before driving.

### Driving Controls

This section contains detailed information regarding the equipment and driving controls fitted to your McLaren and how to use those controls to best effect during a journey.

### Instruments

This section contains information on the Driver Display, including information on how to operate features of the McLaren Infotainment System (MIS).

### Central Display

This section contains information on the McLaren Infotainment System (MIS), including information on how to view and change vehicle settings.

### Comfort and Convenience

Contains information on those systems and features which make the cockpit a pleasant environment in which to spend time.

### Maintaining your McLaren

Information on maintaining your McLaren is located here. Also included is advice on using your McLaren in winter weather and if you choose to drive your vehicle abroad, what to do if something should go wrong and how to manage any possible problems which arise as a result. Information on fuses, lights and what to do if you experience a puncture.

### Vehicle Data and Glossary

Refer to this section when you need information regarding the fluid specifications and quantities that are required for the various systems on your McLaren, or when you need to know a specific piece of data relating to your McLaren or its performance.

The technical glossary contains a brief explanation of some of the more complex systems fitted to your McLaren. Your McLaren Retailer will be able to assist should you need more information.

### Index

The table of contents and the index will help you find information quickly, when you need it.

# Introduction

## Information about this document

McLaren is constantly updating its vehicles to meet and exceed the latest technologies. McLaren therefore reserves the right to introduce changes in design, equipment and technical features at any time.

© McLaren Automotive Limited.

This publication must not be reproduced, translated or reprinted, in whole or in part, without written permission from McLaren Automotive Limited.

The equipment fitted to your McLaren may vary from the images shown depending on vehicle and market specification.

All information, illustrations and specifications in our applications are based on data available and are correct at the time of issue. The availability of options may vary from market to market due to local restrictions and regulations. Some illustrations in these applications may not necessarily reflect the specifications or options available in your local market and may show optional equipment.


The specifications contained in these applications are for information purposes only and McLaren Automotive reserves the right to change product specifications at any time without notice or incurring obligation. For full specification details and information on standard and optional equipment, please consult your McLaren Retailer.

This vehicle may be covered by patents. See [cars.mclaren.com/patents](https://cars.mclaren.com/patents).

Printed in United Kingdom, 22QA138GP.


## Electronic user manual

Your vehicle is fitted with an electronic user manual, the Owner's Handbook is available on the Central Infotainment Touchscreen.

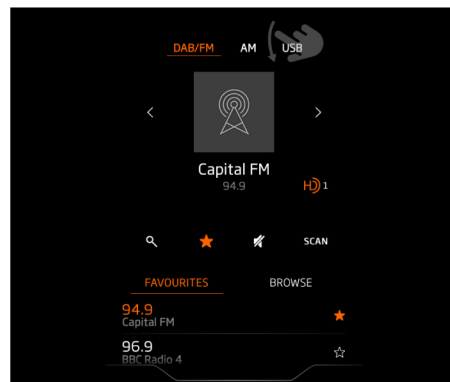



To access the manual, swipe down on the status bar at the top of the McLaren Infotainment System (MIS) screen then touch the Owner's Handbook icon.

# Introduction


 **NOTE:** This feature cannot be accessed when the vehicle is in motion. The electronic user manual is only available when the vehicle is stationary, to prevent the driver from being distracted.


Select the required language, then select a topic from the contents page.

 The home icon appears at the top and bottom of each page. Selecting the home button will return you to the main contents page.

 These icons can be used to navigate to the previous or next topic as required.




Select 'Related Topics' to quickly access the other information within the current section.

 This icon can be used like a web browser back button, to go back to the previous view.


 This icon can be used to return to the main contents page.

## Symbols

You will find the following symbols in this Owner's Handbook. These symbols are intended to give you an instant visual message on what type of information is being displayed.

Warnings	
	A warning draws your attention to activities that could cause injury or death.
Notes	
	Notes draw your attention to activities that contain possible risks to your McLaren, provide advice that you may find useful, or give additional information regarding a particular subject.
Environmental notes	
	Environmental notes give you tips on minimising the impact that you and your vehicle have on the environment.


## Operating safety

 **WARNING:** The electronic systems fitted to your McLaren interact with each other. Tampering with these systems could cause malfunctions in other interconnected systems. Such faults could seriously endanger the operational safety of your McLaren and your own safety. Additional work or modifications made to the vehicle, which have been carried out incorrectly can also affect its operating safety.

### Vehicle use

Observe the following when using your McLaren:

- The safety notes throughout this information
- Road traffic laws and regulations

 **WARNING:** There are various warning labels attached to your McLaren. These are intended to make you and others aware of various risks. Do not remove any warning labels from the vehicle.

# Introduction

**If you remove these warning labels, you or others may not then be aware of dangers, which may result in an injury.**

## Ground clearance



**WARNING: Damage to the underside of the vehicle may occur when approaching steep inclines or declines.**

Drive with care when:

- approaching kerbs.
- approaching steep inclines.
- departing steep declines.
- driving on rough roads.
- driving in areas where traffic calming measures have been deployed.
- driving in any other environment where sudden change of road surface height or elevation are encountered such as car parks.

See Vehicle dimensions, page 7.05.

## Track driving

To achieve optimum performance and reliability, it is important to ensure the following preconditions are met before attempting to drive your vehicle on a track:

- Engine oil is at normal operating temperature
- Engine oil level shows 3, 4, 5 or 6 green segments, see Checking the engine oil, page 6.02
- Engine coolant is at normal operating temperature
- Tyres should not exceed the safe operating temperatures



**NOTE:** Before you use your vehicle on a track, consult your McLaren Retailer. McLaren recommend that your vehicle is inspected before and after track use.



**NOTE:** Always drive within your limits and the limits of the vehicle.

## Cooling down

McLaren recommend that you take time to cool the vehicle down during track driving, due to the high temperatures that may be generated by the brakes and transmission which could affect performance. Time should be taken to drive the vehicle at a slower speed without using hard braking or carrying out excessive gear changes, this uses the airflow to cool the vehicle.

McLaren recommend that time is allowed for your vehicle to return to normal operating temperatures before leaving the track.



**NOTE:** When stopping the vehicle directly after performance driving, McLaren recommend that the ignition is not immediately switched off or parking brake applied. McLaren recommend that the engine is left to idle prior to the ignition being switched off.



**NOTE:** Please refer to your Service and Warranty Guide for track and competition use implications.

# Introduction

## Stored data

There are a number of components in your vehicle which collect data and store it temporarily or permanently. This technical data provides information relating to areas such as the condition of the vehicle, any events which have taken place and any malfunctions your vehicle may be experiencing or has experienced in the past.

These include, for example:

- operating conditions of system components, e.g. fluid levels.
- the vehicle's status messages and those of its individual components, e.g. 'Windscreen washer fluid low'.
- malfunctions and defects in important system components, e.g. 'Light switch fault'.
- vehicle reactions and operating conditions in special driving situations, e.g. air bag deployment.
- ambient conditions, e.g. outside temperature.

This data is of an exclusively technical nature and can be used to:

- assist in recognising and rectifying faults and defects.
- analyse vehicle functions, e.g. after an accident.
- optimise vehicle functions.

The data cannot be used to trace the vehicle's movements.

When your vehicle is serviced, technical information can be read from the vehicle including:

- repair service history.
- warranty events.
- quality assurance.

This information can be read by employees of the service network (including manufacturers) using special diagnostic testers. More detailed information can be obtained from it, if required.

After a fault has been rectified, the information is deleted from the fault memory or is continually overwritten.

When operating the vehicle, situations may occur where technical data, in connection with other information, could be traced to a person.

Examples include:

- accident reports.
- damage to the vehicle.
- witness statements.

McLaren will not access your behaviour related information about a crash event or share it with others except:

- with the consent of you or, if the vehicle is leased, of the lessee.
- in response to an official request of police or similar government office.
- as part of the manufacturer's defence in case of legal proceedings.
- as required by law.

In addition, McLaren may use the collected or received diagnostic data:

- for McLaren research needs.
- to make it available for research needs where appropriate confidentiality is maintained and need is shown.
- to share summary data which is not tied to a specific vehicle with other organisations for research purposes.

## Before You Drive

<b>Opening and Closing.....</b>	<b>1.02</b>
General.....	1.02
Opening a door.....	1.04
Locking a door.....	1.05
Mislock.....	1.06
Individual settings.....	1.07
Locking and unlocking from inside.....	1.07
Opening a door from inside.....	1.07
Closing a door.....	1.08
Automatic locking.....	1.09
Front luggage compartment.....	1.09
Rear luggage compartment.....	1.10
<b>Stowing Luggage.....</b>	<b>1.13</b>
Rear luggage compartment stowage.....	1.13
<b>Anti-Theft System.....</b>	<b>1.15</b>
Alarm system.....	1.15
Immobiliser.....	1.15
Tow-away protection.....	1.16
Interior motion sensor.....	1.16
<b>Seats.....</b>	<b>1.18</b>
Safety.....	1.18
Manual seats.....	1.19
Electric seats.....	1.20
<b>Steering Wheel and Steering Column.....</b>	<b>1.24</b>
Manual steering wheel adjustment.....	1.24
Electric steering wheel adjustment.....	1.24
Horn.....	1.26

<b>Occupant Safety.....</b>	<b>1.27</b>
Seat belts.....	1.27
Supplementary restraint system (SRS).....	1.29
Child passengers.....	1.33
<b>Mirrors.....</b>	<b>1.36</b>
Safety.....	1.36
Interior mirror.....	1.36
Exterior mirrors.....	1.36
<b>Lighting.....</b>	<b>1.38</b>
Exterior lighting.....	1.38
Light switch.....	1.38
Main beam headlamps.....	1.39
Headlamps.....	1.40
Daytime running lamps.....	1.40
Rear fog lamp.....	1.41
Direction indicators.....	1.41
Hazard warning lamps.....	1.42
Parking lights.....	1.43
<b>Washers and Wipers.....</b>	<b>1.44</b>
Windscreen wipers.....	1.44
<b>Vehicle Lift.....</b>	<b>1.46</b>
Vehicle lift.....	1.46

# Before You Drive

## Opening and Closing

### General

The vehicle can be unlocked or locked either by using the keyless entry feature, or by pressing the appropriate button on the key fob.


The keyless entry feature requires the key fob to be within 1.2 m (3 ft 11 in) of the sensors.

Provided that the engine is not running, the vehicle can be locked irrespective of the electrical status, see Vehicle electrical status, page 2.02.


### Keyless entry

Keyless entry allows the user to unlock and disarm the vehicle by simply opening the door when the key fob is within 1.2 m (3 ft 11 in) of the sensors. The key fob needs only to be on the user's person or in a non-metallic container such as a bag. It does not need to be exposed or handled.

Five sensors detect where the key fob is around the vehicle.

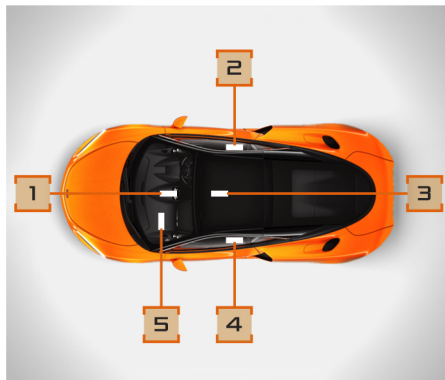

Right-hand drive models

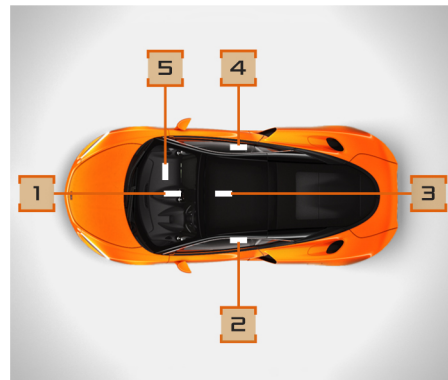

Left-hand drive models

1. Front in vehicle sensor
2. Driver's door sensor
3. Rear in vehicle sensor
4. Passenger's door sensor
5. Passenger's footwell sensor

### Key fob entry

Your McLaren includes two remote control key fobs. The key fob allows you to remotely lock and unlock the vehicle.



# Before You Drive

## Opening and Closing

**i** NOTE: To prevent theft, only use the key fob in the immediate vicinity of the vehicle.

The key fob locks and unlocks the following:

- The doors
- The front luggage compartment
- The rear luggage compartment
- The fuel filler flap
- The centre console stowage compartment
- The glove box



To unlock the vehicle, using the key fob, press the unlock button. The front, rear and side direction indicators (market specific) flash twice and the anti-theft alarm system will be deactivated.

The unlock button operation changes depending whether the **Driver's door** or **Both doors** is selected in the vehicle settings, see Security, page 4.16.

**⚠ WARNING: The key fob allows the engine to be started and is also used to activate other features on the vehicle. Take the key fob with you, every time you leave the vehicle.**

**i** NOTE: Do not expose the key fob to high levels of electromagnetic radiation. Doing so may cause it to function incorrectly. For example close proximity to laptops, tablets, personal media players, or mobile phones.

Unlock Button	Outcome
Single Press	If <b>Both doors</b> is selected, a single press of the button unlocks both doors.
	If <b>Driver's door</b> is selected, a single press of the button unlocks the driver's door. A second press (after a pause) unlocks the passenger's door.
Double Press	If <b>Both doors</b> is selected, a double press of the button unlocks both doors and unlatches the driver's door.
	If <b>Driver's door</b> is selected, a double press of the button will unlock and unlatch the driver's door only.

### Stowing the key fob

For security, it is recommended that the key fob stays on your person when you are in the vehicle. If, however, you wish to stow the key fob within the vehicle, ensure that it is not left in plain view.

## Before You Drive

### Opening and Closing


**i** NOTE: If the message 'Key not found within vehicle' appears on the Driver Display, reposition the key fob until it is detected.

**i** NOTE: Do not stow the key fob in the centre console stowage compartment, in the cup holders, in the stowage nets between the seats, in the door stowage compartments, or on the shelf immediately behind the seats as the system may not detect its presence and the engine will not start.

#### Discharged battery

If you experience a fully discharged battery, the vehicle can still be opened using the mechanical key, see Unlocking - discharged battery, page 6.26.

#### Opening a door

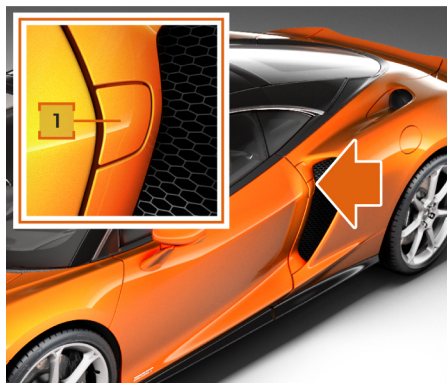

1. Press the front edge of door release handle (1) firmly to unlock and unlatch the door.

**i** NOTE: The keyless entry feature requires the key fob to be within 1.2 m (3 ft 11 in) of the sensors.

**⚠** **WARNING:** Always stand to the rear of the door before opening it, as the opening action may cause injury. The speed that the door opens will be affected by ambient temperature.

**i** NOTE: Because the door opens outwards and then upwards, ensure sufficient side and overhead clearance before opening a door, see Vehicle dimensions, page 7.05.

2. If keyless entry is used, the front, rear and side direction indicators (market specific) will flash twice, and the anti-theft alarm system will be deactivated.
3. The door latch will then release, the mirrors will unfold if folded and the door will be allowed to be partially raised before it automatically swings outwards and upwards.

**i** NOTE: When the door is opened, the window will lower slightly. It will raise to the closed position once the door is shut. If the window does not lower, for example, due to a discharged battery or freezing temperatures, take care when opening and closing the door. Do not force the door during opening or closing, as this could lead to the door seals or window becoming damaged.

## Before You Drive Opening and Closing

**i** NOTE: A sustained, long press and hold on the unlock button will automatically lower the windows. The windows will continue to lower until the unlock button is released or the windows reach a predetermined level. See Hot Evac, page 5.05.

**i** NOTE: If the vehicle is unlocked using the key fob but the doors or luggage compartments are not opened, the vehicle will relock after 30 seconds.

### Locking a door



1. Close the door. See Closing a door, page 1.08.
2. To lock the vehicle using the key fob, press the lock button. The front, rear and side direction indicators (market specific) flash in a rapid, circular sequence around the vehicle. The anti-theft alarm system is activated.



3. If using the keyless entry feature, press the touch sensitive switch (1) located within the side duct.

**i** NOTE: The keyless entry feature requires the key fob to be within 1.2 m (3 ft 11 in) of the sensors.

**i** NOTE: The lock switch will recognise a single press.

**i** NOTE: The lock switch is touch activated. There is no mechanical travel or audible feedback when pressed.

## Before You Drive

### Opening and Closing

**i** NOTE: A sustained, long press and hold on the lock switch will automatically raise the window(s). The window(s) will continue to raise until fully closed.

4. The direction indicators flash to indicate that the anti-theft alarm system is activated.

**i** NOTE: When the door is opened the door glass will lower slightly to avoid contact with other parts of the vehicle. When the door is closed the glass will raise to the closed position automatically. If for any reason the door glass does not raise it is likely that the system has sensed a "trap" event. This can be caused by debris in the glass channel or misalignment of the glass. Ensure there are no obvious signs of debris in the glass channel, and hold the lock button. The glass will raise providing the door is correctly closed and there are no obstructions preventing it raising. If the glass does not close, or the glass repeatedly fails to automatically raise, contact your McLaren retailer.

### Mislock



If either the doors, front luggage compartment or the tailgate are left open, or the key fob is still inside the vehicle, the horn will sound indicating mislock when an attempt to lock the vehicle is made.

Check that the doors, front luggage compartment and tailgate are all closed, then relock the vehicle.

**i** NOTE: The vehicle can be locked/alarmed with the front luggage compartment open. A long tone sounds to alert you to this condition, and differs to the short tone sounded for door open/key fob in vehicle mislock. The front luggage compartment will become alarmed as soon as the front luggage compartment lid is closed. This allows you to connect a McLaren supplied battery charger to the charging point in the front luggage compartment whilst leaving the rest of the vehicle locked.

## Before You Drive Opening and Closing

### Individual settings

If you frequently travel without passengers, you can change the locking system so that only the driver's door is unlocked, see Security, page 4.16.

If only the driver's door has been configured to unlock, the passenger's door can only be unlocked by either pulling the passenger's door internal handle, pressing the unlock button on the key fob again or by unlocking the vehicle from the central locking button located on the dashboard.

### Locking and unlocking from inside



1. Press the central locking button to lock the vehicle, the light in the button will illuminate to indicate that the vehicle is locked. A door can be opened from inside the vehicle.
2. Press the central locking button again to unlock the vehicle and the light in the button will be extinguished.

### Opening a door from inside

A door can be opened from inside the vehicle at any time, even if it has been locked. Open the doors only if the vehicle is stationary and road and traffic conditions permit.

**i** NOTE: Because the door opens outwards and then upwards, ensure sufficient side and overhead clearance before opening a door.



Pull door handle upwards, in direction of arrow, and push the door outwards until the opening mechanism takes over. The door will then swing outwards and upwards automatically.

## Before You Drive Opening and Closing

**i** NOTE: Unlocking the vehicle using the door handle while the key fob is not within the vehicle will activate the anti-theft system and may cause the alarm to sound.

### Closing a door


Push/pull the door downwards and ensure that it latches securely.

**⚠ WARNING:** Keep hands and other objects clear of the door edge when closing. This is particularly important for vehicles fitted with soft close latches as the door will automatically continue to the fully closed position when the first catch has engaged. There is no anti-trap feature preventing the door closing if an item or body part is trapped between the door and the door aperture, serious injury and vehicle damage may occur.

**i** NOTE: Do not force close the door, the door aperture or door seals could be damaged.

If the window does not close, this may be due to an anti-trap event. Try one of the following:

- Reopen and close door
- Lock vehicle using the lock switch in the side duct

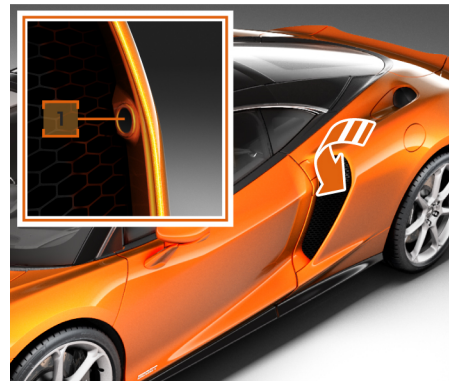

In the event of continuous anti-trap events, press the lock switch (1) for a few seconds. The window will continue to raise until you remove your finger from the lock switch. Only attempt this if the above methods do not resolve the problem.

**i** NOTE: Do not force the door closed, the door seals or window could be damaged.

## Before You Drive

### Opening and Closing

#### Automatic locking

The doors and the luggage compartments lock automatically after the vehicle has driven away.

- i** NOTE: The doors unlock automatically in an accident if the force of the impact exceeds a predetermined level.

The automatic locking function is selectable in the vehicle settings section of the Central Infotainment Touchscreen, see Automatic door locking, page 4.16.

If automatic locking is ON, the interior central locking button will illuminate once the vehicle locks on drive away.

#### Front luggage compartment

- !** **WARNING: Do not exceed luggage compartment maximum load. See Vehicle weights, page 7.07.**

- i** NOTE: The luggage compartments will only open if the vehicle is stationary and neutral is selected. A message will display on the Driver Display if the luggage compartment is open when pulling away.

- i** NOTE: When a luggage compartment is unlatched or open, gear selection will be inhibited. Press and hold D or R for 5 seconds to override this and select a gear if there is a need to manoeuvre the vehicle.

- !** **WARNING: Only manoeuvre the vehicle at low speed a luggage compartment is open or unlatched as the drivers' view may become obscured.**

#### Opening



Press the luggage release button on the key fob, the luggage compartment will fully unlock and open slightly.

## Before You Drive Opening and Closing



Alternatively, press the door button or dashboard button to fully unlock and slightly open the luggage compartment.

Lift the front of the luggage compartment lid, the gas struts will support it in the fully open position.

### Closing

Pull the luggage compartment lid down firmly and ensure that it is latched securely.

- i** **NOTE:** Do not leave the key fob in the luggage compartment, as the vehicle may lock, and you may be locked out of the vehicle.

- i** **NOTE:** If the vehicle had previously been locked, it will still be locked and the direction indicators will flash as the lid closes.

The luggage compartment will become alarmed as soon as the luggage compartment lid is closed.

- i** **NOTE:** The vehicle can be locked/alarmed with the luggage compartment open. This will allow you to charge the battery while leaving the rest of the vehicle locked. A long tone sounds to alert you to this.

### Rear luggage compartment

- !** **WARNING:** Do not exceed luggage compartment maximum load. See **Vehicle weights, page 7.07.**
- !** **WARNING:** Do not carry unsecured objects inside the vehicle. Occupants could be injured by objects being thrown around during sharp braking, a sudden change of direction or an accident. See **Luggage retention, page 1.13.**
- i** **NOTE:** The luggage compartments will only open if the vehicle is stationary and neutral is selected.  
A message will display on the Driver Display if the luggage compartment is open when pulling away.
- i** **NOTE:** When a luggage compartment is unlatched or open, gear selection will be inhibited. Press and hold D or R for 5 seconds to override this and select a gear if there is a need to manoeuvre the vehicle.



## Before You Drive Opening and Closing

**WARNING:** Only manoeuvre the vehicle at low speed if a luggage compartment is open or unlatched as the driver's view may become obscured.

**NOTE:** Ensure that there is sufficient overhead clearance before opening the tailgate.

### Opening



Press the luggage release button on the key fob, the luggage compartment will fully unlock and open slightly.

If your McLaren is equipped with a powered tailgate the tailgate will open automatically.



Alternatively, press the dashboard button to fully unlock and slightly open the luggage compartment.

Lift the rear of the tailgate, the gas struts will support it in the fully open position.

If your McLaren is equipped with a powered tailgate, the tailgate will open automatically.

### Closing



**WARNING:** Keep hands and other objects clear of the tailgate edge when closing. On vehicles fitted with power close functionality, the tailgate will automatically close and the anti-trap feature may not detect an object or body part preventing closure. Serious injury and damage to the vehicle may occur.


## Before You Drive


### Opening and Closing


**On vehicles fitted with soft close latches, the tailgate will automatically continue to the fully closed position when the first catch has engaged. There is no anti-trap feature preventing the tailgate from closing if an item or body part is trapped between the door and the door aperture, serious injury and vehicle damage may occur.**

If your McLaren is equipped with a powered tailgate, push the close button and the tailgate will close automatically.

Alternatively, pull the luggage compartment lid down firmly and ensure that it is latched securely.

 **NOTE:** Do not leave the key fob in the luggage compartment, as the vehicle may lock, and you may be locked out of the vehicle.

 **NOTE:** If the vehicle had previously been locked, it will still be locked and the direction indicators will flash as the tailgate closes.


 **NOTE:** The power close function can only be operated by the button on the tailgate.


The luggage compartment will become alarmed as soon as the tailgate is closed.


For more information about the rear luggage compartment, see Rear luggage compartment stowage, page 1.13.


## Before You Drive Stowing Luggage


### Rear luggage compartment stowage


 **WARNING:** Do not exceed the rear luggage compartment maximum load. See Vehicle weights, page 7.07.


 **WARNING:** The handling characteristics of the vehicle will change when the vehicle is loaded.

 **WARNING:** The handling characteristics of the vehicle will change if the load is not distributed evenly.

 **WARNING:** Large objects in the rear luggage compartment may obscure the drivers view, and prevent use of the rear view mirror.


 **WARNING:** Do not carry unsecured objects in the rear luggage area. Occupants could be injured by objects being thrown around during sharp braking, a sudden change of direction or an accident.

 **WARNING:** McLaren does not accept any responsibility for damage or injury caused by moving luggage in the event of a collision, regardless of whether or not a McLaren luggage retention product is used.

 **WARNING:** This vehicle is not designed to carry luggage anywhere outside the vehicle. McLaren accepts no responsibility for damage or injury caused by luggage being stowed outside the vehicle.

For more information about accessing the rear luggage compartment, see Rear luggage compartment, page 1.10 and Opening rear luggage compartment - discharged battery, page 6.31.

### Luggage retention

 **WARNING:** Each luggage retention point is designed for a maximum load of 15 kg. Ensure the appropriate number of luggage retention points are used, depending on the weight of your luggage.



There are two luggage retention points behind the front seats.

## Before You Drive Stowing Luggage



There are four folding luggage retention points in the rear luggage compartment.

Please contact your McLaren retailer for information on luggage retention products and the correct usage of luggage retention products.

# Before You Drive

## Anti-Theft System

### Alarm system

A visual and audible alarm is triggered if the alarm system is armed and any of the following are opened:

- A door
- The front luggage compartment lid
- The rear tailgate

**i** NOTE: The alarm remains triggered even if you close the open aperture. To silence the alarm, unlock the vehicle.

The alarm system also incorporates the following features:

- Tow-away protection
- Interior motion detection sensor
- Centre console stowage compartment status detection

**i** NOTE: The centre console stowage compartment must be closed for the interior motion sensor or the Auto Alarm to become armed.

### Arming the alarm system

Lock the vehicle (using the keyless system or the key fob). The anti-theft alarm system will be armed after approximately 5 seconds.



The light in the central locking button will illuminate for approximately 60 seconds after locking the vehicle, the light will continue to flash beyond this time.

### Disarming the alarm system

Unlock the vehicle (using the keyless system or the key fob), the alarm will disarm and the light in the central locking button will stop flashing.

### Immobiliser

The immobiliser prevents your McLaren from being started by an unauthorised person.

The vehicle is automatically immobilised when it senses that there is no key fob present in the vehicle.

Remobilisation occurs when a key fob is sensed inside the vehicle.

**i** NOTE: Immobilisation will only occur if the engine is not running.

## Before You Drive Anti-Theft System

### Tow-away protection

Tow-away protection is designed to prevent any attempt to steal the vehicle by suspended tow or lifting onto a trailer.

The alarm is triggered if the vehicle is raised or tilted in any way.

Tow-away protection is armed approximately 30 seconds after the vehicle has been locked and is disarmed when the vehicle is unlocked.

#### Disabling tow-away protection



1. To disable tow-away protection, switch off the ignition, open the driver's door and press the button on the rear edge of the driver's door. The light in the switch will illuminate to indicate that tow-away protection has been disabled.

**i** **NOTE: You cannot disable tow-away protection if the ignition is switched on.**

2. Close the driver's door and lock the vehicle (using the keyless system or the key fob). Tow-away protection remains disabled until you unlock the vehicle.

### Interior motion sensor

The alarm is triggered if your vehicle is locked and movement is detected inside, e.g. if someone breaks a window or reaches into the vehicle through an open window.

The interior motion sensor is armed approximately 30 seconds after the vehicle has been locked and is disarmed when the vehicle is unlocked.

**i** **NOTE: To prevent false alarms close the windows when leaving the vehicle and do not hang anything on the interior mirror.**

## Before You Drive Anti-Theft System

### Disabling the interior motion sensor



1. To disable the interior motion sensor, switch off the ignition, open the driver's door and press the button on the rear edge of the driver's door. The light in the switch will illuminate to indicate that the interior motion sensor has been disabled.

**i** NOTE: You cannot disable the interior motion sensor if the ignition is switched on.

2. Close the driver's door and lock the vehicle (using the keyless system or the key fob). The interior motion sensor remains disabled until you unlock the vehicle.

## Before You Drive Seats

### Safety




**WARNING:** Adjust the driver's seat when the vehicle is stationary. You may not be able to observe road and traffic conditions and you could lose control of the vehicle as a result of the seat moving. You could therefore cause an accident.



**WARNING:** The seats can be moved even without a key fob in the vehicle. Do not leave children unattended in the vehicle, they could be injured if a seat is moved accidentally.



**WARNING:** Ensure that no one can become trapped as the seat moves. To reduce the risk of injuries in the event of an accident, observe the following:

- All vehicle occupants must select a seat position that allows the seat belt to be worn correctly, but is as far away from the front air bags as possible. The position of the driver's seat must allow the driver to drive the vehicle safely. The distance from the driver's seat to the pedals must be such that the driver can fully depress the pedals. The distance between the driver's chest and the centre of the air bag cover must be more than 25 cm (10 in). The driver's arms should be slightly bent when holding the steering wheel.
  - Vehicle occupants must always wear their seat belt correctly.
  - Position the passenger's seat as far back as is comfortable.
-  **WARNING:** McLaren does not recommend the use of child seats in this vehicle, but if you choose to do so, please follow the guidelines below:
- Children under 1.5 m (4 ft 11 in) tall or younger than 12 years of age must be secured in a suitable child restraint. Please refer to current national and local laws for specific requirements.
  - If you are using a child restraint on the passenger's seat, move the seat as far back as possible.



# Before You Drive Seats

## Manual seats

Manual seat forward and rearward adjustment



Lift the lever, move the seat to the desired position and release the lever to lock the seat.

**WARNING:** Ensure the seat is locked in position before driving.

**NOTE:** Ensure that there are no items of luggage in the footwell or behind, underneath or to the side of the seats. This may lead to the seats being damaged.

Manual seat backrest rake adjustment

**WARNING:** To minimise the risk of injury, position the backrest as close as possible to vertical.

**NOTE:** Do not recline the seat backrest so that it repeatedly contacts the rear bulkhead as this could lead to damage over time.



Lift the lever, move the seat backrest to the position required, and release the lever.

Manual seat height adjustment



Press the switch up or down until the seat reaches the desired height.

**NOTE:** Height adjustment is only available on the driver's seat.

# Before You Drive Seats


## Electric seats

### Electric seat adjustment

The seat adjustment switches are on the side of the seat base and can be used when the vehicle is in any awake mode, see Vehicle electrical status, page 2.02.

**i** NOTE: Ensure there are no items of luggage in the footwell or behind, beneath or to the side of the seats, or the seats may be damaged.

### Forward and rearward adjustment

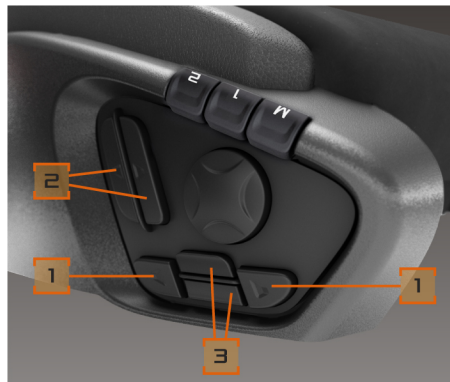


Press the switches (1) until the seat reaches the desired position.

### Electric seat backrest rake adjustment

**!** **WARNING:** To minimise the risk of injury, position the backrest as close as possible to vertical.

**i** NOTE: When reclining the backrest, the seat base will automatically move forward, depending on its position relative to the rear bulkhead. If the seat base is moved backwards when the backrest is fully reclined, the backrest will automatically raise to prevent contact with the rear bulkhead.

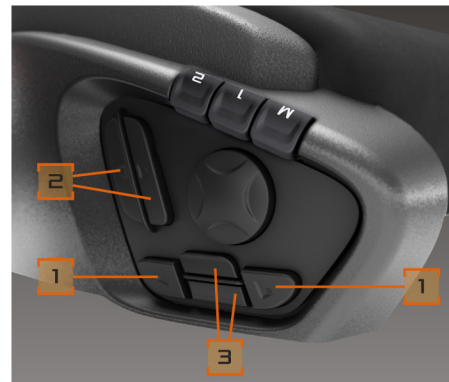

Press the switches (2) until the backrest is in the required position.

**!** **WARNING:** Ensure there are no items beneath the passenger's seat or the occupant classification system may not function correctly.


## Before You Drive Seats

### Electric seat height adjustment



Press the switches (3) until the seat reaches the desired height.

### Electric seat lumbar adjustment

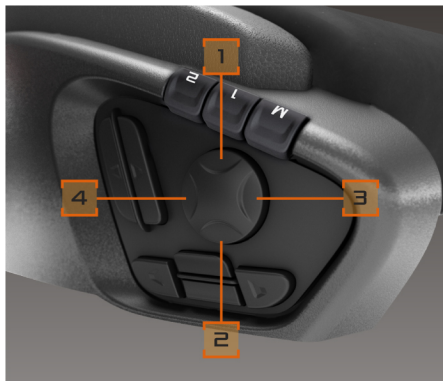

Press (1) to raise or (2) to lower the position of the lumbar support.

Press (3) to inflate or (4) to deflate the lumbar support.

### Storing a memory position

Specific seat, exterior mirror, and steering wheel positions can be stored for up to two drivers.

**i** NOTE: Exterior mirror and steering wheel positions can only be stored or recalled using the driver's memory buttons.

**i** NOTE: Steering wheel position can only be stored or recalled if an electric steering column is fitted.



Set the seat, mirrors, and steering wheel to the desired positions; see Electric steering wheel adjustment, page 1.24, Exterior mirrors, page 1.36.

Press and hold the memory set button (1) and then simultaneously press one of the memory position buttons (2) to store the setting.

## Before You Drive Seats

### Recalling a memory position

**WARNING:** Only recall a seat, mirror, and steering wheel position, when the vehicle is stationary. You may not be able to observe road and traffic conditions. This could lead you to lose control of the vehicle which may result in an accident.

**NOTE:** Exterior mirror and steering wheel positions can only be stored or recalled using the driver's memory buttons.

**NOTE:** Steering wheel position can only be stored or recalled if an electric steering column is fitted.



Press the button (2) where the required setting is stored, and hold until the seat, exterior mirrors and steering wheel have completed their adjustment.

### Comfort exit

**WARNING:** Ensure that no one can become trapped as the seat moves.

When comfort entry/exit is active, the driver's seat will move fully rearwards and to its lowest position and the steering wheel will move inwards and to its highest position when the engine is off and the driver's door is opened.

This assists exit from the vehicle. To switch the feature on or off, see Comfort Entry/Exit, page 4.11.

**NOTE:** The steering wheel will only change position if an electric steering column is fitted.

### Comfort entry

After entering the vehicle, you can return the driver's seat and steering wheel to their most recent position using the control stalk on the left of the steering column.


**NOTE:** The steering wheel will only change position if an electric steering column is fitted.

The function will only be available when 'Comfort Entry available Pull left stalk to activate Press OK to cancel' is displayed on the Driver Display.


The vehicle must be awake with ignition off, the driver's door closed, and comfort entry/exit ON.

1. Pull the control stalk towards you once to initiate the comfort entry function.
2. If at any point you wish to cancel the function, operate the control stalk or open the driver's door. A message 'Comfort Entry returning Operate stalk or open door to abort' will appear on the Driver Display.

## Before You Drive Seats

 **NOTE:** This function will only return the seat and steering wheel to the position they were in prior to the comfort entry/exit function being used. It will not use any of the memory positions, unless the previous position was one of the stored memory positions.

3. If the seat or steering wheel are manually adjusted before the stalk is used, the function will be lost and will not be available until the next time comfort entry/exit function is used.


 **NOTE:** Cancel the comfort entry/exit function by starting the engine, pressing a seat or steering column switch, or by operating the control stalk on the left of the steering column while the seat is returning to position.

4. If the comfort entry/exit function is cancelled, it will not be possible to return the seat and steering wheel to their previous positions using this function. The message on the Driver Display will disappear and the control stalk will return to its normal use. The function will be available when comfort entry/exit is next used.

5. Once the seat and steering wheel have returned to their previous positions, the message on the Driver Display will disappear and an audible alert will confirm that the process has been completed.

### Heated seats

Heated seats can be accessed using the climate control screen on the Central Infotainment Touchscreen. See Heated seats, page 5.10.

 **NOTE:** The heated seat function is only available when the engine is running.


## Before You Drive

### Steering Wheel and Steering Column

#### Manual steering wheel adjustment

**⚠ WARNING:** Only adjust the steering wheel position when the vehicle is stationary. You may not be able to observe road and traffic conditions. This could lead to you losing control of the vehicle which may result in an accident.

The steering wheel can be adjusted for height and reach.

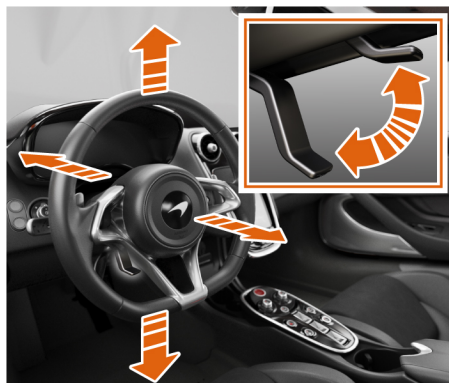

Push the lever (highlighted) downwards and position the steering wheel so that:

- your arms are slightly bent when you hold the wheel.
- you can move your legs freely.
- you can see all the information on the Driver Display clearly.

Pull the lever up to secure the steering wheel. Ensure the lever is locked before driving.

#### Electric steering wheel adjustment

**⚠ WARNING:** Only adjust the steering wheel position when the vehicle is stationary. You may not be able to observe road and traffic conditions. This could lead to you losing control of the vehicle which may result in an accident.

The steering wheel position may be adjusted for height and reach using the column control switch when the vehicle is in any awake mode, see Vehicle electrical status, page 2.02.

The column control switch is located on the left-hand side of the steering column.

## Before You Drive

### Steering Wheel and Steering Column



1. Height: Raise
2. Height: Lower
3. Reach: Away
4. Reach: Towards

Moving the column control switch in directions 1 & 2 adjusts the steering wheel height, raising or lowering the wheel's position.

Moving the column control switch in directions 3 & 4 adjusts the steering wheel reach, moving it closer or further away.

**i** NOTE: The column control switch will only adjust the steering wheel in one direction at a time.

Using the column control switch, position the steering wheel so that:

- your arms are slightly bent when you hold the wheel.
- you can move your legs freely.
- you can see all the information on the Driver Display clearly.

#### Automatic steering wheel adjustment

If your vehicle is equipped with electric seats, the electric steering wheel position is stored when the seat and mirror positions are stored. See Storing a memory position, page 1.21.

**!** **WARNING: Ensure that your hands are kept clear of the wheel and column as the steering wheel moves.**

**i** NOTE: Any automatic movement can be cancelled with any input from the column control switch.

#### Comfort entry/exit

When comfort entry/exit is active, the steering wheel and column will move fully inwards (away from the driver) and to its highest position when the engine is off and the driver's door is opened.

To switch the feature on or off, see Comfort Entry/Exit, page 4.11.

You can return the steering wheel and column to its most recent position using the control stalk on the left of the steering column. See Storing a memory position, page 1.21.

**!** **WARNING: Ensure that your hands are kept clear of the wheel and column as the steering wheel moves.**

**i** NOTE: Any automatic movement can be cancelled with any input from the column control switch.

## Before You Drive

# Steering Wheel and Steering Column

### Horn

Press the centre of the steering wheel to operate the horn.



NOTE: The horn can be operated when the ignition is switched off.




## Before You Drive

### Occupant Safety

#### Seat belts

Seat belts and child restraint systems are the most effective means of restraining vehicle occupants from impact forces, which minimises the danger of injury from interior impacts and the effects of whiplash.

 **WARNING:** A seat belt which is not worn, worn incorrectly, or has not been engaged fully in the seat belt buckle, cannot perform its intended function. To avoid injuries, ensure that all vehicle occupants wear their seat belt correctly at all times.

Ensure that the belt:

- is routed as low as possible across your pelvic area, i.e. across your hip joints and not across your abdomen.
- fits closely.
- is not twisted.
- is routed across the middle of your shoulder.
- lies flat across the mid point of the collar bone between the neck and shoulder.
- fits closely across your pelvis by pulling the shoulder belt upwards.

Do not secure any objects with a seat belt if the seat belt is being used by a vehicle occupant.

Avoid wearing bulky clothing.

Do not route the belt across sharp edged or fragile objects especially if these are on or in your clothing. The seat belt could be damaged and you could be injured.

Only one person should use each seat belt at any one time.

Never allow children to travel on the lap of another occupant.

Children under 1.5 m (4 ft 11 in) tall or younger than 12 years of age must be secured in a suitable child restraint. Follow the manufacturer's instructions when installing child restraint systems. Please refer to current national and local laws for specific requirements.



**WARNING:** Pregnant women should wear a seat belt to ensure maximum safety of mother and unborn child. Position the lap belt across the hips, beneath the abdomen and position the shoulder belt between the breasts and to the side of the abdomen. Ensure the belt is not slack or twisted.



**WARNING:** The seat belt only provides its intended degree of protection if the seat backrest is positioned close to vertical, and the occupant is sitting upright.



**WARNING:** The seat belt cannot perform its function correctly if the seat belt or buckle becomes excessively dirty or damaged. Ensure the belt latch engages the buckle fully.

Check the seat belts regularly to ensure that they are not damaged, or routed over sharp edges and are not trapped. The belt could tear in an accident, causing injury to occupants.

## Before You Drive Occupant Safety

**Have seat belts checked if the belts have been damaged or subjected to a heavy load. Work on the seat belts should only be carried out by your McLaren retailer.**

### Wearing a seat belt



1. Ensure that you are seated comfortably and the controls are within easy reach.
2. Grasp the seat belt latch and pull across the body, ensuring that the belt lies flat across the mid point of the collar bone between the neck and shoulder, then across the chest and pelvis.

3. With the belt correctly positioned insert the latch into the buckle and press until a click is heard to confirm engagement.

Check engagement by attempting to pull the latch from the buckle.

### Seat belt tensioners

The seat belts incorporate belt tensioners. Belt tensioners apply tension to the seat belts in an accident, pulling them tight against the occupant.

**WARNING:** Do not insert the belt latch into the passenger's seat belt buckle if the passenger's seat is unoccupied. The belt tensioners could be triggered in an accident.

**WARNING:** Belt tensioners do not correct an incorrect seating position or incorrectly worn seat belts. Belt tensioners do not pull occupants back towards the backrests.

The belt tensioner will be triggered for each seat belt, provided the belt latch is engaged in the seat belt buckle, if a head-on or rear-end collision occurs and the vehicle decelerates or accelerates rapidly.

If the belt tensioners are triggered, a bang will be heard, a small amount of dust may be released and the supplementary restraint system warning light will illuminate.

**WARNING:** Once triggered (or if you are unsure if they have triggered) you **MUST** not drive the vehicle. Contact your nearest McLaren retailer immediately.

### Belt force limiters

The seat belts incorporate belt force limiters. Belt force limiters are tuned to the front air bags and gradually release the tension being applied to the belts during an impact, reducing the force exerted on occupants.

### Seat belt warning light



The seat belt warning light on the Driver Display and a warning tone reminds vehicle occupants to fasten their seat belts. The seat belt warning light extinguishes and the warning tone ceases when the driver and passenger have fastened their seat belt.

# Before You Drive

## Occupant Safety

### Supplementary restraint system (SRS)

#### Air bag system

Your McLaren is equipped with the following air bags:

- Driver's front air bag in the steering wheel
- Passenger's front air bag in the upper area of the dashboard
- Side head air bags in the doors

**WARNING:** Correct operation of the air bags can only occur if the steering wheel, the passenger's air bag cover and the door trim are not covered.

**WARNING:** Air bags are not a substitute for correctly worn seat belts, they enhance the level of occupant protection offered by seat belts.

**WARNING:** To reduce the risk of injuries in the event of an accident, observe the following points:

- Ensure that the driver's chest is at least 25 cm (10 in) from the air bag cover.

- Do not lean forward over the dashboard while the vehicle is in motion.
- Do not rest your feet on the dashboard.
- Only hold the steering wheel by the outside of the rim. You could be injured if the air bag deploys and you are holding the inside of the steering wheel.
- Occupants, particularly children, must not lean on the doors from inside the vehicle.
- Ensure that there are no other objects between the vehicle occupants and the deployment area of the air bags.
- Because of the high speed at which air bags deploy, there is a risk of injuries caused by an inflating air bag.


#### Air bag replacement

**WARNING:** McLaren recommend that air bags are replaced every 15 years to prevent air bags from not firing due to component operating life.

#### Air bag system modification

If it is necessary to modify the air bag system to accommodate a person with disabilities, please contact your nearest McLaren retailer. For more information on McLaren retailers, please refer to your Service and Warranty Guide.

#### Front air bags

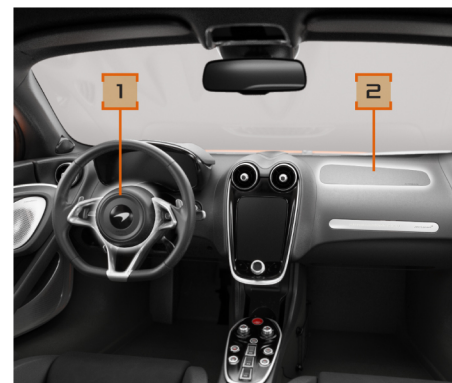

The driver's front air bag (1) deploys in front of the steering wheel and the passenger's front air bag (2) deploys in front of and above the dashboard.

## Before You Drive Occupant Safety

The front air bags are deployed if the system determines they can offer additional protection for occupants against head and chest injuries.

**i** NOTE: The passenger's front air bag is only deployed if the PASSENGER AIR BAG OFF warning light on the overhead console is NOT illuminated, see Occupant classification system - passenger's seat, page 1.30.

### Side head air bags

**⚠** WARNING: To reduce the risk of injury to occupants if a side head air bag is deployed, ensure that:

- there are no other objects between the vehicle occupants and the deployment area of the air bags.
- no accessories are attached to the doors.
- no heavy or sharp objects are left in the pockets of clothing.
- occupants, particularly children, must not lean on the doors from inside the vehicle.



The side head air bags are located in the upper area of each door panel, and are deployed if the system determines they can offer additional protection for the head of the occupant on the side of the vehicle on which the impact occurs.

**i** NOTE: The passenger's side head air bag is only deployed if the passenger's seat is occupied.

### Occupant classification system - passenger's seat

The system can determine if the passenger's seat is occupied using a capacitance mat fitted in the seat base, and by checking the seat belt buckle engagement on the passenger's seat belt. The system will deactivate the passenger's front air bag for children in child seats and unoccupied passenger's seat ensuring air bag deployment for adults.




The status of the air bags is indicated by the PASSENGER AIR BAG OFF warning light on the overhead console.


## Before You Drive Occupant Safety


The PASSENGER AIR BAG OFF warning light illuminates when the ignition is switched on and extinguishes after 5 seconds.


The warning light will remain illuminated if the passenger's seat is unoccupied or if a child seat is fitted.


 **NOTE:** The PASSENGER AIR BAG OFF warning light is always illuminated unless the passenger's seat is occupied by an adult.


If the PASSENGER AIR BAG OFF warning light is illuminated, the passenger's front air bag is not active. The side head air bag and the belt tensioner on the passenger's side remain active even if the PASSENGER AIR BAG OFF warning light is illuminated.

 **WARNING:** If the PASSENGER AIR BAG OFF warning light is not illuminated when the child seat is fitted, the passenger's air bag is not deactivated. The child could be seriously injured if the passenger's air bag inflates.


 **WARNING:** To ensure that the occupant classification system functions correctly, McLaren recommend that objects are not placed under a seat. McLaren also recommend that additional materials are not applied such as a blanket, cushion, or aftermarket equipment such as a seat cover, heater, or massager. These items can seriously affect how well the occupant classification system operates. McLaren recommend that aftermarket equipment such as covers, heaters, and massagers are NOT used.

 **WARNING:** Any electronic devices that are either active or connected to the 12 V accessory socket should not be placed on the passenger's seat. They can affect how the occupant classification system operates.

 **WARNING:** The occupant classification system may become affected if any form of liquid (inclusive of rain) is spilled onto the passenger's seat. If the PASSENGER AIR BAG OFF warning light is not illuminated when the seat is unoccupied, do not install a child restraint or allow anyone to occupy the seat. Please contact your nearest McLaren retailer at your earliest convenience.

 **WARNING:** Do not place sharp objects onto the passenger's seat. These may damage the occupant classification system if they puncture the seat cushion.

## Before You Drive Occupant Safety

 **WARNING: To ensure that the occupant classification system functions correctly, never place objects (e.g. a cushion) under the child restraint system. The entire base of the child restraint system must be in contact with the seat at all times. If a child restraint system is not fitted correctly it may not provide the intended degree of protection in the event of an accident and may cause injuries.**


### Air bag deployment


In the event of a collision, the air bags are deployed by the supplementary restraints system to protect the vehicle occupants. The system can control the number of air bags deployed and partially or fully inflate the air bags depending on the severity of the collision to provide the best possible protection to the vehicle occupants.

The system uses sensors to rapidly evaluate the collision severity and the number of vehicle occupants. Once all these factors are known, the system will then deploy the necessary air bags and regulate the inflation pressure in the impact zone to ensure the occupant's safety.

After an accident, the air bags begin to depressurise almost immediately after the inflation process has taken place. The gas used to inflate the air bags escapes through vents in the air bag and this helps reduce the occurrence of major impact injuries to the occupants.

An air bag slows down and restricts the movement of the vehicle occupant reducing the load on the body, but is not a substitute for a correctly worn seat belt.

 **WARNING: If the air bags are deployed, a bang will be heard and a small amount of fine powder may be released. The noise will not damage your hearing and the powder does not constitute a health hazard nor does it imply that a fire has broken out. This powder could cause short term breathing difficulties for persons suffering from asthma or other respiratory conditions. To prevent breathing difficulties, leave the vehicle as soon as possible or open a window.**

 **WARNING: After an air bag has been deployed, air bag parts are hot, do not touch them. Have the air bags replaced at your McLaren retailer.**

### Out of position (OOP)


The air bag system in your McLaren has been tested for the correct small child out of position (OOP) operation. OOP can occur if a small child is incorrectly positioned in the passenger's seat in the event of a collision in which the air bags are deployed.

### Supplementary restraint system (SRS) warning light



The supplementary restraint system performs a self-test at regular intervals when the ignition is switched on and the engine is running.

The warning light on the Driver Display illuminates when the ignition is switched on and extinguishes 5 seconds after the engine is started.

 **WARNING: Contact your McLaren retailer immediately should any of the following occur:**

- The warning light does not illuminate when you switch on the ignition
- The light does not extinguish 5 seconds after the engine is running
- The light illuminates again, after the engine has started

## Before You Drive Occupant Safety

### Safety features

If you are unfortunate enough to be involved in an accident, the following events will occur to assist you and any recovery personnel:

- The doors will unlock
- The hazard warning lights will switch on
- The interior lighting will switch on

In some instances, the fuel system will also be switched off.

### Child passengers



**WARNING: Do not leave children unsupervised in the vehicle even if they are secured in a child restraint. Children could injure themselves on parts of the vehicle, open a door and be seriously or even fatally harmed by prolonged exposure to heat or cold.**

**If children open a door, they could cause injury to others in doing so or get out of the vehicle and possibly injure themselves or they could be injured by a passing vehicle.**

**Do not expose the child restraint system to direct sunlight. The metal parts of the child restraint system could burn the child.**

**Do not carry heavy or hard objects inside the vehicle unless they are secured.**

**An unsecured or incorrectly positioned load increases the risk of injury to the child during sharp braking, a sudden change of direction or an accident.**

### Child restraint system

McLaren does not recommend the use of child seats in this vehicle, but if you choose to do so, please follow the guidelines below:

Secure any child under 1.5 m (4 ft 11 in) tall or younger than 12 years of age travelling in the vehicle in an appropriate category restraint according to their weight. Contact your McLaren retailer for advice.

Please refer to current national and local laws for specific requirements.



## Before You Drive Occupant Safety

**⚠ WARNING:** Never secure a rearward facing child restraint system on the passenger's seat if the passenger's front air bag is active. The status is indicated by the PASSENGER AIR BAG OFF indicator.



**⚠ WARNING:** If the PASSENGER AIR BAG OFF indicator does not illuminate, do not use a rearward facing child restraint system on the passenger seat. You may use a forward-facing child restraint system on the passenger's seat. The warning label on the passenger's side is there to remind you of this.

**⚠ WARNING:** If a forward facing child seat is fitted to the passenger's seat, make sure that the passenger's seat is fully rearwards and is positioned at the lowest height. A manual passenger's seat does not have height adjustment.

**⚠ WARNING:** If the child restraint system has not been fitted correctly, the child cannot be restrained in an accident or sudden braking and could be injured. When fitting a child restraint system, observe the manufacturer's instructions on the correct use of the child restraint.

### KISI child restraint function

Your McLaren is fitted with a KISI system which is an automatic locking seat belt on the passenger's side designed to temporarily lock the seat belt to securely hold the child restraint in the passenger's seat.

1. Extend the passenger's seat belt fully. The KISI system only engages when the seat belt is fully extended.


**i NOTE:** If the vehicle is parked on a hill, the inertia lock may prevent the seat belt from extending. If this occurs, release the seat belt slightly and continue to extend the seat belt carefully to avoid the engagement of the inertia lock.

2. Pass the seat belt through the child restraint as described by the child restraint manufacturer and engage the belt latch in the buckle.
3. Adjust the belt so that the lower section is tight against the restraint and allow the upper section to retract. The KISI system will click as the belt retracts.
4. When the seat belt has retracted as far as possible, pull on the upper section to check that the seat belt has locked.



## Before You Drive

### Occupant Safety

 NOTE: The KISI system will disengage when the seat belt has fully retracted and can then be worn as a normal seat belt. Once the KISI system has unlocked, it will be necessary to fully extend the seat belt to engage the KISI system the next time a child restraint is used.

## Before You Drive Mirrors

### Safety

 **WARNING:** Before driving, adjust all mirrors to give the best possible view of road and traffic conditions.

### Interior mirror




The automatic dimming function of the interior mirror is activated or deactivated by pressing the switch (2) on the bottom of the mirror. The indicator light (1) will illuminate when automatic dimming is active.

When activated, the interior mirror will automatically dim when bright light is detected by the light sensor (3).

If reverse gear is selected or if ambient light levels are high, the automatic dimming function will be deactivated.


### Exterior mirrors

 **WARNING:** In some markets, the exterior mirrors have convex glass fitted. This type of mirror enlarges the field of vision, but reduces the size of the image. This means that objects are closer than they appear. To avoid misjudging the distance to vehicles travelling behind and perhaps causing an accident, check the actual distance of the vehicle, before changing direction.

The exterior mirrors control is located on the dashboard between the steering wheel and the centre console.

## Before You Drive Mirrors

### Adjusting mirrors

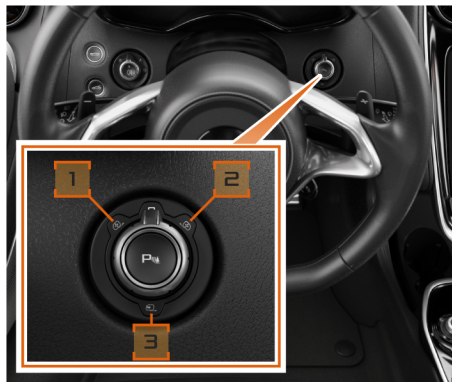

1. Switch the ignition on.
2. Rotate the control to the left (1) to adjust the left-hand mirror or to the right (2) to adjust the right-hand mirror.
3. Move the control up, down, left and right to adjust the mirror to the desired position.

### Exterior mirror fold

1. Switch the ignition on.
2. Rotate the control to position (3) to fold the mirrors.

3. To unfold the mirrors rotate the control away from position (3).

**i** NOTE: If the switch remains in position (3) the mirrors will be folded until the switch is moved.

### Exterior mirror automatic fold

The exterior mirrors can be set so that they fold automatically when the vehicle is locked. Unfolding occurs as a door is opened, not when the vehicle is unlocked. See Automatic Folding, page 4.11.

### Mirror dipping in reverse


The exterior mirrors can be set to dip when reverse is engaged. This provides a view of the ground to the rear of the vehicle. See Activation on Reverse, page 4.11.

### Heated mirrors


Exterior mirrors are heated when the heated rear window is in operation, and the engine is running. They are also heated when the ambient temperature is below 5°C (41°F). See Heated rear window, page 5.10.

# Before You Drive Lighting

## Exterior lighting

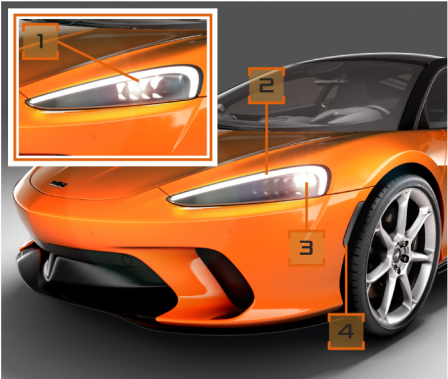

- 1. Headlamp main beam
- 2. Direction indicator/Daytime running lamp/Sidelamp
- 3. Headlamp dipped beam
- 4. Side direction indicator

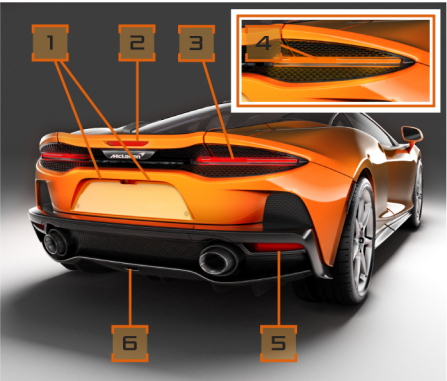


- 1. Licence plate lamp
- 2. Central high mounted stop lamp
- 3. Stop Lamp/Tail lamp
- 4. Direction indicator
- 5. Reflector
- 6. Reverse lamp and rear fog lamp

## Light switch

**⚠ WARNING:** The lights do not switch on automatically in foggy conditions. Automatic light control is only an aid, you are responsible for the vehicle's lighting at all times.

The light switch is located between the steering wheel and the driver's door and has the following positions.

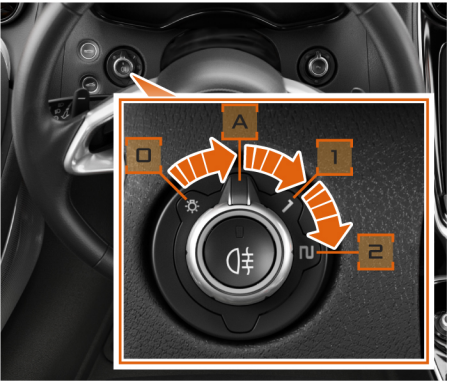

At position (0), the lights are off with the exception of daytime running lamps and tail lamps.

## Before You Drive Lighting

Rotate the control to position (A) for automatic light control.

Rotate the control to position (1) for sidelamps or position (2) for headlamps. The sidelamp warning light illuminates on the Driver Display.

### Automatic light control

The sidelamps and dipped beam headlamps are switched on automatically when ambient light falls below a predetermined level.

To switch on automatic light control, turn the light switch to position (A).

**i** NOTE: If the vehicle detects rain whilst the light switch is set to position (A) the dipped beam headlamps will switch on automatically, regardless of current external light levels.

**i** NOTE: With the light switch in position (A) and the rear fog lamp switched on, the dipped beam headlamps will also switch on irrespective of ambient light conditions. When the rear fog lamp is switched off, the dipped beam headlamps will also switch off dependent on ambient light conditions.

### Sidelamps

The sidelamps and the daytime running lamps are a combined series of light-emitting diodes located below the headlamp. The sidelamps operate at a lower intensity than the daytime running lamps, see Daytime running lamps, page 1.40.

The sidelamps, tail lamps and licence plate lamps illuminate when the light switch is turned to position (1).



The sidelamp notification light on the Driver Display illuminates.



NOTE: The dipped beam headlamps will also switch on automatically if ambient light falls below a predetermined level.

### Dipped beam headlamps

To switch on the headlamps, turn the light switch to (2).



The dipped beam notification light on the Driver Display illuminates.



NOTE: On your McLaren, the same headlamp dipped beam setting applies for driving on either the left-hand or right-hand side of the road.

### Main beam headlamps



To switch to main beam, push the stalk away from you.



The main beam headlamp notification light illuminates on the Driver Display.

Pull the stalk towards you, to revert to dipped beam.

### Headlamp flash

Pull the stalk fully towards you.

The main beam headlamps operate for as long as the stalk is held.

## Before You Drive Lighting



The main beam headlamp notification light illuminates on the Driver Display.

### Headlamps

#### Static Adaptive Headlamps



With the headlamps on, the Static Adaptive Headlamps adjust the beams when cornering, providing improved illumination in the direction of travel.

#### Motorway Function lighting

The Motorway Function lighting improves the headlamp illumination range when the vehicle speed exceeds a predetermined threshold.


### Daytime running lamps

Your McLaren is fitted with daytime running lamps which, along with the tail lamps, illuminate automatically when the ignition is switched on even if all lights are switched off. The sidelamps and the daytime running lamps are a combined series of light-emitting diodes located below the headlamp. The daytime running lamps operate at a higher intensity than the sidelamps.

## Before You Drive Lighting


### Rear fog lamp


 **WARNING:** The lights do not switch on automatically in foggy conditions.

 **NOTE:** The rear fog lamp only operates when the light switch is in position (A) or (2).



Press the rear fog lamp button in the centre of the light switch.

 The rear fog lamp notification light on the Driver Display and the light in the switch both illuminate.

 **NOTE:** With the light switch in position (A) and the rear fog lamp switched on, the dipped beam headlamps will also switch on irrespective of ambient light conditions. When the rear fog lamp is switched off, the dipped beam headlamps will also switch off dependent on ambient light conditions.

### Direction indicators



Push the direction indicator/main beam stalk downwards (1) to switch on the left-hand direction indicator.

Push the direction indicator/main beam stalk upwards (2) to switch on the right-hand direction indicator.



The corresponding notification light on the Driver Display will flash.

The stalk returns to its rest position as the steering wheel returns to its central position.

## Before You Drive Lighting

### Direction indicators - lane change

Move the direction indicator/main beam stalk until resistance is felt when changing lanes on a motorway. The appropriate direction indicator flashes three times.

For further information about the lighting see Light switch, page 1.38.

### Hazard warning lamps

The hazard warning lamps operate even if the ignition is switched off. As a safety feature, they switch on automatically when an air bag is deployed.

#### Operating the hazard warning lamps



1. Press the hazard warning lamps button.
2. All the direction indicator lamps and both direction indicator warning lights on the Driver Display flash.
3. Press the hazard warning lamps button again to switch off.

**i** **NOTE:** If the hazard warning lamps have been switched on automatically, press the hazard warning lamps button once to switch them off.

### Panic alarm

The panic alarm function is designed to attract attention by sounding the horn and flashing the direction indicator lamps repeatedly.

The panic alarm can be switched on by pressing the hazard warning lamps button for a period of 3 seconds or more.

The horn will cease after the panic alarm has been active for 60 seconds, but the direction indicator lamps will continue to flash. The horn can be re-initiated by pressing the hazard warning lamps button for a period of 3 seconds or more.

To switch the panic alarm off, press the hazard warning lamps button briefly.



## Before You Drive Lighting

### Parking lights




**i** NOTE: The parking lights can only be activated when the ignition is switched off.

1. To activate the parking lights, press the direction indicator/main beam stalk down for the left-hand side or push up for the right-hand side until resistance is felt. The selected parking lights will illuminate once the vehicle has been locked.
2. To deactivate the parking lights, press the direction indicator/main beam stalk down for the left-hand side or push up for the right-hand side until resistance is felt. The selected parking lights will then be deactivated.

**i** NOTE: To activate the parking lights on both sides, press the direction indicator/main beam stalk down then up. To deactivate, press the direction indicator/main beam stalk down then up again.

# Before You Drive Washers and Wipers

## Windscreen wipers

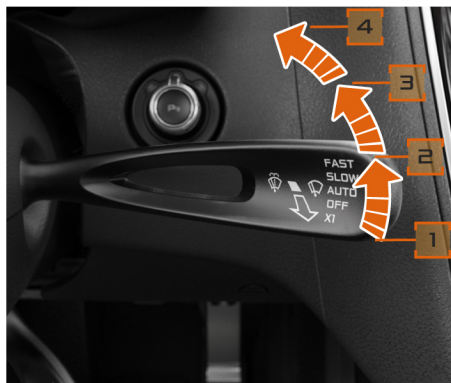

1. Windscreen wipers off
2. Automatic wipe
3. Slow wipe
4. Fast wipe

**i** NOTE: Switch off the windscreen wipers in dry weather, dirt can cause inadvertent wiper sweeps which could damage the wiper blades or windscreen.

## Operating the windscreen wipers

1. Ensure the ignition is switched on.
2. Move the wiper stalk to the required position.

**i** NOTE: If the windscreen wipers are switched on and the vehicle comes to a halt, the windscreen wipers automatically switch to intermittent wipe, until the vehicle moves away.

## Automatic wipe

A rain sensor, located on the windscreen behind the interior mirror, measures the quantity of water on the windscreen and operates the wipers at the most appropriate speed.

To select, move the windscreen wiper stalk to the automatic wipe position (2).

The wipers will wipe once. The wipe frequency then depends on how wet the windscreen is.

Only select the automatic wipe position in damp weather conditions or when it is raining.

To adjust the sensitivity of the rain sensor, see Wiper sensitivity, page 4.11.

## Slow wipe

Move the wiper stalk to position (3), to operate the wipers at slow speed.

Return the stalk to position (1) to switch off.

## Fast wipe

Move the wiper stalk to position (4), to operate the wipers at fast speed.

Return the stalk to position (1) to switch off.

## Single wipe



## Before You Drive Washers and Wipers

1. For a slow single wipe, briefly push the wiper stalk down and release. The wipers will operate once at slow speed, without washers.
2. For a fast single wipe, push and hold the wiper stalk down. The windscreen wipers will perform a continuous fast wipe until the stalk is released.

### Windscreen wash/wipe



Pull the wiper stalk towards you.

The windscreen washers and wipers will initially operate at a slow speed while the stalk is held. If the stalk is held for more than 2 seconds, the wiper will operate at high speed.

When the stalk is released, the wipers will complete their cycle and return to the parked position. After a period of time the wipers will operate once more to wipe any remaining washer fluid from the windscreen.

**i** **NOTE:** The position of the washer jets are set during vehicle manufacture and should not need adjusting. If a problem occurs, consult your McLaren retailer.

### Wiper park positions

In addition to the normal park position, there are two alternative positions.

Ensure the vehicle is in Locked, Sleep or Awake mode.

Pull the wiper control stalk towards you, the wipers will move through the following park positions each time the stalk is pulled:

### Winter park

The wipers are parked vertically to reduce the risk of damage to the wiper arms during periods of heavy snowfall and provide access for easier cleaning of accumulated snow.

### Service park

The wipers are parked diagonally to provide access for replacing the wiper blades, see Replacing the wiper blades, page 6.34.

### Normal park

The wipers are parked horizontally along the lower edge of the windscreen.

# Before You Drive

## Vehicle Lift

### Vehicle lift

- i** **NOTE:** If the vehicle lift icon on the Driver Display is amber, or a vehicle lift fault message appears on the Driver Display, the system is not available. Do not drive the vehicle at high speed and contact your McLaren Retailer as soon as possible.

The vehicle lift menu offers the following options:

- Vehicle lift - Raise, page 1.47
- Vehicle lift - Lower, page 1.47

Vehicle lift gives you the option to raise or lower the vehicle dependent on the current ride height.

Vehicle ride height can only be raised when travelling at speeds below 31 mph (50 km/h). The vehicle will automatically lower at speeds above 37 mph (60 km/h).

- i** **NOTE:** The suspension can be left fully raised for extended periods, but it may relax to a lower level over time.

If the vehicle is left in a raised position for a long period, a system reset may occur when the engine is next started to return the vehicle to normal ride height.

If vehicle lift is used when in motion, slight adjustments to the steering feel may be experienced, this is normal and does not affect the operation of the vehicle.

- i** **NOTE:** Vehicle handling modes are inhibited when vehicle lift is lowering or raising.
- i** **NOTE:** Vehicle lift will be unavailable if launch mode is active.
- i** **NOTE:** Vehicle lift is only available when the engine is running.
- i** **NOTE:** If vehicle lift is requested while the engine has been stopped by the Eco Start-Stop System, the engine will be automatically restarted.

### Vehicle lift operation



Access to vehicle lift is obtained by pressing the button on the control stalk on the right of the steering column, whenever the engine is running and the doors are closed.

A confirmation tone will be heard when vehicle lift is activated.

- i** **NOTE:** Vehicle lift is only available when the engine is running.
- i** **NOTE:** If vehicle lift is requested while the engine has been stopped by the Eco Start-Stop System, the engine will be automatically restarted.

## Before You Drive Vehicle Lift

**i** NOTE: Vehicle handling modes are inhibited when vehicle lift is lowering or raising.

**i** NOTE: Vehicle lift will be unavailable if launch mode is active.

The vehicle lift menu will exit after the timeout duration has been exceeded if there is no activity on the menu.

### Vehicle lift - Raise

**!** **WARNING: On no occasion should vehicle lift be used as a jacking system. Using vehicle lift to access below the vehicle may result in serious injury.**

**i** NOTE: When the vehicle is at normal ride height, you will only have the option to raise the vehicle.

**i** NOTE: Vehicle lift will be delayed if the vehicle experiences any excessive steering wheel input.

**i** NOTE: Always check the vehicle lift icon on the display before driving your vehicle.



Before vehicle lift can be activated, the engine must be running. To raise the vehicle, activate the vehicle lift menu (see Vehicle lift operation, page 1.46) and then move the control stalk upwards.



The change in vehicle ride height is confirmed by an ascending audible tone. 'Vehicle raising' appears on the Driver Display and the vehicle lift icon will illuminate.

If the engine is stopped while the vehicle is raising, the system will stop and continue to raise only when the engine is restarted.

To change from raise to lower, move the control stalk downwards. The vehicle will start to lower, and the information displayed on the Driver Display will confirm the change.

When the vehicle is fully raised, an audible confirmation tone is heard. 'Ride height raised' appears on the Driver Display and the vehicle lift icon is illuminated while the vehicle remains raised.

If there is no further activity, the vehicle lift menu will exit after the timeout duration has been exceeded.


### Vehicle lift - Lower

**i** NOTE: To lower the vehicle while stationary, the engine must be running and the driver's door must be fully closed.

**i** NOTE: When the vehicle is raised, you will only have the option to lower the vehicle.


**i** NOTE: Do not drive at high speed whilst the vehicle is lowering. If the vehicle begins to auto lower, a descending audible tone is heard, and the vehicle lift menu will be displayed on the Driver Display allowing you control of the system.

## Before You Drive Vehicle Lift

 **NOTE:** Always check the vehicle lift icon on the Driver Display before driving your vehicle.



To lower the vehicle, activate the vehicle lift menu (see Vehicle lift operation, page 1.46) and then move the menu control stalk downwards.

 The change in vehicle ride height is confirmed by a descending audible tone. 'Vehicle lowering' appears on the Driver Display and the screen vehicle lowering icon will illuminate.

To change from lower to raise, move the control stalk upwards. The vehicle will start to raise, and the information displayed on the Driver Display will confirm the change.

When the vehicle is lowered, an audible confirmation tone is heard. 'Ride height normal' appears on the Driver Display and the vehicle lift icon extinguishes.

If there is no further activity, the vehicle lift menu will exit after the timeout duration has been exceeded.







## Driving Controls

### Starting and Driving.....2.02

Vehicle electrical status.....	2.02
Switching on the ignition.....	2.03
Instruments and warning lights.....	2.03
Seamless shift gearbox gear positions.....	2.06
Parking brake.....	2.06
Brake pedal.....	2.08
Starting/stopping the engine.....	2.08
Driving.....	2.10
Exhaust temperature monitoring.....	2.12
Parking sensors.....	2.12
Rear view camera (RVC).....	2.14

### Seamless Shift Gearbox.....2.15

Overview.....	2.15
Gear positions.....	2.15
Accelerator pedal position.....	2.16
Manual/automatic mode.....	2.17

### Handling and Powertrain Controls.....2.20

Active dynamics control.....	2.20
Active button.....	2.20
Handling control.....	2.21
Powertrain control.....	2.22
Launch control.....	2.25

### Driving Safety Systems.....2.27

General.....	2.27
Anti-lock braking system (ABS).....	2.27
Brake assist system.....	2.28
Brake disc wiping.....	2.28

Hill hold control.....	2.29
Brake-steer.....	2.29
Electronic brake pre-fill.....	2.29
Electronic stability control (ESC).....	2.30
Tyre pressure monitoring system (TPMS).....	2.32

### Cruise Control.....2.35

Overview.....	2.35
Using cruise control.....	2.35
Cancelling cruise control.....	2.36
Increasing cruise control speed.....	2.37
Reducing cruise control speed.....	2.37
Resuming a stored speed.....	2.38

### Active Speed Limiter (ASL).....2.39

Setting an upper speed limit.....	2.39
Cancelling Active Speed Limiter (ASL).....	2.40

### Running In.....2.41

Running in.....	2.41
Normal/road use.....	2.41
Track use.....	2.42

### Refuelling.....2.43

Filling with fuel.....	2.43
Recommended fuel.....	2.44

### Winter Driving.....2.46

Winter driving.....	2.46
---------------------	------

# Driving Controls

## Starting and Driving

### Vehicle electrical status

The vehicle will implement one of the following statuses according to the criteria detailed.

**i** NOTE: The engine can be started from any of the following states, except Locked. If the vehicle is in Sleep mode, the START/STOP button will need to be pressed for more than 2 seconds.

**i** NOTE: If the vehicle detects the battery charge is getting too low, it will adopt the Awake mode to conserve energy. Ignition will be prohibited, but Crank will still be available. This is to allow the engine to be started so that battery recharging can commence.

#### Locked

Vehicle is locked in low power mode.

#### Sleep

Vehicle is unlocked in low power mode.

#### Awake

Door is opened or START/STOP button pressed, when the vehicle is in Sleep mode.

Time, odometer reading, battery status and fuel gauge are available on the Driver Display.

If there is no further activity after 60 seconds, the vehicle will return to the Sleep mode.

#### Ignition

START/STOP button is pressed, when the vehicle is in Awake mode.

Windows and heater/air conditioning controls operate. Driver Display menus and McLaren Infotainment System (MIS) are available.

**i** NOTE: There is no timeout with ignition on. Be aware that the battery could become discharged.

#### Crank

See Starting/stopping the engine, page 2.08.

#### Power saving mode

Under very rare circumstances, the vehicle may not be able to supply enough voltage and will activate power saving mode.

**⚠ WARNING: When power saving mode is active, the climate control and steering will operate with reduced effect.**

**i** NOTE: When power saving mode is active, the message 'Battery management active - See owner's manual' appears on the Driver Display.

#### Parking days



When the vehicle is in Awake mode the number of "days parking" remaining will be displayed on the Driver Display. This indicates how many days the vehicle can be parked, without running the engine or connecting a battery charger, before the battery will become discharged.

# Driving Controls

## Starting and Driving

### Switching on the ignition



1. Ensure that the key fob is inside the vehicle.
2. To switch on the ignition without starting the engine, press the START/STOP button, without depressing the brake pedal.

**i** NOTE: If the vehicle is in Awake mode, press the START/STOP button twice with the brake pedal released.

3. The ignition will switch on, the oil temperature, water temperature and fuel gauges will operate and several of the warning lights will illuminate as a self-test. The Driver Display will fully illuminate.

### Instruments and warning lights

Warning lights can be divided into different categories, according to the colour that they illuminate.








- RED or AMBER warning light - indicates that a fault has been detected. A fault indicated by a RED light is more important than one displayed in AMBER.
- BLUE or GREEN notification light - indicates that a system or feature is switched on and operating.




### Warning lights


	Tyre pressure monitoring system (TPMS), page 2.32
	Seat belts, page 1.27
	Rear fog lamp, page 1.41
	Supplementary restraint system (SRS), page 1.29

## Driving Controls





### Starting and Driving

	Electronic stability control (ESC), page 2.30
	Driving, page 2.10
	Anti-lock braking system (ABS), page 2.27
	Brake pedal, page 2.08 Parking brake, page 2.06
	Low oil pressure warning light. If this illuminates, stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.
	Engine coolant hot warning light. If this illuminates, stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.
	No charge warning light. If this illuminates, stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.

	Electronic stability control system failure warning light. If this illuminates, adapt your driving style while the fault exists. Contact your McLaren retailer.
	Low fuel level warning light. If this illuminates, refuel your vehicle at the soonest opportunity. See Filling with fuel, page 2.43
	Generic failure warning light. A message will be shown on the Driver Display when this is illuminated, stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.

	Generic failure caution light. A message will be shown on the Driver Display when this is illuminated, stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.
---	--

#### Notification lights

	Direction indicators, page 1.41
	Main beam headlamps, page 1.39
	Light switch, page 1.38
	Light switch, page 1.38

## Driving Controls

### Starting and Driving




Direction indicators, page 1.41

#### Driver Display overview



1. Tachometer, page 3.02
2. Speedometer, page 3.03

#### Driver Display - left-hand side

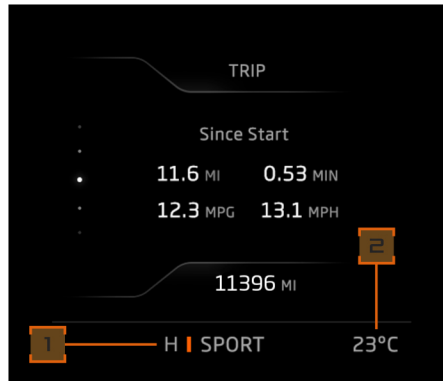

The Driver Display provides important information to the driver and will vary depending on the mode and vehicle settings selected.

1. Handling control, page 2.21
2. Outside air temperature




Use the control stalk to navigate through the menus.

## Driving Controls

### Starting and Driving

Driver Display - right-hand side

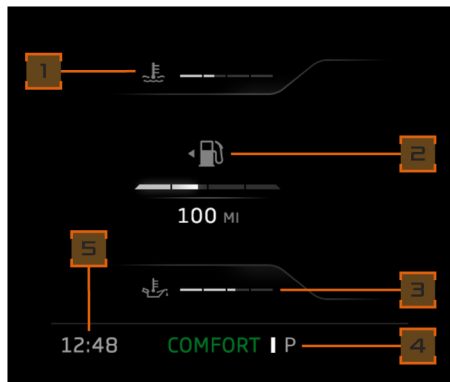

1. Water temperature, page 3.19
2. Fuel level and range, page 3.20
3. Oil temperature, page 3.19
4. Powertrain control, page 2.22
5. Time

### Seamless shift gearbox gear positions

The gearbox operates in either automatic or manual mode. Automatic mode is selected unless the driver chooses manual mode, see Gear positions, page 2.15 and Manual/automatic mode, page 2.17. If manual mode is active, gear changes are made using the gearshift paddles, see Gearshift paddles, page 2.18.

### Parking brake

**i** NOTE: When parking on steep downhill slopes, turn the front wheels towards the kerb. When parking on steep uphill slopes, turn the front wheels away from the kerb.

### Parking brake status

**!** If the parking brake applied status light is flashing, the parking brake has failed to engage/disengage. To resolve, engage/disengage the parking brake again. See Parking brake operation, page 2.07.

## Driving Controls

### Starting and Driving

#### Parking brake operation



To engage the parking brake, pull the switch outwards, the red parking brake applied status light on the Driver Display illuminates.

- i** NOTE: The parking brake on your vehicle is electronic and only a light application of the switch is required to engage or disengage the parking brake.



To disengage the parking brake, keep the brake pedal depressed and push the parking brake switch inwards, the red parking brake applied status light on the Driver Display extinguishes.

**⚠ WARNING: If the parking brake is manually released, the vehicle may start to move.**

- i** NOTE: If the parking brake is not manually released, it will automatically release as the vehicle is driven off forward, or in reverse as long as the following conditions are met:
  - Driver's door is closed

- Driver's seat belt is buckled

- i** NOTE: If the parking brake is not manually applied it will automatically apply when the engine is switched off.
- i** NOTE: It is only possible to disengage the parking brake with the ignition on. The parking brake can be applied in all ignition states, including vehicle asleep.
- i** NOTE: In the event of total footbrake failure, the parking brake can be applied when the vehicle is moving to slow the vehicle.

## Driving Controls

### Starting and Driving

#### Brake pedal

**⚠ WARNING:** Do not keep any objects in the driver's footwell. Ensure that floor mats or carpets are properly secured and do not obstruct the pedals.

If objects become trapped between the pedals, you may not be able to brake or accelerate, and this could lead to an accident.

**⚠ WARNING:** The braking system is servo assisted when the engine is running. The brakes will still function with the engine off, but more pressure will be required to operate them.

**⚠ WARNING:** Do not rest your foot on the brake pedal while travelling as this may overheat the brakes, reduce their efficiency and cause excessive wear.

**⚠ WARNING:** If the brake warning light illuminates while the vehicle is in motion, stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.

#### Brake discs and pads

**⚠ WARNING:** New brake pads require a period of bedding in. For the first 625 miles (1,000 km), avoid situations where heavy braking is required.

Brake disc and pad wear depends on the driving style and driving conditions.

#### Brake warning light

**⚠** The brake warning light will illuminate when the ignition is switched on as a system test. If the brake warning light illuminates at any other time, a fault is indicated. Stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.

#### Starting/stopping the engine

**⚠ WARNING:** Never run the engine when the vehicle is in an enclosed space. Exhaust fumes contain poisonous carbon monoxide. Breathing exhaust fumes could lead to unconsciousness and death.

**i NOTE:** Do not depress the accelerator pedal when starting the engine.

#### Starting the engine

1. Ensure that the key fob is in the vehicle.





## Driving Controls

### Starting and Driving

- Depress the brake pedal, press and release the **START/STOP** button and the engine will start.
- If the **START/STOP** button is pressed again while the engine is cranking, cranking is stopped.

#### Stopping the engine

- Depress the brake pedal.
- Select neutral.



- Press the **START/STOP** button. The engine stops, the vehicle enters Awake mode, see Vehicle electrical status, page 2.02. The immobiliser is activated.

**i** **NOTE:** The parking brake will apply automatically when the engine is stopped. Automatic application can be overridden by holding the parking brake switch in the off position whilst opening the driver's door.


#### Eco Start-Stop system

This system automatically stops the engine when conditions allow in order to reduce fuel consumption and exhaust gas emissions and restarts it again when required.

The following conditions must be met for the system to automatically stop the engine:

- Driver is detected as present
- Driving speed exceeded 6 mph (10 km/h) since previous stop
- Engine at normal operating temperature
- Vehicle battery fully charged
- Air conditioning demand not too high
- Comfort Powertrain mode active

#### System operation

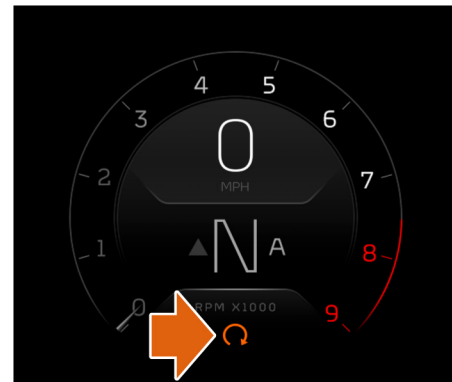

At very low speeds a status icon will be shown on the Driver Display.

The icon will illuminate amber if conditions have not been met and the system is not available.

If all conditions have been met and the system is available, the icon will illuminate green.

The system will automatically stop the engine when the brake pedal is depressed and the vehicle slows to a complete stop.

The message 'ENGINE STOPPED' will be shown on the Driver Display.

## Driving Controls

### Starting and Driving

The engine will automatically restart when the brake pedal is released or any conditions that require the engine to restart are detected.

**i** NOTE: If the parking brake is engaged while the engine is stopped, the engine will not restart when the brake pedal is released.

Depress the brake pedal, disengage the parking brake and then release the brake pedal in order to initiate the automatic restart.

**i** NOTE: The engine may automatically re-start before the brake pedal is released in order to maintain electrical, air conditioning or other vehicle demand.

#### Deactivating



Press the Eco Start-Stop system OFF button to deactivate the system. The light in the button will illuminate and the status light on the Driver Display will be extinguished.

Press the button again to activate the system.

**i** NOTE: If the Eco Start-Stop system OFF button is pressed when the engine has been automatically stopped, the engine will re-start.

**i** NOTE: The system is active by default when the ignition is switched on, even if it has been previously deactivated.

#### Driving

##### Driving away

**⚠** **WARNING:** Never turn the engine off while driving, there will be no assistance for the steering or the foot brake. You will need more effort to steer and brake and could lose control of the vehicle and cause an accident.

**i** NOTE: Do not drive at high engine speeds until the engine has reached normal operating temperature.

**i** NOTE: The doors will lock when the vehicle reaches a speed of approximately 9 mph (15 km/h). Auto lock can be set on the Central Display, see Automatic door locking, page 4.16.

**i** NOTE: During extensive parking manoeuvres the steering assistance might feel slightly stiffer. This is normal and designed to protect the steering system from overheating.

## Driving Controls

### Starting and Driving

**i** NOTE: When starting from cold, engine idle speed may be increased and gear changes may occur at higher engine speeds. The catalytic converter will reach its operating temperature quicker and reduce engine emissions.

1. With the engine running, press and hold the brake pedal.
2. Select drive or reverse gear, or initiate an upshift by operating the gearshift paddles. For more information, see Gearshift paddles, page 2.18 and Gear positions, page 2.15.
3. Keep the brake pedal depressed and release the parking brake switch. The red status light on the Driver Display will be extinguished.

**!** **WARNING: If the parking brake is manually released, the vehicle may start to move.**

**i** NOTE: If the parking brake is not manually released, it will automatically release as the vehicle is driven off forward, or in reverse as long as the following conditions are met:

- All doors are closed

- Driver's seat belt is buckled

4. Carefully depress the accelerator pedal.

#### Engine warning light



This engine warning light illuminates when the ignition is on and extinguishes as soon as the engine is started, provided no faults exist.

If the light illuminates while driving, an engine management fault has been detected and reduced engine performance may be experienced. Stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.

#### Limhome mode

Limhome mode activates automatically when vehicle systems detect a fault which may cause further damage unless vehicle or system performance is restricted. Care should be taken while driving in this mode. Contact your McLaren retailer immediately.

#### Economical driving

Improved fuel economy can be achieved by following this advice:

- Accelerate smoothly and gently from a standing start.
- When in manual mode, avoid high engine rpm by changing to a higher gear as soon as possible.



The gear shift indicator (GSI) will illuminate when an upshift would maintain optimum economy.

**i** NOTE: Not available in all markets, consult your McLaren retailer.

- Avoid labouring or over-revving the engine.
- Switch off the air conditioning when it is not needed.
- Avoid journeys where frequent stop/start driving is involved.
- Ensure that your driving style suits the prevailing road and traffic conditions; allow time for smooth, progressive acceleration and braking.

## Driving Controls

### Starting and Driving

#### Exhaust temperature monitoring

The vehicle continuously monitors exhaust temperatures to protect the catalytic converters from damage caused by overheating.

If excessive exhaust temperatures are measured, a warning will be displayed on the Driver Display.

The vehicle speed should be reduced as soon as this message is observed. Refrain from manoeuvres involving high engine speed and high engine load (full throttle) to allow the exhaust to cool. The message will remain until the temperature has reduced.

If the exhaust temperature remains at an excessive level, a second warning is displayed and limphome mode is activated. The engine performance will remain limited until the vehicle is restarted.

**i** **NOTE:** Catalytic converter over temperature warnings are not likely to be observed during normal driving and are the result of extreme operating conditions. For example, high exhaust temperatures can be caused by extended track driving, maintaining high engine speed for long durations, and sudden and repeated changes in throttle demand.

**i** **NOTE:** High exhaust temperatures can cause damage to catalytic converters and should be avoided by practicing careful driving.

If the warnings persist, contact your McLaren retailer.

#### Parking sensors



The parking sensors alert the driver to any obstructions while manoeuvring at low speeds. The system comprises four ultrasonic sensors in the front bumper, four ultrasonic sensors in the rear bumper and two sounders. Each sounder has a different pitch to indicate whether the obstruction is at the front or the rear of the vehicle.

## Driving Controls

### Starting and Driving

The front parking sensors are automatically switched on when the engine is running and drive is selected. The rear parking sensors are switched on when reverse gear is selected. The light around the parking sensors button will illuminate amber to indicate that parking sensors are active.

Front parking sensors can be activated when the vehicle is in neutral and the system is manually turned on.

The centre sensors on the front bumper have a range of approximately 1 m (3 ft). The centre sensors in the rear bumper have a range of approximately 1.5 m (5 ft).

An intermittent tone is heard when an obstruction is within range. As the vehicle moves closer to an obstruction, the frequency of the tone increases. When the distance between the sensors and the obstruction is less than approximately 40 cm (1 ft 6 in), the tone becomes continuous.



**WARNING: The parking sensors may not detect moving objects such as children and animals until they are dangerously close. Always manoeuvre with caution and always use your mirrors, turn your head and look behind you.**



**NOTE: The parking sensors are for guidance only and are not intended to replace the driver's visual checks for obstructions when manoeuvring. The parking sensors may not detect some obstructions, such as narrow posts or small obstructions close to the ground such as kerbs.**

The rear parking sensors are automatically switched off when reverse gear is de-selected.

The front parking sensors are automatically switched off when the vehicle speed exceeds 16 mph (26 km/h) and drive is selected. If the parking sensors have been manually activated, by pressing the centre of the button, the front parking sensors will become active again when the vehicle speed reduces to 12 mph (20 km/h).

The parking sensors can be switched off manually by pressing and holding the centre of the button, to remove the parking sensor proximity view from the Central Infotainment Touchscreen press centre of the button when in drive or neutral. The parking sensors cannot be manually switched off if reverse gear is selected. When manually switched off, the light around the button will be extinguished.


When the system has been manually switched off, both the front and rear sensors will still switch on when reverse gear is selected and remain on until drive or neutral is selected again.

If a fault is detected the system will be disabled and message will appear in the Driver Display, the parking sensor button light will flash. If the sensors are obscured by dirt, ice or snow, clean them. If the problem persists, contact your McLaren retailer.

## Driving Controls

### Starting and Driving

#### Rear view camera (RVC)

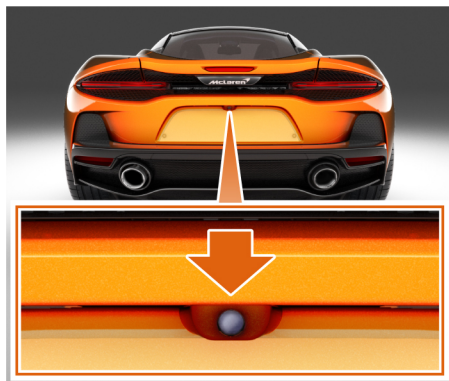

The rear view camera (RVC) is mounted in the centre of the rear bumper. The live video feed is displayed on the Driver Display when the function is active.

**i** **NOTE:** If the video feed is blurred or unclear, carefully clean the lens with water and a soft cloth.

A coloured grid is overlaid onto the live video feed as a guide to the proximity of visible objects to the rear of the vehicle.

**i** **NOTE:** The rear view camera is for guidance only and is not intended to replace the driver's visual checks for obstructions when manoeuvring. The rear view camera may not show some obstructions in certain ambient light or weather conditions.

The RVC is automatically activated when reverse gear is selected and automatically deactivated 10 seconds after a forward gear is selected or immediately if the vehicle's forward speed exceeds 6 mph (10 km/h).

The RVC can be manually activated by selecting Rear view camera on the Central Infotainment Touchscreen Home screen.

**■** When the RVC has been manually activated and is displayed on the Central Infotainment Touchscreen, it can be deactivated by touching the on-screen icon. The RVC will also be deactivated if the screen is touched anywhere below the status bar or any of the physical Central Infotainment Touchscreen buttons are pressed.

# Driving Controls

## Seamless Shift Gearbox

### Overview

The gearbox is a 7-speed, dual clutch seamless shift gearbox that can be operated in automatic or manual mode.

Automatic mode is selected unless the driver chooses manual mode, see Manual/automatic mode, page 2.17.

In automatic mode, the gearbox automatically optimises the shift points to suit your style of driving by selecting the most appropriate gear depending on:

- Powertrain control, page 2.22.
- Accelerator pedal position, page 2.16.
- vehicle speed.
- braking effort.

**i** NOTE: Allow the engine and gearbox to warm up before driving at high engine speeds and high loads. Avoid prolonged spinning of the rear wheels when driving on slippery surfaces as this could damage the drivetrain.

### Gear positions



Press one of the gear position buttons.

**i** NOTE: The letter on each button will illuminate red to identify if the vehicle is in Drive, Neutral or Reverse.

#### Drive

**D** All seven forward gears are available. Gear changes will be automatic, unless manual mode has been selected.

When drive is selected and the brakes are released, the vehicle will begin to move slowly without any throttle use, making it useful for parking manoeuvres and for moving off in queuing traffic.

#### Neutral

**N** No gear is engaged. Releasing the brakes will allow the vehicle to move freely, e.g. for pushing or towing. For more information on use of neutral for towing, see Towing for recovery, page 6.47.

Neutral can be selected at any vehicle speed by pressing the N button. Pressing the D button or initiating a shift by operating the gearshift paddles will then select the appropriate gear for the vehicle speed.

#### Reverse

**R** In normal circumstances, select reverse gear when the vehicle is stationary. When carrying out parking manoeuvres that require rapid changes from drive to reverse and back again, it is possible to engage reverse or drive at speeds up to 6 mph (10 km/h) whilst travelling in the opposite direction.

## Driving Controls

### Seamless Shift Gearbox

**i** NOTE: If reverse or drive is selected at speeds above 6 mph (10 km/h), the transmission will engage neutral, as a self protection feature. When travelling at speeds below 6 mph (10 km/h), neutral can be selected by pressing the N button. When reverse is selected and the brakes are released, the vehicle will begin to move slowly without any throttle use, making it useful for parking manoeuvres.

The gear (manual mode) or the gear position (automatic mode) selected will be shown on the Driver Display.

**i** NOTE: The gear position will not be displayed if there is a system communication fault. A warning message will appear on the Driver Display to inform you of the fault.



### Accelerator pedal position

Your style of driving influences how the seamless shift gearbox changes gear.

With light accelerator pedal use, upshifts are made at lower engine speeds. With firmer accelerator pedal use, upshifts are made at higher engine speeds.

### Kickdown

Kickdown is designed to achieve immediate acceleration when in automatic mode.

Depress the accelerator pedal fully beyond the pressure point, a click will be felt through the pedal. The gearbox will downshift immediately to the lowest appropriate gear, and maximum acceleration will follow. Once the pedal pressure is released, kickdown will cease and normal gear changes will resume.

**i** NOTE: Moderate accelerator pedal pressure may also cause the gearbox to downshift, depending on vehicle speed.



## Driving Controls


### Seamless Shift Gearbox

#### Manual/automatic mode



Press the **ACTIVE** button (2) to switch on the Active Dynamics Panel.

The **ACTIVE** button will illuminate. When selecting the different drive modes, their respective button will become illuminated. You can deactivate your drive mode selection at any time by pressing the **ACTIVE** button again. Press the **MANUAL** button (1) to select manual mode.

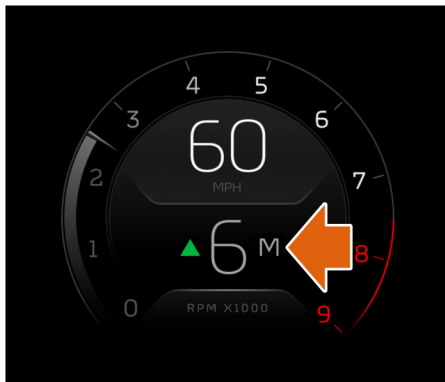

The gearbox mode indicator displays **M** and the currently selected gear. All forward gear changes are made by operating the gearshift paddles, see Gearshift paddles, page 2.18.

Performance shift cue (PSC) is an indicator that will sound to indicate that an upshift is required to maintain optimum performance.

For setting options see Performance Shift Cue, page 4.11.




When in manual mode and driving more economically, the gear shift indicator (GSI) will illuminate when an upshift would maintain optimum economy. The GSI will not illuminate if the requested acceleration or deceleration cannot be met with a higher gear. See Economical driving, page 2.11.

**i** **NOTE:** Not available in all markets, consult your McLaren retailer.

Press the **MANUAL** button again to revert to automatic mode.

## Driving Controls

### Seamless Shift Gearbox

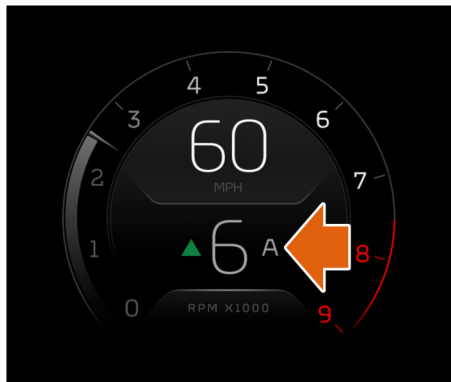

The gearbox mode indicator displays A. All gear changes occur automatically, but if a gearshift paddle is operated the gearbox will adopt a temporary manual mode. This mode will remain active for as long as the driver continues to make manual gear changes, each within an eight second period. The gearbox mode indicator displays A/M, see Gear position indicator, page 3.18.

**i** NOTE: As soon as an eight second period has elapsed without a manual gear change being made, the gearbox will revert to automatic mode.

Gearshift paddles



To upshift, pull the right-hand paddle towards you. To downshift pull the left-hand paddle towards you. The current gear position appears on the gear position display, see Gear position indicator, page 3.18.

**i** NOTE: The single-piece paddle and central pivot enables upshifts and downshifts to be made using either paddle.

As an alternative, upshifts can be made by pushing the left-hand paddle away from you and downshifts can be made by pushing the right-hand paddle away from you.

The gearshift paddles operate irrespective of the handling and powertrain mode selected, and there is no need to release the accelerator pedal to change gear.

**⚠** WARNING: For safety, in manual mode, the vehicle will monitor engine speed and may perform an automatic gear change if necessary.

**⚠** WARNING: Do not change down for additional engine braking on a slippery surface.

**i** NOTE: If operating the paddles in automatic mode, the gearbox will revert to automatic changes if an eight second period elapses without a gear change being made.

To immediately shift to the lowest possible gear whilst the vehicle is braking, select and hold a downshift on the paddle. The vehicle will then go down through all gears sequentially until the optimum gear is reached or you release the paddle.

## Driving Controls

### Seamless Shift Gearbox

When the vehicle speed is below 6 mph (10 km/h) or the vehicle is stationary with a gear selected, select a downshift and hold the paddle to select neutral.

Neutral can be selected at any vehicle speed by pressing the **N** button. Pressing the **D** button or initiating a shift by operating the gearshift paddles will then select the appropriate gear for the vehicle speed.

#### Pre-Cog

The gearbox will anticipate the next gear change and pre-select the required gear to ensure fast and seamless gear change.

When the vehicle is under acceleration, the gearbox will automatically pre-select the next highest gear. If a downshift is required immediately following hard acceleration, lightly pull and hold the downshift paddle to the Pre-Cog position to pre-select the next lowest gear. When ready, fully pull the paddle for an almost instantaneous downshift.

To pre-select an upshift during deceleration, lightly pull and hold the upshift paddle to the Pre-Cog position to pre-select the next highest gear. When ready, fully pull the paddle for an almost instantaneous upshift instead of the automatically pre-selected downshift.

## Driving Controls

### Handling and Powertrain Controls

#### Active dynamics control

The handling and powertrain control switches, on the Active Dynamics Panel, allow the driver to change the handling and performance characteristics of the vehicle.

The Active Dynamics Panel contains the following controls, and will only function with the engine running or the ignition switched on.



1. Engine START/STOP button, see Vehicle electrical status, page 2.02
2. Powertrain control, page 2.22
3. Launch control, page 2.25

4. Eco Start-Stop system, page 2.09
5. Active button, page 2.20
6. Handling control, page 2.21

#### Active button



Pressing the ACTIVE button switches on the Active Dynamics Panel. This activates the Launch, ESC off, handling and powertrain controls. The ACTIVE button and handling and powertrain switches will illuminate.

**i** NOTE: When the Active Dynamics Panel is on, the current handling and powertrain modes will appear in amber on the Driver Display. When the panel is off, the handling and powertrain modes will appear in white.

## Driving Controls

### Handling and Powertrain Controls

**i** NOTE: When the ignition is switched off, the controls on the Active Dynamics Panel will also switch off. The handling and powertrain control modes will be remembered but it will be necessary to press the ACTIVE button again to operate the controls when the ignition is next switched on or the vehicle will revert to automatic gear changes.

#### Handling control

The handling control switch affects the Proactive Chassis Control II system.

Selecting a mode



1. Press the ACTIVE button to switch on the Active Dynamics Panel.



2. Rotate the handling control to select one of the following modes.

# Driving Controls

## Handling and Powertrain Controls

### Modes

C	Comfort	Suspension at its softest setting, offers a compliant ride while maintaining good body control through corners.
S	Sport / Non-Active	Suspension is stiffer, giving a firmer ride coupled with enhanced handling characteristics.
T	Track	The suspension is at its stiffest, giving almost race car handling and ride characteristics. The Electronic Stability Control warning light is permanently illuminated.

**i** NOTE: The information displayed on the Driver Display will change dependent on the handling mode selected. See Handling and powertrain display, page 3.18.

The mode selected will remain active, until the selection is changed, the ignition is switched off, or the Active Dynamics Panel is deactivated.

- i** NOTE: If all the following conditions are not met when the selection is made, the mode will not be implemented until they are met:
- No fault conditions existing
  - No vehicle dynamic or stability interventions activated, e.g. electronic stability control
  - Steering wheel in straight ahead position, and not being turned, if the vehicle is moving

When the Active Dynamics Panel is off, the handling display on the Driver Display will show Non-Active, see Handling and powertrain display, page 3.18.

When the vehicle is in Non-Active mode, the handling characteristics will match those of Sport handling mode.

**i** NOTE: In Track handling mode, the electronic stability control system is still in operation. For further information, see Electronic stability control (ESC), page 2.30.

### Powertrain control

#### Selecting a mode



1. Press the ACTIVE button to switch on the Active Dynamics Panel.

# Driving Controls

## Handling and Powertrain Controls



2. Rotate the powertrain control to select one of the following modes.

The shift strategy will vary, depending on the powertrain mode selected.

### Active modes

Automatic mode		
C	Comfort	Gear changes are configured to offer the optimum economy without sacrificing the vehicle's inherent performance.
S	Sport	Gear changes will occur at a higher engine speed and with a reduced shift duration and are further enhanced with cylinder cut. See Cylinder cut, page 7.13.
T	Track	Gear changes occur instantly, according to throttle response and are further enhanced with cylinder cut. See Cylinder cut, page 7.13.

Manual mode		
C	Comfort	Gear changes are configured to offer optimum comfort and are enhanced with cylinder cut. See Cylinder cut, page 7.13.
S	Sport	Gear changes occur with a reduced shift duration and are further enhanced with ignition cut. See Ignition cut, page 7.14.
T	Track	Gear change strategy is at its sharpest. Changes occur instantly and are further enhanced with inertia push. See Inertia push, page 7.14.

**i** NOTE: The information displayed on the Driver Display will change dependent on the powertrain mode selected. See Handling and powertrain display, page 3.18.

**i** NOTE: The use of Track mode on the public road is not recommended. Track mode is strictly intended for high performance track/off road use only.

## Driving Controls

### Handling and Powertrain Controls


The mode selected will remain active, until the selection is changed, the ignition is switched off, or the Active Dynamics Panel is deactivated.

When the Active Dynamics Panel is off, the powertrain display on the Driver Display will show Non-Active, see Handling and powertrain display, page 3.18.

#### Non-Active mode

In both automatic and manual modes, gear changes occur with a reduced shift duration and are further enhanced with inertia push. See Inertia push, page 7.14.

#### Economy mode

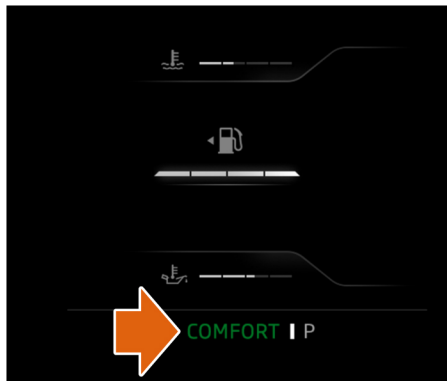

When the vehicle is operating in any powertrain mode with automatic gear shifts selected, the transmission adapts to an economical shift strategy during periods of gentle driving. This is determined by the vehicle speed, acceleration, braking and road gradient.

Depending on the current active shift strategy, the word 'Non-Active', 'Comfort', 'Sport' or 'Track' changes colour to green when economy mode is active. For information on other ways to save fuel, see Economical driving, page 2.11.

**NOTE:** When the Active Dynamics Panel is on, the current handling and powertrain modes will appear in amber on the Driver Display. When the panel is off, the handling and powertrain mode 'Non-Active' will appear in white.



## Driving Controls

### Handling and Powertrain Controls

#### Launch control

Launch control is designed to offer the maximum acceleration from a standing start.

**WARNING:** Do not initiate launch control unless on a track. Before initiating launch control, ensure that all doors, luggage compartment and service cover are closed, and the prevailing conditions are suitable for performing maximum acceleration manoeuvres.

**i** NOTE: Launch control can be operated in either automatic or manual modes and any handling or powertrain mode, but only when the Active Dynamics Panel is activated.

**i** NOTE: The launch sequence can be aborted at any point by carrying out any of the following actions:

- Applying the parking brake
- Pressing the **ACTIVE** button to switch off the vehicle dynamics panel
- Pressing the **LAUNCH** button to switch off launch control

**i** NOTE: If there is a fault or the launch procedure has not been followed correctly, a warning message 'Launch Mode unavailable - See owner's manual' will be shown on the Driver Display. Repeat the launch procedure, ensuring that it is followed correctly. If the warning message remains, contact your McLaren retailer.

**i** NOTE: Launch mode is only available if the following conditions are met:

- Both doors are closed
- Vehicle ride height normal and vehicle lift function inactive
- Atmospheric altitude has no detrimental effect with respect to engine performance
- Engine coolant at normal operating temperature

#### Launch control process

1. Ensure the steering wheel is in a straight ahead position.
2. Depress the brake pedal firmly with your left foot and select first gear.



3. Press the **ACTIVE** button to switch on the Active Dynamics Panel.

## Driving Controls

### Handling and Powertrain Controls



4. Press the LAUNCH button.

**i** NOTE: L will flash in the gearbox mode indicator, see Manual/automatic mode, page 2.17 and 'Launch Mode active - Awaiting full throttle' will be shown on the Driver Display.

5. With your left foot remaining on the brake pedal, press and hold the accelerator pedal down fully with your right foot, the engine speed will increase to 3,200 rpm.

**i** NOTE: To abort launch control release the brake pedal before pressing the accelerator pedal or wait for approximately 100 seconds until launch control is deactivated. The message 'Launch Mode aborted - See owner's manual' will be shown on the Driver Display.

**i** NOTE: The message 'Launch Mode active - Boost building' will be shown on the Driver Display. Once sufficient boost has been achieved, the message 'Launch Mode active - Boost ready' will be shown on the Driver Display.

6. Release the brake pedal with your left foot and the launch control system will perform a launch start to give maximum acceleration.

**i** NOTE: To abort launch control release the accelerator pedal or wait for approximately 5-10 seconds until launch control is deactivated. If the launch is aborted, release the accelerator pedal and then press again to drive away. The message 'Launch Mode aborted - See owner's manual' will be shown on the Driver Display.

7. Launch control will operate if the procedure has been followed correctly until aborted.

**i** NOTE: Whilst in launch control, the vehicle will carry out automatic gear shifts, and optimise traction. It will continue to do so until launch control is aborted. To abort launch control, release the accelerator pedal, apply the brake, or operate one of the gearshift paddles.


# Driving Controls


## Driving Safety Systems

### General

This section contains information about the following safety systems:

- Anti-lock braking system (ABS)
- Brake assist system
- Brake disc wiping
- Hill hold
- Brake-steer
- Electronic brake pre-fill
- Electronic stability control (ESC)


 **WARNING:** The risk of an accident increases when driving quickly, especially when cornering, on wet and icy roads. Always maintain a safe distance to the vehicle in front. Always adapt your driving style to suit the road and weather conditions and maintain a sufficient distance from other road users and objects on the road.

 **NOTE:** In winter conditions, the maximum effect of the anti-lock braking system, brake assist system and electronic stability control can only be achieved if you use winter tyres, with snow socks where they are necessary.

### Anti-lock braking system (ABS)


The anti-lock braking system prevents the wheels from locking when you brake. This allows the vehicle to be steered during braking manoeuvres.

The anti-lock braking system works from a speed of approximately 5 mph (8 km/h) upwards, regardless of road surface conditions. It works on slippery surfaces, even when you brake gently.

 **WARNING:** Do not depress the brake pedal repeatedly in quick succession (pumping). Depress the brake pedal firmly and evenly. Pumping the brake pedal reduces the braking effect.

If the anti-lock braking system operates during braking, the warning light flashes, and the brake pedal pulses as this happens.

When the anti-lock braking system is activated, maintain the force on the brake pedal until the braking situation is over.

 **WARNING:** Always adapt your driving style to suit the prevailing road and weather conditions and maintain sufficient distance from other road users and objects on the road.

## Driving Controls

### Driving Safety Systems

#### Anti-lock braking system (ABS) status light



If there is a malfunction with the system, the status light will illuminate. Do not drive your vehicle, contact your McLaren retailer as soon as possible.



**WARNING: If the anti-lock braking system malfunctions, brake assist system and electronic stability control are also deactivated. If the anti-lock braking system malfunctions, the wheels could lock when you brake. This may increase the stopping distance and impair your ability to steer.**

#### Brake assist system

Brake assist system operates in emergency braking situations. If you depress the brake pedal quickly, the brake assist system automatically increases the force applied to the brakes and thus shortens the stopping distance.

Continue to depress the brake pedal firmly until the emergency situation is over, the anti-lock braking system prevents the wheels from locking.

When you release the brake pedal, the brakes will work as normal. The brake assist system is deactivated.



**WARNING: If the brake assist system malfunctions, the brakes will still operate. However, the braking force is not automatically boosted and this may increase the stopping distance.**

#### Brake disc wiping

Brake disc wiping operates automatically when the windscreen wipers are switched on. It prevents moisture build up on the brake discs during periods of heavy rain, improving braking performance.

## Driving Controls

### Driving Safety Systems

#### Hill hold control

If the brake pedal is applied to hold the vehicle on a hill, this function will continue to apply the brakes for 2 seconds after the pedal is released to assist a smooth start.

#### Brake-steer

Brake steer offers the benefits of a torque vectoring differential, but is integrated into the braking system reducing weight and providing excellent speed of response.

Torque vectoring gives the differential the ability to change the amount of power that is sent to each of the rear wheels to provide optimum stability and traction.

If the system detects that the vehicle is starting to understeer through a corner, the inside rear brake is gently applied. This helps to increase the yaw rate of the vehicle, making the vehicle feel more resistant to understeer. The lateral 'g' force is also increased giving better handling characteristics.

If the driver uses too much throttle exiting a corner, the inside rear wheel increases speed, which without brake steer could cause the vehicle to become unstable. In this situation, brake steer will again gently apply the brake on the inside rear wheel, thereby restoring traction and stability.

#### Electronic brake pre-fill

If the accelerator pedal is suddenly released, the electronic brake pre-fill function immediately brings the brake pads into contact with the discs, ensuring rapid braking.


## Driving Controls

### Driving Safety Systems


#### Electronic stability control (ESC)

Electronic stability control (ESC) monitors driving stability and traction between the tyres and the road surface.

Electronic stability control detects when a wheel starts to spin or the vehicle starts to skid and stabilises the vehicle by braking individual wheels, and/or limiting the engine power output. This also assists when pulling away on wet or slippery road surfaces and stabilises the vehicle when braking.

 **NOTE:** Electronic stability control only functions properly if wheels with the recommended specification tyres are used.


Electronic stability control is activated automatically as soon as the engine is started.

 **WARNING:** If the electronic stability control warning illuminates, do not deactivate electronic stability control. Adapt your driving style to suit road and traffic conditions.


#### Traction control system


The traction control system is an integral part of electronic stability control.


The traction control system reduces engine torque to prevent the wheels from spinning. If additional intervention is required to stop the wheels from spinning, the vehicle will apply the rear brakes individually. The traction control system brakes individual drive wheels to prevent them from spinning. This means that the vehicle can accelerate on slippery surfaces.

 **WARNING:** The traction control system cannot reduce the risk of an accident if you drive too fast.

#### Deactivating electronic stability control (ESC)

 **WARNING:** When electronic stability control is deactivated, the risk of the vehicle skidding is increased. Adapt your driving style to suit road and traffic conditions.

 **WARNING:** Do not deactivate electronic stability control unless on a track and prevailing conditions are suitable.

 **NOTE:** When you deactivate electronic stability control, the following conditions result:

- The 'ESC OFF' warning light illuminates
- The light on the 'ESC OFF' button illuminates

- Electronic stability control no longer improves driving stability
- The engine's torque is no longer limited and the drive wheels could spin
- The anti-lock braking system remains activated

#### Electronic stability control (ESC) Dynamic modes

The level of electronic stability control can be adjusted to various dynamic modes to suit the driver's requirements and is dependent on the handling mode currently active.

Electronic stability control Dynamic modes can be selected at any vehicle speed.

Ensure Sport or Track handling mode is active, see Handling control, page 2.21.

## Driving Controls

### Driving Safety Systems



#### Sport Dynamic mode

1. Select Sport handling mode.

The electronic stability control is **ON** by default.

2. Press the **ESC OFF** button briefly to activate **Sport Dynamic** mode which allows more dynamic freedom over the default **ESC ON** mode.

**ESC DYN** will be displayed on the Driver Display.

#### Track Dynamic mode

1. Select Track handling mode.

The electronic stability control is **ON** by default.

2. Press the **ESC OFF** button briefly to activate **Track Dynamic** mode which allows a further increase in dynamic freedom over **Sport Dynamic** mode.

**ESC DYN** will be displayed on the Driver Display.

#### ESC Off

1. Select Sport or Track handling mode.
2. If not already in a **ESC Dynamic** mode, press the **ESC OFF** button briefly to activate a **ESC Dynamic** mode.
3. Press and hold the **ESC OFF** button for 2 seconds, followed by a confirmation press again within 5 seconds to deactivate the electronic stability control.

**ESC OFF** will be displayed on the Driver Display and the light on the **ESC OFF** button will illuminate.

#### Reactivating electronic stability control (ESC)

When electronic stability control is reactivated, the electronic stability control OFF warning light on the Driver Display extinguishes.

**i** **NOTE:** Electronic stability control is automatically reactivated when the ignition is next switched off and on again.

#### Reactivation Procedure



Perform any of the following to reactivate electronic stability control:

- Press the **ESC OFF** button briefly, the light on the button will be extinguished.
- Change the mode on the handling control to **Comfort**.

## Driving Controls

### Driving Safety Systems

- Switch the ignition off and then switch on again.

#### Tyre pressure monitoring system (TPMS)

Prior to every time the vehicle is to be driven, each tyre should be checked when cold and inflated/deflated to the inflation pressure recommended on the tyre pressure label. (If your vehicle has tyres of a different size than the size indicated on the tyre pressure label, you should determine the proper inflation pressure for those tyres).

In certain circumstances it is possible that the tyre pressure monitoring system (TPMS) pressure warning will display without the loss of air from the tyre. This may be due to temperature variations between the locations where the tyre pressure was set and where the vehicle is driven. For example setting pressures in an air conditioned or heated garage and then driving the vehicle outside may induce a tyre pressure warning after a short period of driving. The warning may also display when extreme ambient temperature variations occur or during seasonal temperature changes.



**WARNING: Never ignore a tyre pressure warning. Check tyre pressures immediately and if necessary contact your McLaren retailer.**

#### Tyre pressure monitoring system (TPMS) overview



The tyre pressure monitoring system warns you when the pressure drops or the temperature increases above an acceptable level in one or more of the tyres.



## Driving Controls

### Driving Safety Systems

The system monitors the tyre pressures and temperatures in each tyre using sensors located in each tyre valve and a receiver located within the vehicle. Communication between the sensors and the receiver is via radio frequency (RF) signals.

**i** NOTE: The tyre pressure monitoring system can suffer interference if you are operating radio transmitting equipment (e.g. radio headphones, two-way radios) in or near the vehicle.

**i** NOTE: The tyre pressure monitoring system will begin transmitting once the vehicle is travelling over 6 mph (10 km/h), there will be a delay of up to 2 minutes before this information is displayed on the Driver Display.

#### Tyre pressure monitoring system (TPMS) operation

**!** If a low or high tyre pressure or high tyre temperature is detected, the tyre pressure monitoring system warning light will illuminate along with an associated error message on the Driver Display.

Stop the vehicle as soon as possible, check all your tyres and inflate them to the recommended pressure, see Tyre pressures, page 6.39. The warning light will be extinguished once the tyres have been inflated to the correct pressure.


Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability.



**WARNING: TPMS is not a substitute for proper tyre maintenance, and it is the driver's responsibility to maintain correct tyre pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tyre pressure warning light.**

Each tyre should be checked weekly when cold and inflated/deflated to the inflation pressure recommended on the tyre pressure label.

Navigate through the 'Vehicle Info' screen on the Driver Display to view the current tyre pressures, see Vehicle info, page 3.06.

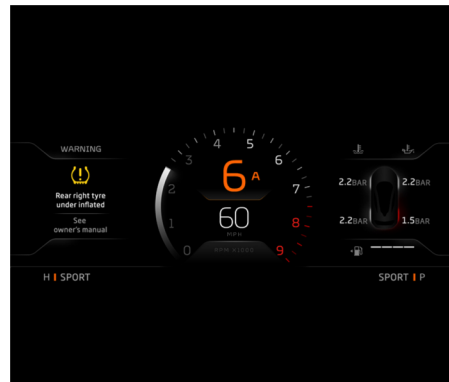

The display shows the pressures of each of the four tyres. If the pressure figure appears in green, no action is required. If it appears as red text, inflate the associated tyre to the correct pressure as soon as possible.

Inspect the tyre(s) for any possible causes of reduced tyre pressure.

## Driving Controls

### Driving Safety Systems

**⚠ WARNING:** The tyre pressures indicated on the Driver Display will be more accurate with a pressure gauge. The tyre pressure monitoring system is not a substitute for manually checking tyre pressures or checking for wear and damage. The system only provides a low tyre pressure warning and does not re-inflate the tyres.

The tyre pressure monitoring system cannot alert you to damage to a tyre. Regularly check the condition of your tyres.

**⚠ WARNING:** If low pressure warnings occur frequently, have the tyres checked at your McLaren retailer. Driving on an under-inflated tyre will cause the tyre to overheat and can lead to tyre failure.


**🌿 ENVIRONMENTAL:** Under-inflated tyres reduce fuel efficiency and tyre tread life, and may affect the vehicle's handling and braking characteristics.

**🌿 ENVIRONMENTAL:** Check tyre pressures at least every 7 days.

#### Tyre Temperature Monitoring System operation

If a high tyre temperature is detected, the Tyre Temperature Monitoring System will display an error message on the Driver Display.

Navigate through the 'Vehicle Info' screen on the Driver Display to view the current tyre temperatures, see Vehicle info, page 3.06.

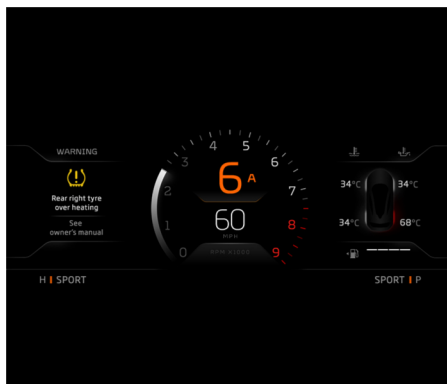

This shows the current temperature of each of the four tyres. If the temperature appears in blue, the tyres have not yet warmed up to optimum operating temperature. If the temperature appears in green, no action is required. If it appears in red, the safe operating temperature of the tyres has been exceeded. Reduce speed or stop the vehicle until the temperatures are at a safe level, i.e. temperatures are displayed in green.

Inspect the tyre(s) for any possible causes of increased tyre temperature.

# Driving Controls

## Cruise Control

### Overview


**WARNING:** Pay particular attention to road and traffic conditions, when cruise control is activated, and always travel at a speed which is safe for the current conditions.  
Never use cruise control on winding or slippery roads or when visibility is poor, e.g. in fog, heavy rain or snow.

Cruise control allows the driver to maintain a constant speed without using the accelerator pedal. This is useful on motorway journeys where a constant speed can be maintained for long periods.



All cruise control functions are operated by the cruise control stalk, positioned on the right of the steering column.

### Using cruise control

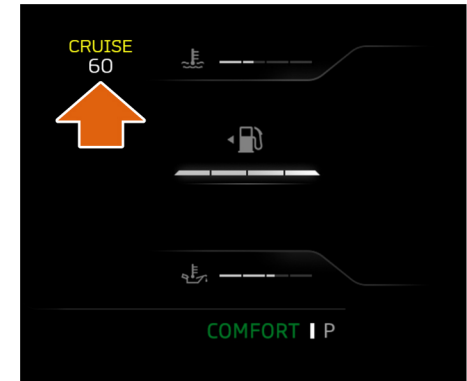

Accelerate to the desired speed and push the stalk up briefly, to activate cruise control. The set speed will appear on the Driver Display.

**i** NOTE: Cruise control will only operate at speeds in excess of 20 mph (30 km/h).

Speed can be increased at any time by pressing the accelerator pedal. Once the accelerator pedal is released the vehicle will return to the cruise control speed.

## Driving Controls

### Cruise Control



**WARNING:** Always be aware that cruise control is engaged and do not override cruise control for extended periods. Releasing the accelerator in these circumstances could lead to the vehicle not decelerating at the rate you expect.

#### Cancelling cruise control



Briefly push the cruise control stalk away from you.

Cruise control is cancelled. The indicator on the Driver Display extinguishes but the last speed set remains stored.



**NOTE:** The last speed stored is cleared when you switch off the engine.

Cruise control is also cancelled if the foot brake is pressed, if neutral is selected or if active speed limiter is selected.



**NOTE:** Cruise control is cancelled automatically if electronic stability control detects wheel spin, vehicle skid or if electronic stability control is switched off.

## Driving Controls

### Cruise Control

#### Increasing cruise control speed



- A brief push of the stalk upwards will increase the vehicle speed in 1 mph (1 km/h) increments (depending on the units selected, see Speed & Distance Units, page 4.08);
- or push and hold the stalk upwards until the desired speed is reached, then release the stalk;
- or accelerate to the new desired speed and push the stalk up.

#### Reducing cruise control speed




- A brief push of the stalk downwards will decrease the vehicle speed in 1 mph (1 km/h) decrements (depending on the units selected, see Speed & Distance Units, page 4.08);
- or push and hold the stalk downwards, the vehicle will decelerate, release the stalk when the desired speed has been reached.

**i** NOTE: If you decelerate using the cruise control stalk, the gearbox may shift down to increase the rate of deceleration. Downshifting manually using the gear change paddles will not disengage cruise control.

## Driving Controls

### Cruise Control

#### Resuming a stored speed

 **WARNING:** Only resume the stored speed if it is appropriate for the current road and traffic conditions. Sudden acceleration could endanger yourself and others.






Pull the cruise control stalk briefly towards you. Cruise control will adjust the vehicle's speed to the last speed stored.

## Driving Controls

### Active Speed Limiter (ASL)

#### Setting an upper speed limit


-  **WARNING:** It is the driver's responsibility to keep within proper speed limits.
-  **WARNING:** The active speed limiter (ASL) feature may allow the vehicle to exceed the upper speed limit in certain situations, for example when descending steep gradients.
-  **NOTE:** ASL can be activated when the vehicle is stationary. The upper speed limit will be set to a default speed of 20 mph (30 km/h).


The ASL control allows the driver to set an upper speed limit.

#### Selecting a speed



1. Accelerate or decelerate to the maximum permitted speed and push the stalk down briefly, to activate Active Speed Limiter (ASL).

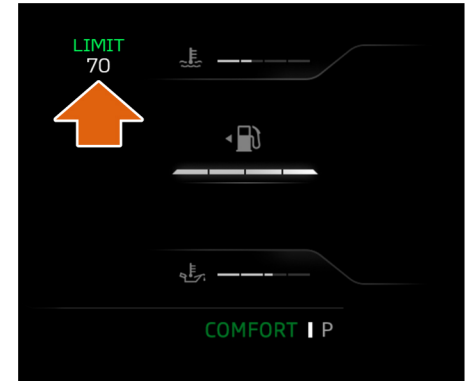

2. The upper speed limit will appear on the Driver Display.
-  **NOTE:** The ASL can be overridden by depressing the throttle pedal beyond a predetermined point.

## Driving Controls

### Active Speed Limiter (ASL)

#### Cancelling Active Speed Limiter (ASL)



To cancel Active Speed Limiter (ASL) briefly push the stalk away from you. The indicator on the Driver Display will extinguish.



# Driving Controls

## Running In

### Running in

Observe the following running in instructions when the vehicle is new or if any of these components have been replaced.


#### Engine and gearbox


For the first 625 miles (1,000 km):


- drive at varying road and engine speeds.
- do not drive faster than the maximum speed limit of the road, or 150 mph (240 km/h).
- do not use your vehicle on a track.
- avoid heavy loads on the engine (driving at full throttle).
- avoid driving at engine speeds less than 2,000 rpm.
- avoid running at constant speed and load for long periods.
- avoid using kickdown.
- do not downshift for additional engine braking.
- avoid stopping the engine within 2 minutes of high speed and high load running.

- avoid idling the engine for more than 10 minutes.

After the 625 miles (1,000 km) running in period, you may gradually use the vehicle's full performance.

 **NOTE:** Failure to observe the engine and gearbox operating limits during the running in period may lead to premature wear or damage.

 **NOTE:** These running in instructions also apply for the first 625 miles (1,000 km) after the engine or transmission has been replaced.

 **ENVIRONMENTAL:** This advice will assist in improving fuel economy and should be adopted as normal driving practice even after the running in period.

#### Brakes

New brakes require an initial bedding in period. Avoid heavy braking situations for the first 625 miles (1,000 km).


### Normal/road use

- Allow the engine to warm up before driving at high engine speeds and high loads. Limit engine speed to 5,000 rpm until the engine reaches full operating temperature.
- Avoid stopping the engine within 2 minutes of high speed/high load running.
- Avoid idling the engine for more than 10 minutes.

## Driving Controls

### Running In

#### Track use

 NOTE: Do not use the vehicle on a track during the running in period.

Before you use your vehicle on the track, consult your McLaren retailer. McLaren recommend that your vehicle is inspected before and after track use.

## Driving Controls

### Refuelling

#### Filling with fuel

**⚠ WARNING:** Fuel is highly flammable. Fire, naked flames, smoking and using a mobile telephone are prohibited when handling fuels. Switch off the engine before refuelling.

**⚠ WARNING:** Fuel and fuel vapours can damage your health. Do not inhale fuel vapours or allow fuel to come into contact with skin or clothing.

The fuel filler flap is located at the rear on the left-hand side. It is locked or unlocked automatically when the vehicle is locked or unlocked.

**i NOTE:** Do not attempt to force the filler flap open if the vehicle is locked. You may damage the flap and its locking mechanism.

**i NOTE:** The fuel filler flap will remain locked if the engine is running.

#### Filling on the forecourt

1. Switch off the engine.



2. Press the rear edge of the fuel filler flap, the latch will release.

3. Open the flap.

**i NOTE:** Your vehicle is not fitted with a fuel filler cap.

4. Insert the nozzle into the fuel filler and dispense fuel. For fuel recommendations, see Recommended fuel, page 2.44.
5. Do not continue to fill the tank after the pump nozzle switches off.
6. Remove the nozzle.

7. Close the fuel filler flap, you will hear the latch engage.

#### Filling with the fuel funnel

1. Switch off the engine.




2. Press the rear edge of the fuel filler flap, the latch will release.
3. Open the flap.

**i NOTE:** Your vehicle is not fitted with a fuel filler cap.

## Driving Controls

### Refuelling

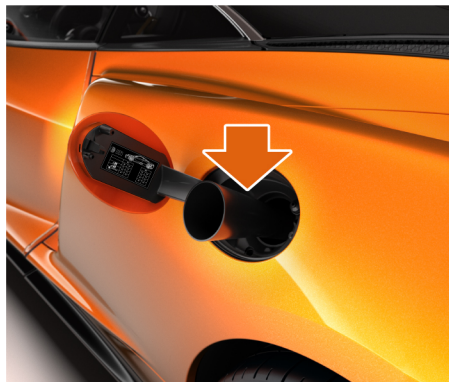

4. Collect the fuel funnel from the front luggage compartment, see Fuel funnel, page 6.12.
5. Insert the fuel funnel fully into the filler neck.
6. Insert the nozzle into the fuel funnel and dispense fuel. For fuel recommendations, see Recommended fuel, page 2.44.
7. Do not overfill.



**WARNING: Take care to avoid spillages and overfilling. Ensure any spillages are cleaned immediately.**

8. Remove the nozzle.
9. Remove the fuel funnel, clean thoroughly and store in the front luggage compartment.
10. Close the fuel filler flap, you will hear the latch engage.

### Recommended fuel

For maximum engine performance the use of 98 RON/88 MON unleaded petrol meeting specification EN 228 is required.

In areas where 98 RON/88 MON is unavailable, use unleaded premium grade petrol with a minimum octane rating of 95 RON/85 MON, meeting specification EN 228.



**NOTE:** Information relating to the quality of fuel being dispensed is displayed on the filling pump.



**NOTE:** The likelihood of engine wear or damage is increased if fuel does not meet the requirements of EN 228 for unleaded petrol or if fuel additives are used.

Damage caused by use of incorrect fuel is not covered by the vehicle warranty.




**NOTE:** This vehicle is not suitable for use with fuels containing more than 10% Ethanol.

## Driving Controls

### Refuelling

Do not use E85 fuels (85% Ethanol content). This vehicle is not fitted with the equipment necessary for the use of fuels containing more than 10% Ethanol. If E85 fuels are used, serious damage will occur to the engine and fuel system.

 NOTE: If the fuel tank is accidentally filled with the incorrect type of fuel, do not start the engine, and seek qualified assistance.

# Driving Controls

## Winter Driving

### Winter driving

It is recommended that you have your vehicle inspected at your McLaren retailer at the onset of winter. This service includes the following:

- Checking the antifreeze/anti-corrosion concentration
- Adding concentrated cleaning agent to the windscreen washer system
- Checking the battery
- Changing the tyres


### Winter tyres


Use winter tyres below 7°C (45°F) and on snow or ice-covered roads. The maximum effect of the anti-lock braking system and electronic stability control systems is only achieved with these tyres.

Use winter tyres of the same make and tread on all wheels to maintain safe handling characteristics. Change the tyre type in 'Vehicle settings' on the Central Infotainment Touchscreen, see Tyres, page 4.12.

Winter tyres are directional, not asymmetrical, and so must be fitted in accordance with the directional markings on the sides of the tyres.

 **NOTE:** Only winter tyres specified by McLaren should be used.

 **WARNING:** Replace winter tyres with a tread depth of less than 4 mm immediately. They are not suitable for winter use because they do not provide sufficient grip, and could cause an accident.

 **NOTE:** A wheel change must be carried out at your McLaren retailer. The vehicle could be damaged if it is jacked up incorrectly.

Consult your McLaren retailer for advice and information regarding the maximum speed specified for the winter tyres fitted. Restrict the maximum speed of the vehicle using the ASL system, see Setting an upper speed limit, page 2.39.

### Snow socks

McLaren recommend that you only use snow socks which have been approved for McLaren vehicles. If you are intending to fit snow socks, bear the following points in mind:

- Only ever fit snow socks to both rear wheels.

- Comply with the manufacturer's installation instructions.

Do not exceed the maximum permissible speed as indicated on the snow sock packaging. Remove the snow socks as soon as possible if you are no longer driving on snow-covered roads.








# Instruments

- Overview.....3.02**
  - Overview.....3.02
  - Tachometer.....3.02
  - Speedometer.....3.03
- Driver Display.....3.04**
  - Overview.....3.04
  - Trip info.....3.05
  - Vehicle info.....3.06
  - Phone.....3.08
  - Media.....3.09
  - Navigation.....3.10
  - Messages.....3.10
  - Display window.....3.17
  - Gear position indicator.....3.18
  - Handling and powertrain display.....3.18
  - Electronic stability control (ESC) mode display.....3.18
  - Oil temperature.....3.19
  - Water temperature.....3.19
  - Fuel level and range.....3.20


# Instruments Overview

## Overview

The Driver Display is activated when the ignition is switched on, see Switching on the ignition, page 2.03.


 **WARNING:** No messages will appear on the Driver Display if there is a fault with the screen or vehicle electrics. Contact your McLaren retailer immediately. Use of the vehicle in these circumstances can be dangerous.


## Tachometer

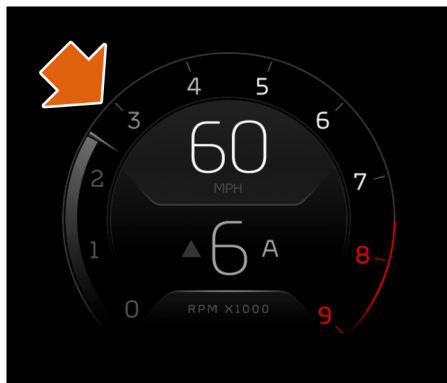

The tachometer display appears in the centre of the Driver Display when in Non-Active or Comfort powertrain and handling modes. The red number on the display indicates the engine's maximum RPM.

When Sport or Track powertrain or handling modes are selected, the tachometer style will change to suit the selected mode. See Display window, page 3.17.

 **NOTE:** The maximum RPM is dynamic and will be reduced under certain conditions, for example, if the engine oil is below normal operating temperature or if neutral gear is selected.


 **NOTE:** Do not operate the engine at or near its maximum speed for a significant length of time. The fuel supply is cut off to protect the engine when the maximum RPM is reached.

## Shift lights

When Track powertrain or handling mode is selected, shift lights will be displayed. The shift lights are arranged in three blocks; a green block, red block and blue block. Each block illuminates as engine RPM increases. Accelerating the engine speed beyond the point that the blue block is illuminated is not conducive to rapid acceleration.

## Instruments Overview

### Speedometer

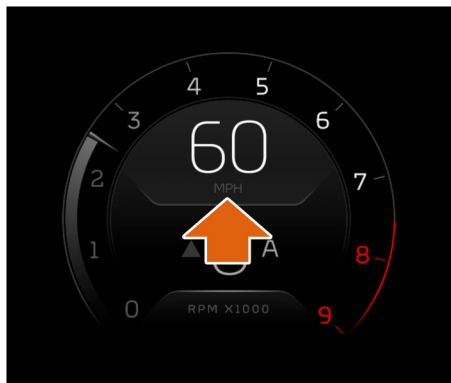

The speedometer is situated centrally on the Driver Display when in Non-Active or Comfort powertrain and handling modes.

When Sport or Track powertrain or handling modes are selected, the speedometer style will change to suit the selected mode. See Display window, page 3.17.

**i** NOTE: The speedometer changes from mph to km/h when the units are changed from miles to kilometres, see Speed & Distance Units, page 4.08.

**i** NOTE: The vehicle speed will constantly display '0' if there is a system communication fault. A warning message will appear on the Driver Display to inform you of the fault. Adapt your driving style while this fault exists, you are responsible for the vehicle's speed at all times. Contact your McLaren retailer.

# Instruments

## Driver Display

### Overview

Warnings appear in a pop-up window on the Driver Display.

The stored messages can be viewed at any time when the ignition is on, see Messages, page 3.10.

**⚠ WARNING: Operating and browsing menus whilst the vehicle is in motion could make you unable to observe road and traffic conditions and could cause an accident.**

**⚠ WARNING: Do not ignore warning messages, failure to take appropriate action may result in personal injury or damage to the vehicle.**

### Clock

The clock displays the current time. For more details see Time and Units, page 4.06.

### Temperature

**⚠ WARNING: Even if the temperature displayed is above freezing point, the road surface may still be icy. You should always adapt your driving style and speed to suit the weather conditions.**

Temperature is the current outside temperature. There is a short delay before a change in outside temperature is displayed.

When the outside air temperature falls below 3°C (37°F), the frost warning message will be displayed and the temperature reading will change colour after the message has been displayed.

When the outside temperature falls below 0°C (32°F), the ice warning will be displayed.

### Menu



Navigation through the menu structure is achieved using the control stalk mounted on the left of the steering column.

The following categories are available:

- Trip info, page 3.05
- Vehicle info, page 3.06
- Phone, page 3.08
- Media, page 3.09
- Navigation, page 3.10

### Navigate the menu

1. Move the control stalk up or down (+ or -) to highlight your choice.
2. Pull the stalk towards you to enter your selection.
3. Then select the topic of interest from the list, move the control stalk up or down (+ or -) to highlight your choice.
4. Pull the stalk towards you to move through to the next menu in the structure.
5. At the end of each structure there will be a display of information or a screen where a setting can be changed or information viewed.


## Instruments

### Driver Display



6. When the function required is selected or a setting is made, pull the stalk towards you to confirm.

### Trip info

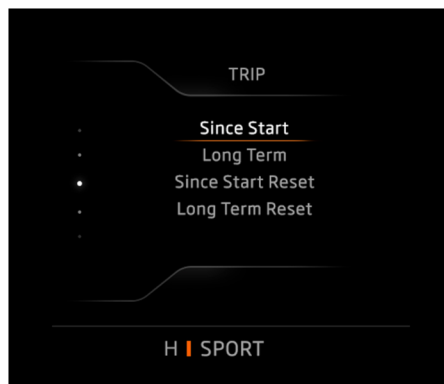

The Driver Display can display the following trip data:

- Trip (since start), page 3.05
- Trip (long term), page 3.06

In order to reset the trip data to zero, select the required option from the menu and pull the stalk towards you (**FORWARD**) to confirm.

### Trip (since start)




Displays distance, time, average fuel consumption and average speed for the current journey.

The information will also reset to zero when the engine is switched off for approximately 2 hours.

# Instruments

## Driver Display

### Trip (long term)

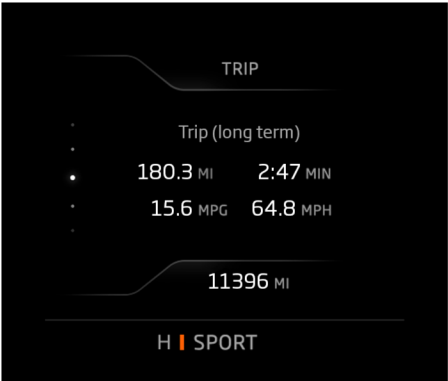


Displays distance, time, average fuel consumption and average speed since the last trip reset.

### Odometer

The odometer is shown on each trip screen and displays the total distance the vehicle has travelled.

### Vehicle info


#### Overview

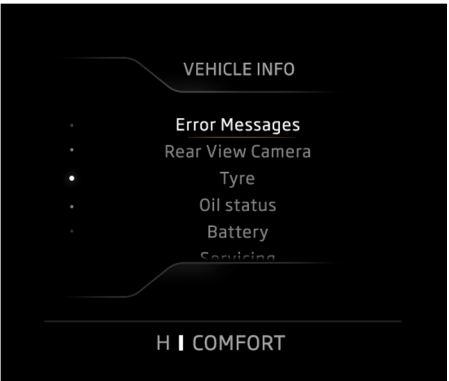

The following choices can be made from the Vehicle info screen.

- Message, page 3.06
- Tyre, page 3.07
- Oil status, page 3.07
- Battery, page 3.07
- Servicing, page 3.08
- Vehicle identification number, page 3.08

### Message

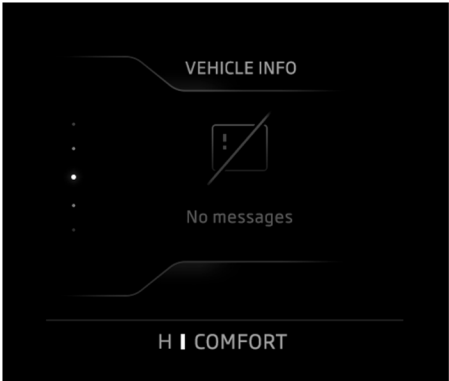


If no error messages have been logged, the display will confirm this.

If any errors have been logged, the screen will display error messages with arrows to scroll through the messages.

## Instruments

### Driver Display


#### Tyre

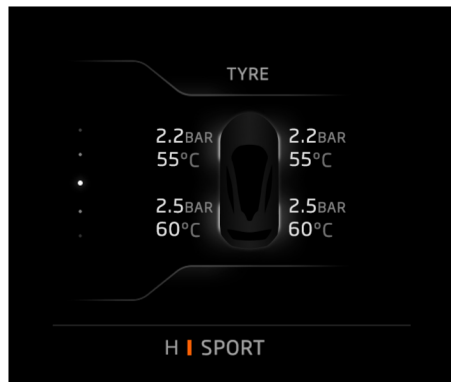

This shows the pressures and temperatures of each of the 4 tyres. If the figures appear in white, no action is required. If they appear as amber or red text, have the tyres inspected and pressures rectified as soon as possible.

Inspect the tyre(s) for any possible causes of reduced pressure or increased temperature.


#### Oil status

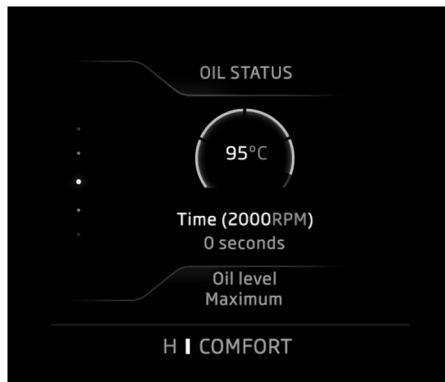

Displays a gauge showing the level of oil, together with the oil temperature.

To check the engine oil level, see [Engine oil](#), page 6.02.

#### Battery

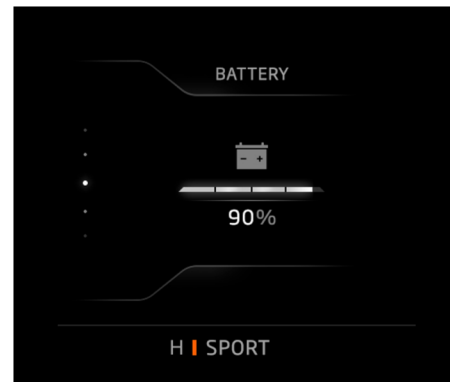

Displays a gauge showing the battery charge status.


To charge the battery, see [Charging the battery](#), page 6.14.

To see how long the vehicle can be parked without the engine running or charging the battery, see [Parking days](#), page 2.02.

# Instruments

## Driver Display

### Servicing

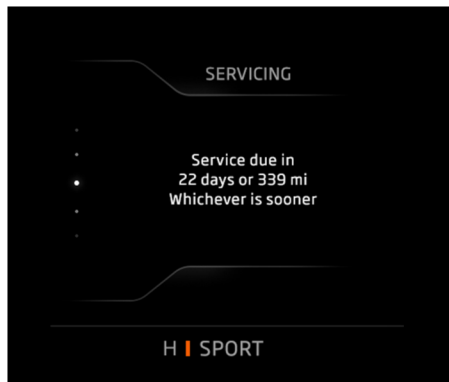

At approximately 30 days or 625 miles (1,000 km) before a service is due, the above display appears.

The message will then appear every time the ignition is switched on, with the time/distance figures reducing. Once the service has been carried out, the display will be reset by your McLaren retailer.


If a service becomes overdue, the display will show the distance by which it is overdue.

### Vehicle identification number



Displays the vehicle identification number (VIN).

### Phone

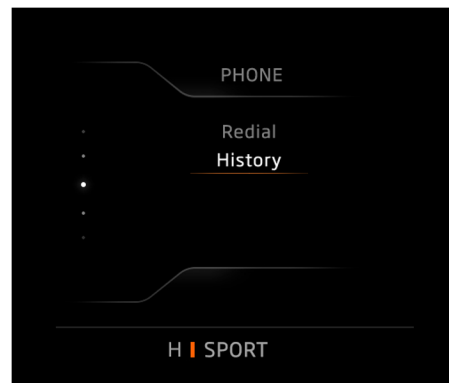

Pull the stalk towards you (**FORWARD**) to access further options.

The following options are available:

- Redial
- Favourites
- History

For more information on pairing and setting up a phone, see Phone, page 4.19.




## Instruments

### Driver Display

**i** NOTE: The available options within the phone menu may depend on your model of phone and previous calls made or received while connected to your McLaren.

### Media

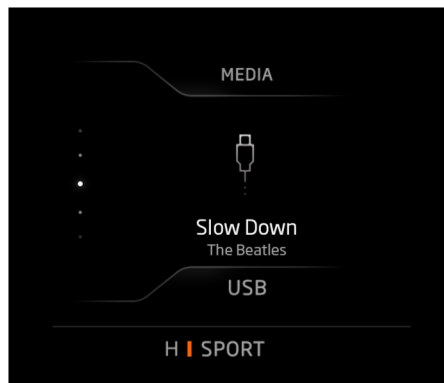

Details of the track or radio station currently playing will be displayed.

Pull the stalk towards you (**FORWARD**) to access further options.

The following options are available:

- Play
- Pause
- Next
- Previous

For more information on accessing media from different sources, see Media, page 4.27.

**i** NOTE: The available options within the media menu may depend on source which is currently playing.

# Instruments

## Driver Display

### Navigation



The current navigation turn-by-turn guidance will be displayed on the Driver Display if route guidance has been started using the Central Infotainment Touchscreen.


For more information on setting a route and using the navigation feature, see Navigation, page 4.36.

The turn-by-turn display provides the following information:

1. Next turn direction and distance
2. Total distance to destination remaining

3. Total time to destination remaining

**i** NOTE: If no destination has been set using the Central Infotainment Touchscreen, only the compass and current road name will be displayed.

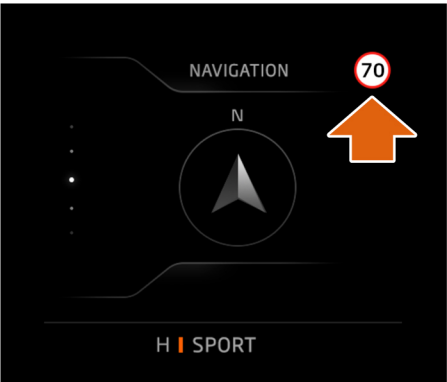

If available, the speed limit for the current road will be displayed on the Driver Display.

**i** NOTE: The speed limit is for guidance only, always observe local speed limit information as there may be temporary or new speed restrictions in place.

### Messages

The Driver Display may show messages that refer you to the Owner's Handbook.

The icon displayed with the message indicates the severity.

- Information that does not require action to be taken.
- Information that requires action to be taken.
- Low risk fault information.
- High risk fault information.

**i** NOTE: Some messages may have different icons indicating that there is a fault with a specific function.

Some messages advise you to consult the Owner's Handbook. The table below indicates what you should do when one of these messages is displayed.

**WARNING: Do not ignore warning messages, failure to take appropriate action may result in injury or damage to the vehicle.**

## Instruments

### Driver Display

#### Messages

Message	Action
Brake fluid level low	Top up brake fluid, see Brake fluid, page 6.07.
Steering fluid level low	Top up the power steering fluid, see Power steering fluid, page 6.06.
Front left tyre pressure low	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Front right tyre pressure low	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear left tyre pressure low	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear right tyre pressure low	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Clutch over temperature	The vehicle has been subject to extreme operating conditions. This may be caused by excessive hill starts, repeated hard acceleration, driving slowly up steep hills for extended periods. As a result, the gearbox may limit engine torque. Stop the vehicle and allow the engine to idle in neutral for a few minutes.
Clutch temperature high	The vehicle has been subject to extreme operating conditions. This may be caused by excessive hill starts, repeated hard acceleration, driving slowly up steep hills for extended periods. As a result, the gearbox may limit engine torque. Stop the vehicle and allow the engine to idle in neutral for a few minutes.
ESC OFF not possible	The ESC deactivation conditions have not been met, see Electronic stability control (ESC), page 2.30.
Front left tyre over inflated	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.

## Instruments

### Driver Display

Message	Action
Front right tyre over inflated	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear left tyre over inflated	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear right tyre over inflated	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
ESC Reduced not possible	The ESC reduction conditions have not been met. See Electronic stability control (ESC), page 2.30.
Launch Mode unavailable	The conditions to enable a Launch have not been met, see Launch control, page 2.25.
Launch Mode aborted	See Launch control, page 2.25.
Cruise control unavailable at current vehicle speed	See Using cruise control, page 2.35.
Front left tyre over temperature	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Front right tyre over temperature	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear left tyre over temperature	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear right tyre over temperature	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Battery management active	The vehicle is not be able to supply enough voltage and has activate power saving mode. The climate control and steering will operate with reduced effect. See Vehicle electrical status, page 2.02.
Key battery critically low	See Replacing key fob battery, page 6.33.

Instruments

**Driver Display**

Message	Action
Key battery low	See Replacing key fob battery, page 6.33.
Windscreen washer fluid low	Top up windscreen washer fluid, see Windscreen washer fluid, page 6.08.

# Instruments

## Driver Display

### Messages

Message	Action
Brake fluid level low	Top up brake fluid, see Brake fluid, page 6.07.
Steering fluid level low	Top up the power steering fluid, see Power steering fluid, page 6.06.
Front left tyre pressure low	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Front right tyre pressure low	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear left tyre pressure low	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear right tyre pressure low	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Clutch over temperature	The vehicle has been subject to extreme operating conditions. This may be caused by excessive hill starts, repeated hard acceleration, driving slowly up steep hills for extended periods. As a result, the gearbox may limit engine torque. Stop the vehicle and allow the engine to idle in neutral for a few minutes.
Clutch temperature high	The vehicle has been subject to extreme operating conditions. This may be caused by excessive hill starts, repeated hard acceleration, driving slowly up steep hills for extended periods. As a result, the gearbox may limit engine torque. Stop the vehicle and allow the engine to idle in neutral for a few minutes.
ESC OFF not possible	The ESC deactivation conditions have not been met, see Electronic stability control (ESC), page 2.30.
Front left tyre over inflated	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.

## Instruments

### Driver Display

Message	Action
Front right tyre over inflated	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear left tyre over inflated	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear right tyre over inflated	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
ESC Reduced not possible	The ESC reduction conditions have not been met. See Electronic stability control (ESC), page 2.30.
Launch Mode unavailable	The conditions to enable a Launch have not been met, see Launch control, page 2.25.
Launch Mode aborted	See Launch control, page 2.25.
Cruise control unavailable at current vehicle speed	See Using cruise control, page 2.35.
Front left tyre over temperature	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Front right tyre over temperature	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear left tyre over temperature	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Rear right tyre over temperature	Stop the vehicle and inspect wheels and tyres, see Inspecting wheels and tyres, page 6.38.
Battery management active	The vehicle is not be able to supply enough voltage and has activate power saving mode. The climate control and steering will operate with reduced effect. See Vehicle electrical status, page 2.02.
Key battery critically low	See Replacing key fob battery, page 6.33.

Instruments

Driver Display

Message	Action
Key battery low	See Replacing key fob battery, page 6.33.
Windscreen washer fluid low	Top up windscreen washer fluid, see Windscreen washer fluid, page 6.08.




# Instruments

## Driver Display

### Display window


#### Non-Active/Comfort mode

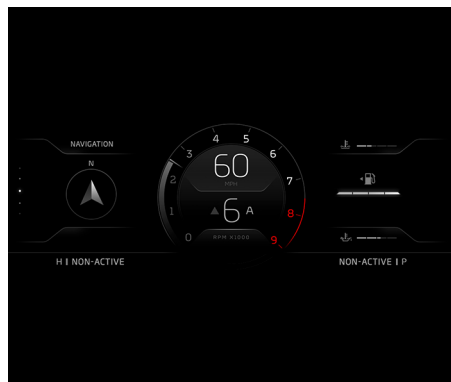

The display window provides the driver with visual access to the control settings and current performance values of the vehicle. The Driver Display, as indicated above, is displayed when the vehicle is in Non-Active/Comfort mode.

The information displayed on the centre section of the Driver Display will change dependent on the mode selected. See Sport mode, page 3.17 and Track mode, page 3.17.


#### Sport mode

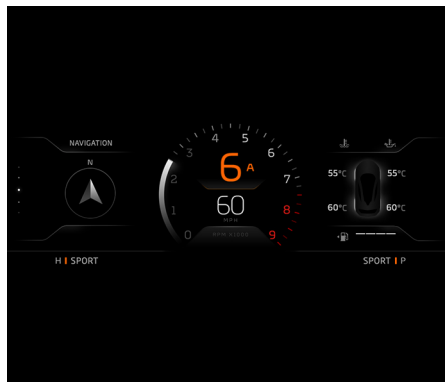

The display window provides the driver with visual access to the control settings and current performance values of the vehicle. The Driver Display, as indicated above, is displayed when the vehicle is in Sport mode.

The information displayed on the centre section of the Driver Display will change dependent on the mode selected. See Non-Active/Comfort mode, page 3.17 and Track mode, page 3.17.

#### Track mode

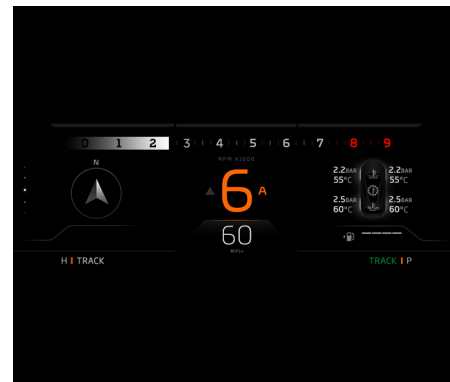

The display window provides the driver with visual access to the control settings and current performance values of the vehicle. The Driver Display, as indicated above, is displayed when the vehicle is in Track mode.


The information displayed on the centre section of the Driver Display will change dependent on the mode selected. See Non-Active/Comfort mode, page 3.17 and Sport mode, page 3.17.

For more information regarding shift lights see Shift lights, page 3.02.

## Instruments

### Driver Display

#### Gear position indicator

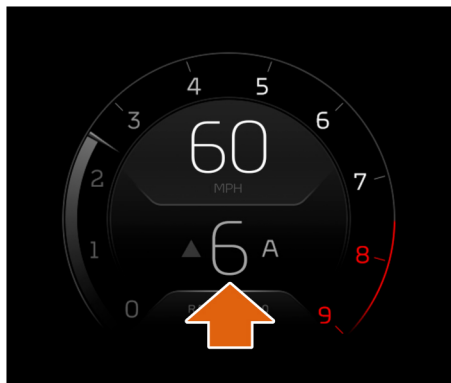


The gear indicator shows the current gear position selected: Neutral, Gear 1-7, or Reverse. The indicator will also show **A** or **M** depending on whether automatic or manual mode is selected.

The gear position indicator moves to the centre of the Driver Display, swapping position with the speedometer, when the vehicle is in Sport or Track mode. See Sport mode, page 3.17 and Track mode, page 3.17.

For more information, see Manual/automatic mode, page 2.17.

#### Handling and powertrain display

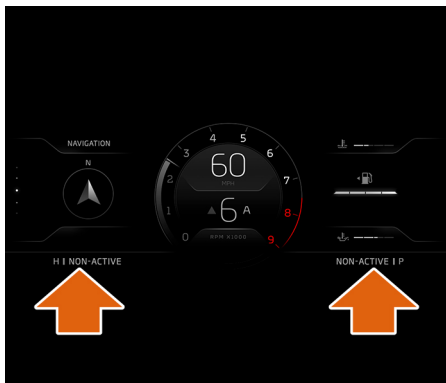

Confirmation that the **ACTIVE** button has not been pressed (Active Dynamics Panel is off), the handling and powertrain displays will both show Non-Active and will be displayed in white. The mode will not be implemented if all pre-conditions are not met, if the handling and powertrain mode selected is displayed. For more information on the different settings that are available, see Active dynamics control, page 2.20.

#### Electronic stability control (ESC) mode display




Confirmation of the electronic stability control mode selected is displayed. For more information on the different settings that are available, see Active dynamics control, page 2.20.

## Instruments

### Driver Display

#### Oil temperature

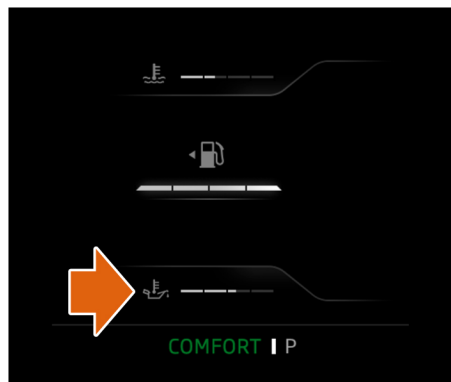

The oil temperature gauge is on the right-hand side of the Driver Display.


When the engine is first started the figures in the centre of the gauge will be BLUE. As the engine warms up, the colour will change to WHITE, indicating normal temperature.

High temperature is indicated if the figures turn RED.

If the gauge shows high temperature, RED, slow down until the temperature drops to normal. If the temperature continues to rise a warning message will appear on the Driver Display.

Stop the vehicle as soon as safety permits and contact your McLaren retailer immediately.

#### Water temperature

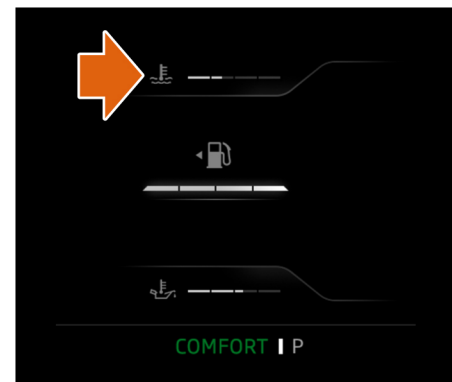

The water temperature is displayed in the form of a coloured gauge on the right-hand side of the Driver Display.

When the engine is first started the figures in the centre of the gauge will be BLUE. As the engine warms up, the colour will change to WHITE, indicating normal temperature.

High temperature is indicated if the figures turn RED.


# Instruments

## Driver Display

If the gauge shows high temperature, RED, slow down until the temperature drops to normal. If the temperature continues to rise a warning message will appear on the Driver Display.

Stop the vehicle as soon as safety permits and contact your McLaren retailer.

### Fuel level and range

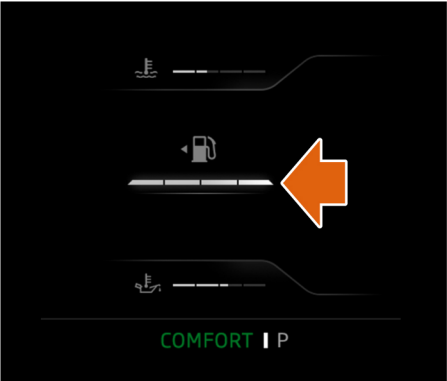

#### Fuel level

The fuel level is displayed in the form of a gauge on the right-hand side of the Driver Display.

#### Fuel range

Range is the estimated distance until the vehicle requires refuelling.





# Central Display

<b>Introduction.....</b>	<b>4.02</b>
Copyright.....	4.02
Other information.....	4.02
System controls.....	4.02
Overview.....	4.04
<b>Settings.....</b>	<b>4.05</b>
Overview.....	4.05
Connectivity.....	4.05
Time and Units.....	4.06
Lighting.....	4.10
Driving Preference.....	4.10
Climate.....	4.12
Phone.....	4.13
Radio.....	4.13
Media.....	4.14
HomeLink.....	4.15
Security.....	4.16
System.....	4.18
<b>Phone.....</b>	<b>4.19</b>
Overview.....	4.19
Device pairing.....	4.20
Making a call.....	4.22
Receiving a call.....	4.24
In-call options.....	4.24
Ending a call.....	4.25
Contacts.....	4.25
<b>Media.....</b>	<b>4.27</b>
Overview.....	4.27

Media controls.....	4.28
Connecting an external device.....	4.28
USB and iPod.....	4.29
Storage.....	4.30
Bluetooth audio.....	4.31
Radio.....	4.32
Radio controls.....	4.32
Radio data system (RDS).....	4.33
<b>Audio.....</b>	<b>4.34</b>
Overview.....	4.34
<b>Navigation.....</b>	<b>4.36</b>
Overview.....	4.36
Safety.....	4.36
Using Navigation.....	4.37
Setting a destination.....	4.37
<b>HomeLink.....</b>	<b>4.39</b>
Overview.....	4.39
Programming.....	4.39
Edit button label.....	4.40
Operation.....	4.41

# Central Display Introduction

## Copyright

McLaren Automotive is constantly updating the systems covered within this document, and therefore reserves the right to change the specification without notice at any time.

Every attempt is made to ensure that this information is totally accurate, however no liabilities for inaccuracies or the resulting consequences are accepted by McLaren Automotive or its Retailers, except in the case of personal injury caused by the negligence of these parties.

## Other information

The Wi-Fi trademark is owned by the “Wi-Fi Alliance” trade association. A manufacturer may use the “Wi-Fi” trademark to indicate that their certified product belongs to a class of wireless local area network (WLAN) devices based on the IEEE 802.11 standards.


The Bluetooth® word mark and logos are owned by the Bluetooth® SIG Inc., and any use of such marks by McLaren Automotive Ltd. is under licence. Bluetooth QDID: B019632; B017641; B017642.

Other trademarks and trade names are those of their respective owners.

## System controls


When the ignition is switched on, the McLaren Infotainment System (MIS) will start up and resume the previously used audio source if available. If the previously used source is not available, the MIS will display the home screen. If it was previously in standby mode, it will resume in standby mode showing the vehicle silhouette.



Press the  button to fully start the MIS and show the home screen.



# Central Display Introduction

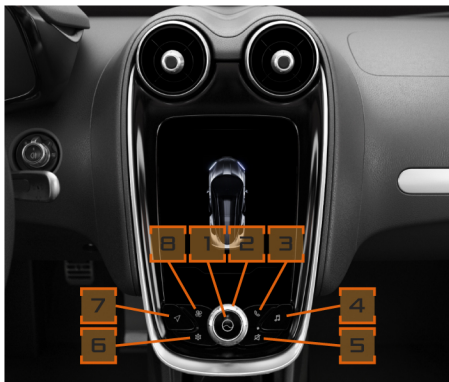

1. Home, on/standby
2. Volume
3. Phone
4. Media
5. Mute
6. Settings
7. Navigation
8. Climate control

## Home, on/standby



To switch the MIS on, press the home button (1).

When the MIS is on, a brief press of the button will return you to the home screen from anywhere in the system.

Press and hold the home button for three seconds to switch the MIS into standby mode. To switch from standby mode to on, simply press the home button.

To use the MIS when the vehicle's Ignition is off, press and hold the home button for one second to access Timer mode. In this mode the MIS will shut down after 15 minutes if not extended by the user.

## Volume

Rotate the control (2) clockwise to increase volume or anti-clockwise to reduce the volume.

A horizontal bar representing the volume setting will appear briefly on the screen.

Use the volume control to set the volume of the system that is currently active. The name of the active system will appear on the screen.

If the Mute button (5) has been used (See Mute, page 4.03), rotating the volume control in either direction will restore the sound.



**NOTE:** You can adjust any volume source by rotating the volume control dial. For temporary sources of audio (phone calls), this can be adjusted using the dial when the source is active.

## Phone



Press button (3) to activate the access the Phone function. See Phone, page 4.19.


## Media



Press the Media button (4) to access any stored or connected media. See Media, page 4.27.

## Mute



Press button (5) to mute all sound from the system. The mute symbol  will be briefly displayed on the screen.

Press again to restore the sound. The sound can also be restored by rotating the volume control (2) in either direction.

# Central Display

## Introduction

### Settings

### Navigation



Press the Navigation button (7) to launch the navigation function directly. See Navigation, page 4.36.

### Climate control



Press the Climate Control button (8) to access the Climate Control system directly. See Climate Control, page 5.04.

### Status Bar

A number of icons will appear at the top of the screen, when certain systems are in operation or features are active.



Phone signal strength indicator.



The Bluetooth® icon will be displayed in white when a device is connected. If no Bluetooth® device is connected the icon will not be displayed.

The following icons will be displayed in combination with the connected media device and integrated media system icons to indicate their status:



Media playing



Media paused



Media muted

### Overview

There are two home screens in the McLaren Infotainment System (MIS).

- Apps, page 4.04
- Widgets, page 4.04

### Apps




The Apps screen shows all of the available applications in the McLaren Infotainment System (MIS).

To access the Apps screen press the home button or touch the  icon.

### Widgets



The Widget screen displays Apps that are currently operating on your MIS. These interactive icons are called Widgets.

To access the Widget screen press the home button then touch the  symbol on the MIS.




**NOTE:** The features available may vary depending on the vehicle specification.

# Central Display Settings

## Overview

Touch the settings icon to display the Settings menu.

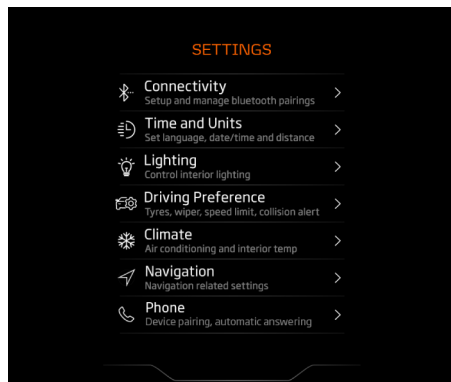

Alternatively, swipe down from the top of the screen and touch the settings icon to open the settings screen.

The following choices can be made from the Settings screen:


- Connectivity, page 4.05
- Time and Units, page 4.06
- Lighting, page 4.10

- Driving Preference, page 4.10
- Climate, page 4.12
- Navigation
- Phone, page 4.13
- Radio, page 4.13
- Media, page 4.14
- HomeLink, page 4.15
- Security, page 4.16
- System, page 4.18



NOTE: The settings available may vary depending on the vehicle specification.

## Connectivity

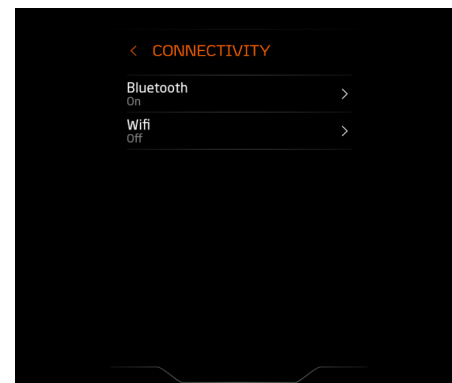


The following connectivity settings are available:

- Bluetooth, page 4.06
- Wi-Fi, page 4.06


# Central Display Settings

## Bluetooth

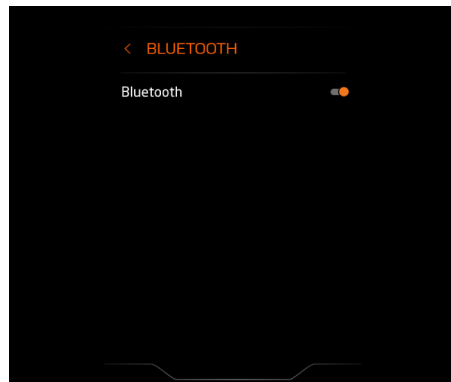

Touch Bluetooth to toggle the function On and Off.

## Wi-Fi

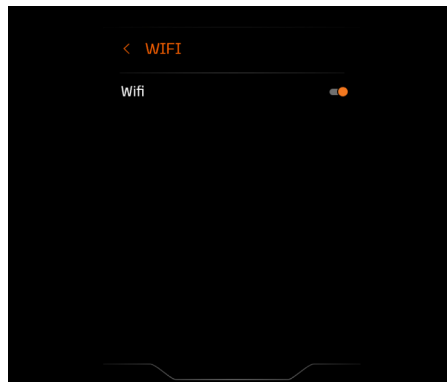

Touch Wi-Fi to toggle the function On and Off.


## Time and Units

The following time and units settings are available:

- Daylight saving time, page 4.07
- Language, page 4.07
- Time Format, page 4.08
- Time Adjustment, page 4.08
- Time Zone, page 4.08
- Speed & Distance Units, page 4.08
- Fuel Consumption Units, page 4.09
- Temperature Units, page 4.09
- Pressure Units, page 4.09


# Central Display Settings

## Daylight saving time

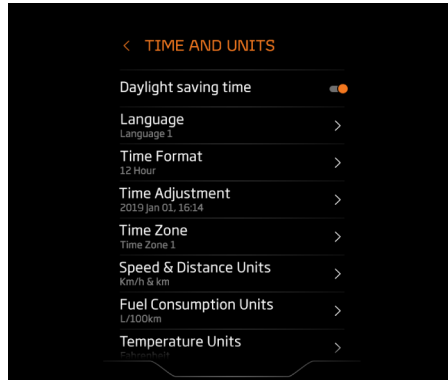

Touch Daylight saving time to toggle the function On or Off.

## Language

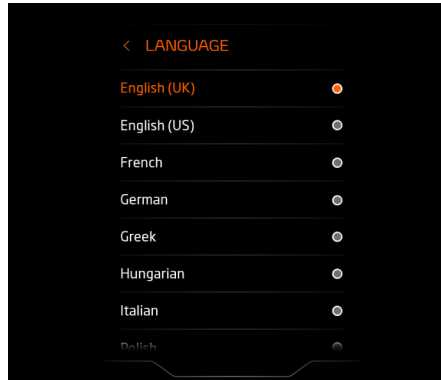


Select your preferred language from the list.  
The following choices are available:

- Arabic (Saudi)
- Chinese (Cantonese)
- Chinese (Mandarin)
- Czech
- Dutch
- English (Australia)
- English (UK)
- English (US)

- French
- German
- Greek
- Hungarian
- Italian
- Polish
- Portuguese (Brazil)
- Russian
- Spanish
- Thai
- Turkish

# Central Display Settings

## Time Format

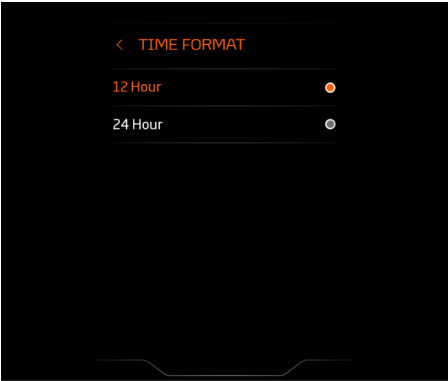

Select 12 hour or 24 hour format.

## Time Adjustment



GPS sync automatically adjusts the time using the GPS signal. Touch GPS Sync to toggle the function On or Off.


GPS sync must be set to Off before the time can be manually adjusted.

Use the on-screen controls to manually adjust the time and date.

## Time Zone

Select the appropriate time zone for your location.


## Speed & Distance Units

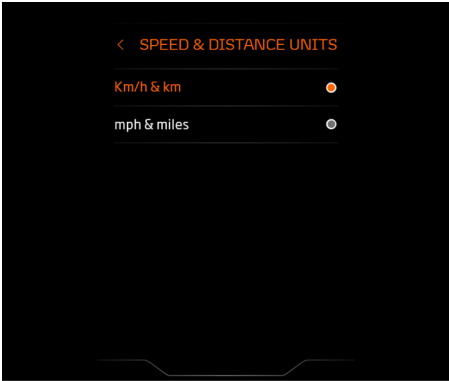

Select km/h & km or mph & miles.


# Central Display Settings

## Fuel Consumption Units

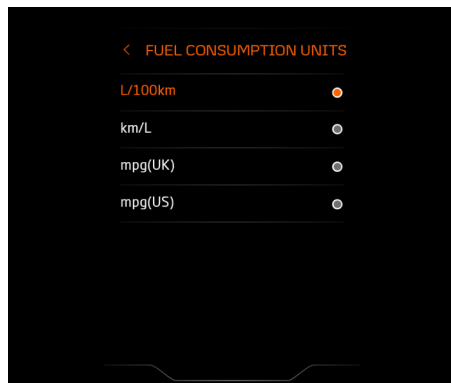


Select L/100km, km/L, mpg(UK) or mpg(US).

## Temperature Units

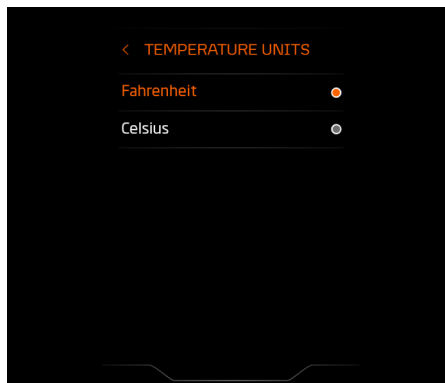

Select Fahrenheit or Celsius.


## Pressure Units

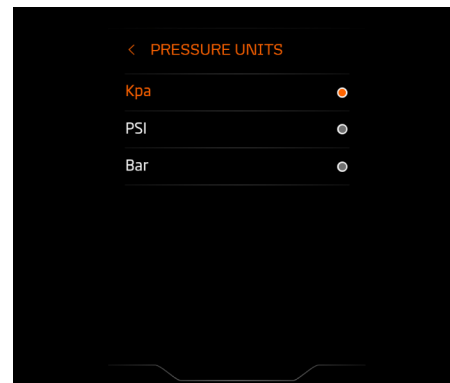

Select Kpa, PSI or Bar.

# Central Display Settings

## Lighting

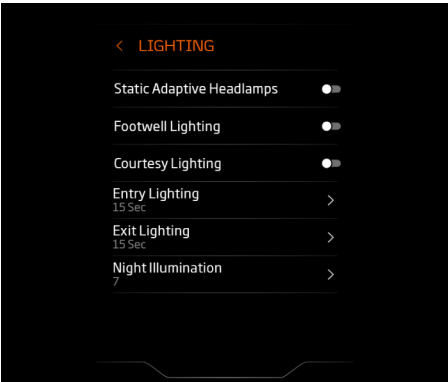

### Static Adaptive Headlamps

The Static Adaptive Headlamps adjust the beams when cornering, providing improved illumination in the direction of travel. Set Static Adaptive Headlamps **On** to activate this feature, to deactivate, select **Off**.

### Footwell and courtesy lighting

Footwell and courtesy lighting can be set to **On** or **Off** as desired.

### Entry and exit lighting


Entry and exit lighting illuminates the exterior lights when the vehicle is unlocked and locked. To activate these features, set the duration of each to **15 seconds**, **30 seconds**, **45 seconds** or **60 seconds**. To deactivate, select **Off**.

See Interior lighting, page 5.11 for more information.

### Night illumination

Night illumination provides low level interior lighting when the headlamps are on. To activate, select the desired level from the range of 1 to 7. To deactivate, select **Off**.

## Driving Preference

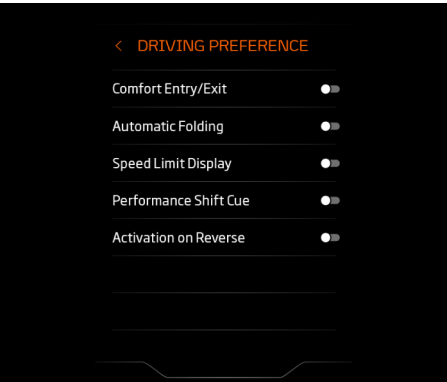

The following driving preference settings are available:

- Comfort Entry/Exit, page 4.11
- Automatic Folding, page 4.11
- Speed Limit Display, page 4.11
- Performance Shift Cue, page 4.11
- Activation on Reverse, page 4.11
- Wiper sensitivity, page 4.11
- Tyres, page 4.12



## Central Display Settings

- Wiper mode, page 4.12

### Comfort Entry/Exit

When comfort entry/exit is **On**, the driver's seat will move fully rearwards and to its lowest position and the steering wheel will move inwards and to its highest position when the engine is off and the driver's door is opened.

When comfort entry/exit is **Off**, the driver's seat and steering wheel will remain in position at all times.

### Automatic Folding

When **On** is selected, the exterior mirrors will fold as the vehicle is locked and unfold when the door is opened. If **Off** is selected, the mirrors will remain in their driving position.

### Speed Limit Display

When **On** is selected, the speed limit for the current road will be displayed on the Driver Display if available.

### Performance Shift Cue

Performance Shift Cue (PSC) is an audible shift indicator, which will sound during full throttle acceleration in manual gearbox mode, to indicate that an upshift is required to maintain optimum performance.


Touch Performance Shift Cue to toggle the function **On** or **Off**.

### Activation on Reverse

The Rear View Camera (RVC) is mounted in the centre of the rear bumper.

When **On** is selected, the live video feed will be displayed on the Driver Display when reverse gear is selected.


### Wiper sensitivity

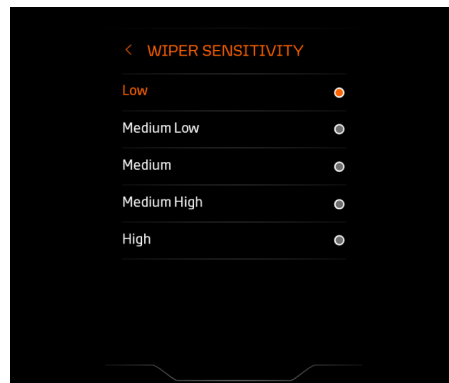

Select the sensitivity level to suit your preference for wiper operation. This setting will apply for the rain sensor sensitivity level only and will not affect the intermittent wipe time delay.


# Central Display Settings

## Tyres

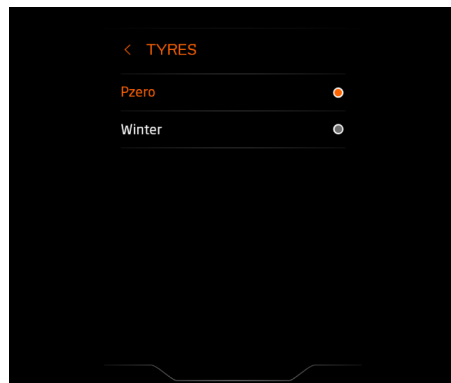

The display will show all the possible tyre types available. Select the tyres fitted to your vehicle.

## Wiper mode

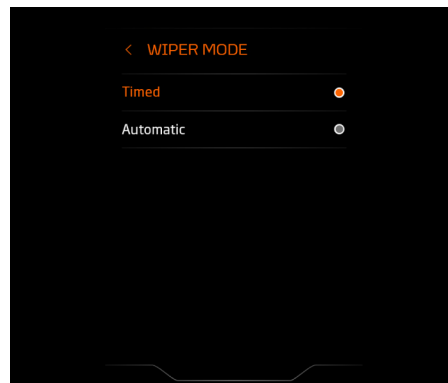


Select either **Automatic** or **Timed**.

With **Automatic** selected, wiper operation in the auto position will be controlled by the rain sensor. To set the sensitivity of the rain sensor, see Wiper sensitivity, page 4.11.

With **Timed** selected, wiper operation in the auto position will be an intermittent wipe.

## Climate

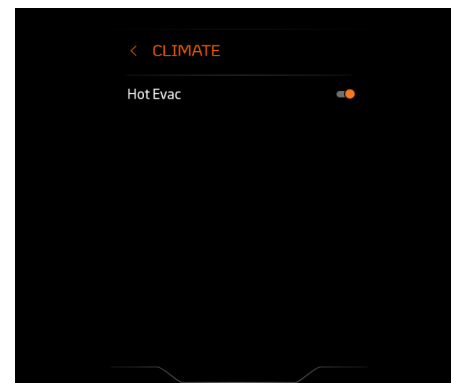


The hot evac function is operated using the key fob, see Hot Evac, page 5.05.

Touch **Hot evac** to toggle the function **On** or **Off**.

# Central Display Settings


## Phone

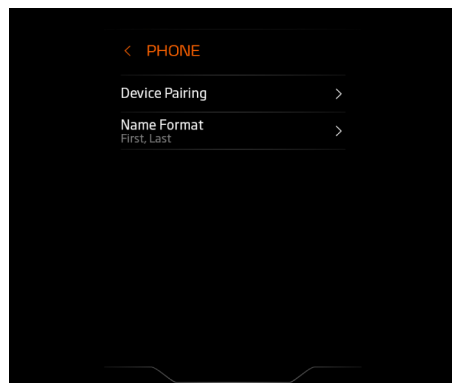

The following phone settings are available:

- Device pairing, page 4.20
- Name Format, page 4.13


## Name Format

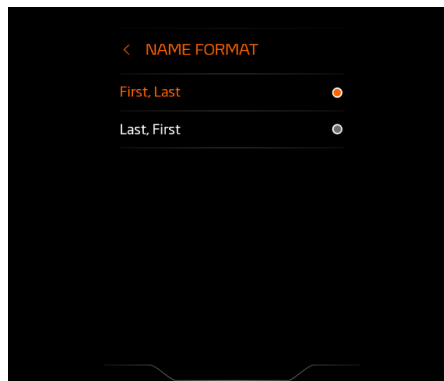

Change the format of how your contacts names are displayed and sorted.

Select between **First, Last** or **Last, First**.

## Radio

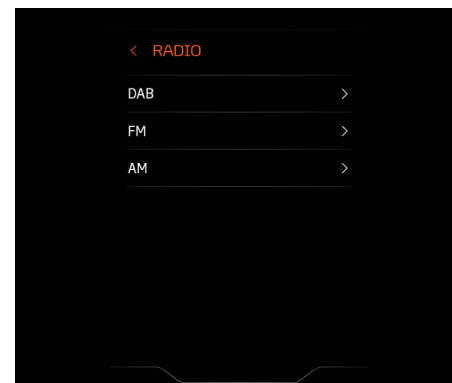

The following radio settings are available:

- DAB, page 4.13
- FM, page 4.14
- AM, page 4.14

### DAB

L-Band tuning can be set to **On**, if available in your country.

## Central Display Settings


Set DAB-DAB linking to **On** to enable automatic tuning to alternative DAB broadcasts when reception of the currently tuned DAB station is reduced or lost.

Set DAB-FM linking to **On** to enable automatic tuning to alternative FM broadcasts when reception of the currently tuned DAB station is reduced or lost.

Enable DAB related services by selecting **On**.

Select **Off** to deactivate any feature.

### FM

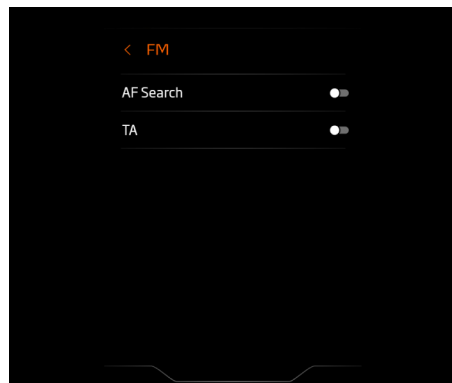


The Alternative Frequency (AF) feature automatically selects the strongest signal for radio reception. As your vehicle moves away from one transmitter and nearer to another, AF will switch transmitters to maintain the best reception possible. Set **AF Search** to **On** to enable this feature, select **Off** to deactivate.

Traffic Announcement (TA) interrupts radio and media playback to inform the driver of traffic conditions. Touch **TA** to toggle the function **On** or **Off**.

### AM

Touch **AM** to view the AM settings.

## Media

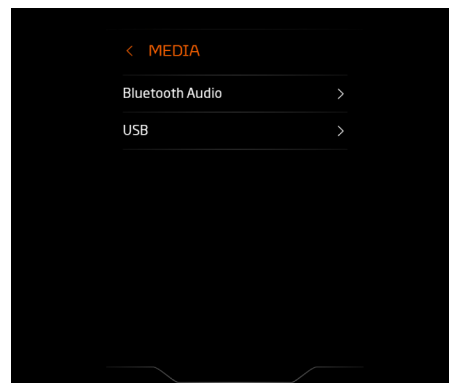

The following media settings are available:

- Bluetooth audio, page 4.14
- USB, page 4.15

### Bluetooth audio

See Device pairing, page 4.20 to pair a new Bluetooth® device.


Alternatively, select from a list of devices you have already paired with your McLaren.

## Central Display Settings

### USB

Select this option to view and manage files stored on any connected USB device.

### HomeLink

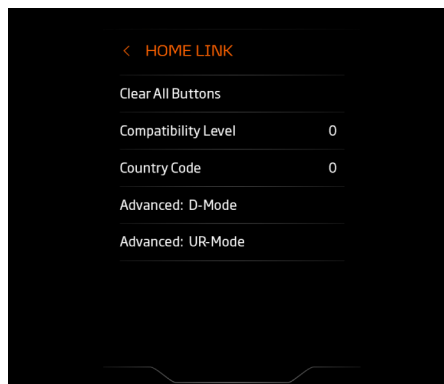

The following HomeLink® settings are available:

- Clear all buttons, page 4.15
- Compatibility level, page 4.15
- Country code, page 4.15
- Advanced: D-mode, page 4.15
- Advanced: UR-mode, page 4.15

#### Clear all buttons

Touch clear all buttons to remove the settings applied to HomeLink® buttons 1, 2 & 3.

### Compatibility level

Select the compatibility level to suit your HomeLink® controlled devices.

### Country code

Select the country code to suit your HomeLink® controlled devices.

### Advanced: D-mode


Select Advanced D-mode to see D-mode information.

### Advanced: UR-mode

Select UR-mode to see UR-mode information.

# Central Display Settings

## Security

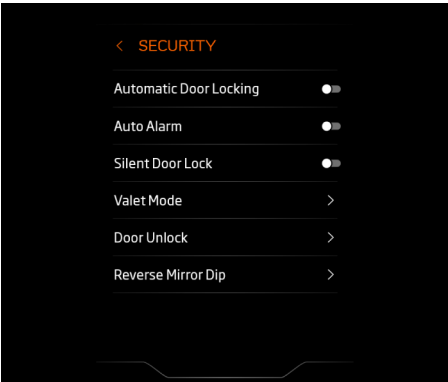

The following security settings are available:

- Automatic door locking, page 4.16
- Auto alarm, page 4.16
- Silent Door Lock, page 4.16
- Valet Mode, page 4.16
- Door unlock, page 4.17
- Reverse mirror dip, page 4.17

### Automatic door locking

When you receive the vehicle, automatic door locking will be set to **On**.

The vehicle doors will automatically lock as the vehicle moves off.

Select **Off** to deactivate this feature. The doors remain unlocked after moving off, unless they are locked manually.

### Auto alarm

When auto alarm is set to **On**, the vehicle will automatically lock and the alarm set if unlocked and left for 30 seconds with all doors, luggage compartment lid and service access panels left fully closed. Select **Off** to deactivate this feature.


### Silent Door Lock

When **On** is selected, the direction indicators are disabled when locking or unlocking using the keyless entry system.

If **Off** is selected, the direction indicators always flash when the vehicle is locked or unlocked, irrespective of the method used.

All other lock and unlock features remain active.

## Valet Mode

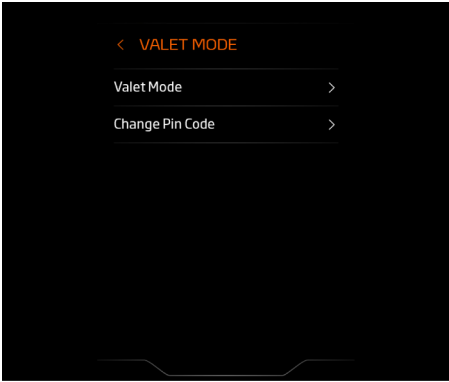

With valet mode on, the speed of the vehicle is limited to 35 mph (55 km/h), the Active Dynamics Panel is disabled, the luggage compartments, centre console stowage compartment and glove box remain locked, and a confirmation message appears on the instrument cluster.

To switch on valet mode you must input a PIN code after selecting **Valet mode**.

Enter the four digit PIN code using on-screen key pad, then touch **Enter** to confirm. An asterisk replaces each number as it is entered.


## Central Display Settings

The factory set PIN code is 0000. Use this PIN code the first time to switch on valet mode. You should change this PIN code at the earliest opportunity.

Select **Change PIN code**, then enter the old PIN code, followed by a new PIN code using on-screen key pad, then touch **Enter** to confirm.

When valet mode is **On**, enter the PIN code to switch valet mode off.

### Door unlock

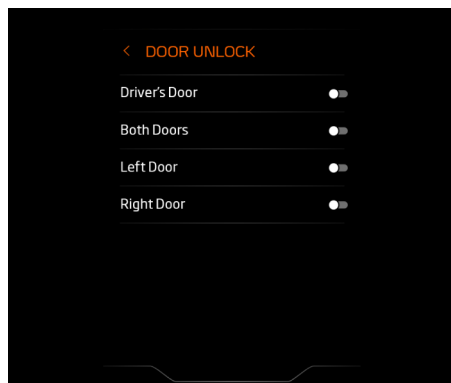


When **Driver's door** is selected, only the driver's door will unlock when the vehicle is unlocked with either the key fob or door button.

When **Both doors** is selected, both doors will unlock when the vehicle is unlocked using either the key fob or door button.

All closures will lock with either **Driver's door** or **Both doors** selected.

### Reverse mirror dip

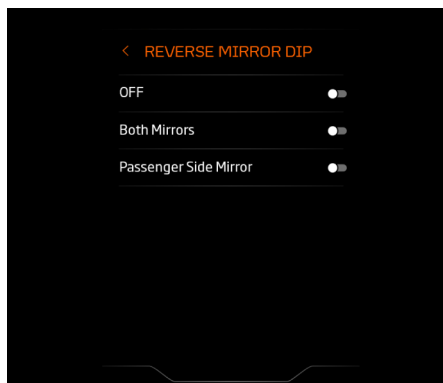

Select **Off**, **Both mirrors** or **Passenger side mirror**.

**Off** - no mirror dip will occur when reverse is engaged.

**Both mirrors** - both mirrors will dip when reverse is engaged.

**Passenger side mirror** - passenger's side mirror will dip when reverse is engaged.


To set the amount the mirrors will dip when reverse is selected:

1. Switch the ignition on.
2. Select **Both mirrors** or **Passenger side mirror** in the mirror dip section of the cluster.
3. Depress the brake pedal and select reverse gear.
4. Adjust mirror(s) to desired position, see *Exterior mirrors*, page 1.36.
5. Take vehicle out of reverse.

The next time reverse is selected, the vehicle will automatically move the mirror(s) to the previously set offset from the normal position.

# Central Display Settings

## System

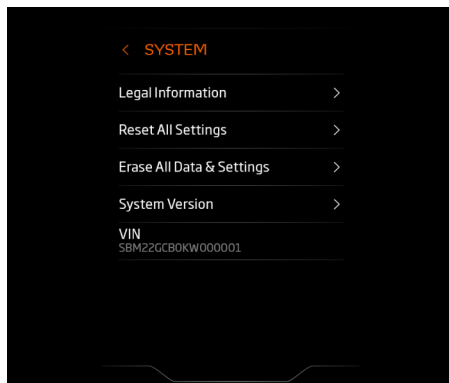


The following system settings are available:

- Legal information, page 4.18
- Reset all settings, page 4.18
- Erase all data and settings, page 4.18
- System version, page 4.18
- VIN , page 4.18

## Legal information


Select this option to view the available legal information relating to your vehicle and the McLaren Infotainment System (MIS).

## Reset all settings

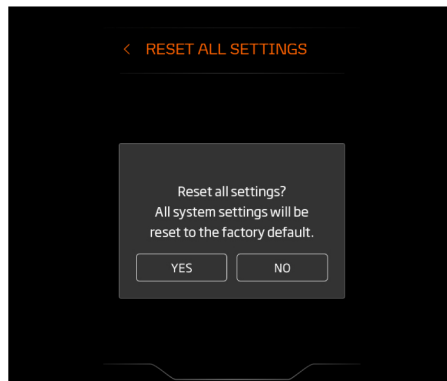

Select **Yes** to reset all vehicle and MIS settings to the factory default.

## Erase all data and settings

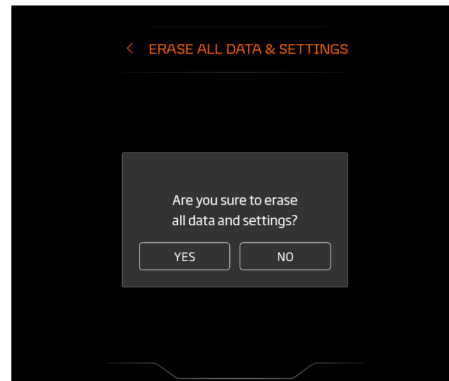

Select **Yes** to erase all data and reset all vehicle and the MIS settings to the factory default.

## System version

Displays the software version installed on the MIS.

## VIN

Displays the vehicle identification number (VIN). See Vehicle identification number (VIN), page 7.03.



# Central Display Phone

## Overview



The McLaren Infotainment System (MIS) provides the facility to make and receive calls safely and hands-free, by connecting to your mobile phone using Bluetooth®.

The connection provides you with access to the contacts and call history stored on your phone.

The MIS can deal with conference calls, if supported by the connected phone, but cannot initiate them.



**WARNING: Do not allow yourself to become distracted by the phone while driving. You could cause an accident.**

## Safety precautions



**WARNING: Never attempt to operate the phone while the vehicle is moving. You could become distracted and cause an accident.**



**WARNING: Always store your phone securely. Unsecured objects can become dangerous missiles in the event of an accident.**



**WARNING: Always switch off the phone in areas with a high risk of explosion. These areas include filling stations, fuel storage areas or chemical factories, as well as places where the air contains fuel vapour, chemicals or metal dust.**

**The operation of cardiac pacemakers or hearing aids may be impaired when the phone is in use. Check with your doctor or the manufacturer of the equipment to establish if anyone who is using such devices, is sufficiently protected against high frequency energy.**

McLaren recommend that, to avoid potential interference, a minimum distance of 15 cm (6 in) is maintained between a wireless phone antenna and a cardiac pacemaker.

## Bluetooth®

Bluetooth® is the short-range radio frequency (RF) technology which allows electronic devices to communicate with each other wirelessly.

Compatible Bluetooth® phones can be used in conjunction with the MIS.

The MIS system supports Bluetooth® Hands-Free Profile 1.6 (HFP 1.6). If the mobile phone connected to the system also supports this profile, features such as battery meter and signal strength may be displayed on the screen.

Your mobile phone must be paired and connected with the MIS before it can be operated, see Device pairing, page 4.20 and Connecting a phone, page 4.21.

# Central Display Phone


## Device pairing

1. By default, Bluetooth® will be switched on and the McLaren Infotainment System (MIS) will be in discoverable mode. If Bluetooth® is not on, switch on manually, see Bluetooth, page 4.06.
2. Using your mobile phone, select the search for Bluetooth® devices function.




**NOTE:** On some phones, this is referred to as a new paired device. Refer to your phone's operating instructions for the exact description.

3. Select "MIS" from the list of available devices.
4. The MIS will display a passkey.

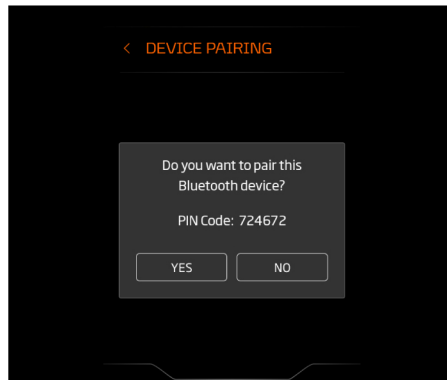


5. Select **Yes** to confirm that the passkey displayed on the MIS is the same as the passkey displayed on your phone.
6. Select **Pair** on your phone.

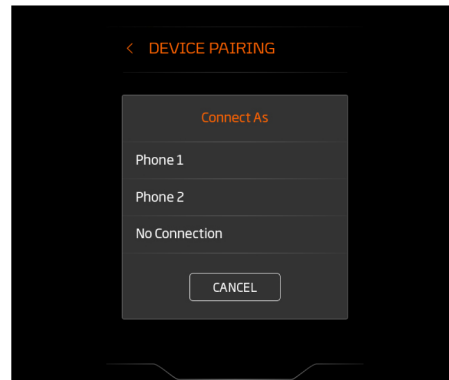

7. Once your phone has paired and connected to the MIS, select whether to connect as **Phone 1** or **Phone 2**. Select **No connection** if the Bluetooth® device is to be used for audio streaming only.

## Central Display Phone

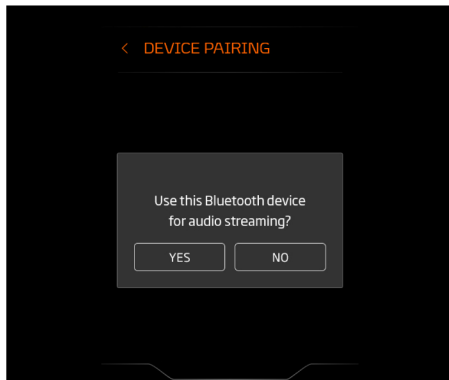

8. If supported by your phone, the MIS will ask if you wish to use your phone for Bluetooth® audio streaming, select Yes to enable this feature.
9. While pairing some devices which support internet connection sharing via Bluetooth®, you may have to choose which Access Point Name (APN) your device will use to access the internet.  
  
Select the option appropriate to your device and contract.  
  
Internet sharing via Bluetooth® can be disabled using the settings on your phone.

10. Once your phone has been paired and connected to the MIS, it will connect automatically whenever it comes within range.
11. If it does not automatically connect, it will be necessary to connect manually to the MIS, using the mobile phone controls.

**i** **NOTE:** Some phones must be manually connected.  
Some phones require the connection to be authorised each time. Set MIS as authorised in the phone's known device list, to prevent this.

See Phone, page 4.13 for detail of all options available.

### Pairing additional devices

The procedure for connecting additional devices is the same as when pairing the first phone, see Device pairing, page 4.20.

A maximum of 12 devices can be paired with the MIS, but only two can be connected at a time.

**i** **NOTE:** If the maximum number of devices are already connected to the MIS, an additional device can be paired, but will not be connected. The original devices will remain connected to the MIS.

### Connecting a phone


If you have already paired a phone, the MIS will automatically reconnect to it when the phone comes within range unless other devices are connected.

**i** **NOTE:** Some phones must be manually connected.  
Some phones require the connection to be authorised each time. Set MIS as authorised in the phone's known device list, to prevent this.

Your phone will be disconnected when the MIS or the vehicle is switched off. Automatic reconnection may take several seconds when the vehicle or the MIS is switched on again.

# Central Display Phone


## Making a call

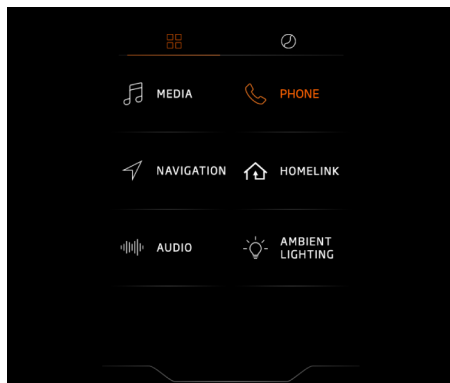



There are a number of ways of making a call, these are explained in the following pages.


To switch to the phone application, touch the Phone icon from the McLaren Infotainment System (MIS) Home screen or press the Phone button.

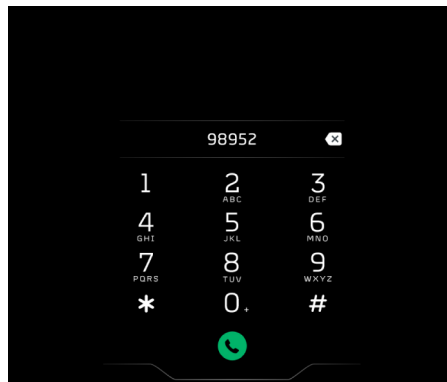
## Using the keypad




1. From the Phone screen, touch the  icon.
2. Phone numbers can be entered using the on-screen keypad.

If you enter an incorrect number or digit, touch the  icon to delete the last digit.


3. Touch the  icon when the complete number is displayed on the screen to begin the call.

 **NOTE:** The circle around the contact symbol is yellow during dialling, and changes to green when the call is connected.

4. A call can be cancelled, while the system is dialling, by touching End Call or the phone button.

 **NOTE:** Any media or radio play will be muted while a call is in progress.

## Using contacts

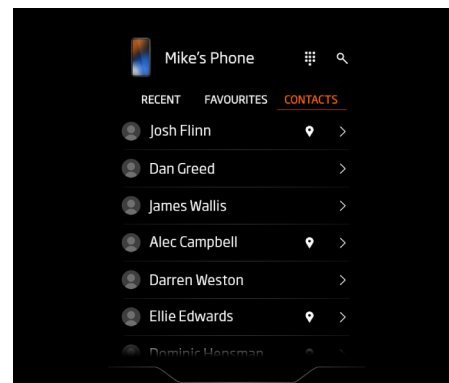

1. From the Phone screen, touch the CONTACTS tab.

## Central Display Phone


2. Once your contacts are displayed, a specific person can be found by scrolling through the list.
3. Select a contact to view all available phone numbers for that contact. Touch the required number to begin the call.

**i** NOTE: The circle around the contact symbol is yellow during dialling, and changes to green when the call is connected.

4. A call can be cancelled, while the system is dialling, by touching End Call or the phone button.

**i** NOTE: Any media or radio play will be muted while a call is in progress.

### Using call history

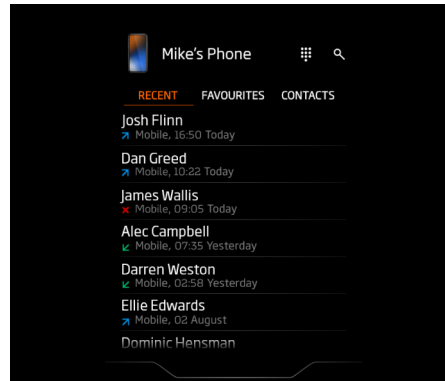


1. From the Phone screen, touch the RECENT tab.
2. A list of dialled, missed and received calls will be displayed in chronological order with most recent on top.
3. Touch the required contact to begin the call.

**i** NOTE: The circle around the contact symbol is yellow during dialling, and changes to green when the call is connected.

4. A call can be cancelled, while the system is dialling, by touching End Call or the phone button.

**i** NOTE: Any media or radio play will be muted while a call is in progress.

### Favourites

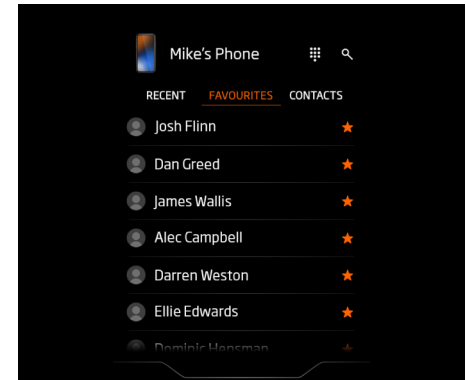

1. From the Phone screen touch the favourites tab.
2. A list of your favourite contacts will be displayed.
3. Touch the required contact to begin the call.

## Central Display Phone




NOTE: The circle around the contact symbol is yellow during dialling, and changes to green when the call is connected.

4. A call can be cancelled, while the system is dialling, by touching End Call or the phone button.



NOTE: Any media or radio play will be muted while a call is in progress.

### Receiving a call

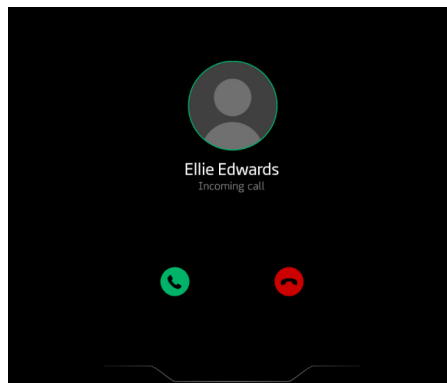

When you receive an incoming call, the McLaren Infotainment System (MIS) will display any caller details which are stored on your phone and synchronised with the MIS.

To accept the call, touch the green  icon.

To decline the call, touch the red  icon.

### In-call options



Touch the keypad icon to launch the on-screen keypad, touch again to hide it.



Touch the mute icon to disable the microphone, touch again to enable it.



Touch the pause icon to put the call on hold.



Touch the plus icon to add another caller. Select a contact from your contacts list and begin a conference call.




Touch the merge icon to merge two calls into a conference call. The merge icon replaces the plus icon when the option is available.


Press the home button to view the home screen during a phone call. You can access other features of the McLaren Infotainment System (MIS) during a call. The current call will be minimised at the top of the display.

# Central Display Phone


## Ending a call

Touch End Call to end the phone call. The screen will return to the phone menu.

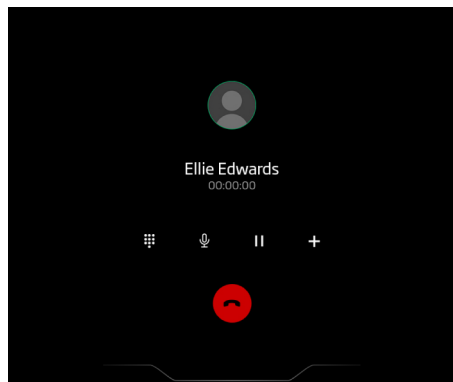


 To end a call while viewing a different system screen, touch the red end call icon adjacent to the call in progress display at the top of the screen.


## Contacts

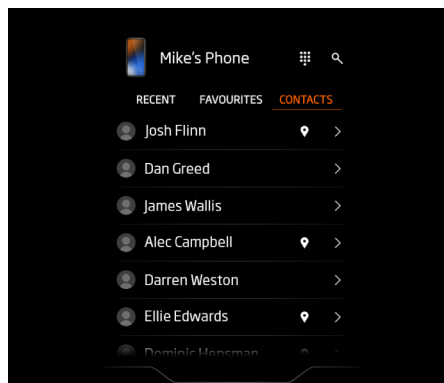

1. From the Phone screen, touch the contact tab.


 **NOTE:** Dependent on phone model, pictures of contacts stored on your phone, will be displayed on the screen alongside the contact name.

2. If your contact list extends beyond the depth of a single screen, scroll up and down the list by swiping your finger upwards or downwards on the screen.


 **NOTE:** Contacts can be sorted by either first name or last name, see Name Format, page 4.13 for more information.

3. Alternatively, you can search for a contact using the on-screen keyboard, see Search, page 4.26.

4. Select a contact to view all available information for that contact.

 **NOTE:** Dependent on phone model, if pictures of contacts are stored on your phone, these will be displayed on the screen during a call if contacts have been synchronised with the MIS.


5. Touch the required number to begin the call.




 **NOTE:** The circle around the contact symbol is yellow during dialling, and changes to green when the call is connected.

 **NOTE:** Alternatively touch  to begin navigation to the contacts address.


6. A call can be cancelled, while the system is dialling, by touching End Call or phone button.


## Central Display Phone


 NOTE: Any media or radio play will be muted while a call is in progress.

 NOTE: To tag a contact as a favourite touch . Touch  again to remove them from your favourites.


### Search


1. Press the  icon from the contacts tab.
2. Using the on-screen keyboard, enter at least one character to filter the displayed contacts.

If you enter an incorrect number or digit, touch the  icon to delete the last digit.


 NOTE: Contacts can be sorted by either first name or last name, see Name Format, page 4.13 for more information.

3. Select a contact to view all available phone numbers for that contact. Touch the required number to begin the call.

 NOTE: The circle around the contact symbol is yellow during dialling, and changes to green when the call is connected.

 NOTE: Dependent on phone model, if pictures of contacts are stored on your phone, these will be displayed on the screen during a call if contacts have been synchronised with the MIS.


4. A call can be cancelled, while the system is dialling, by touching End Call or the phone button.

 NOTE: Any media or radio play will be muted while a call is in progress.



# Central Display Media


## Overview

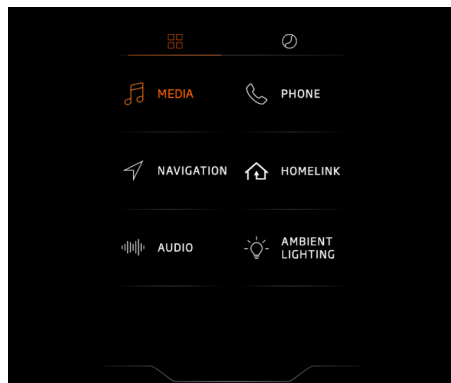

The functions of the media player can be accessed by touching the Media icon from the McLaren Infotainment System (MIS) Home screen or press the Media button.

Selecting Media will present the available audio sources.

## Audio sources

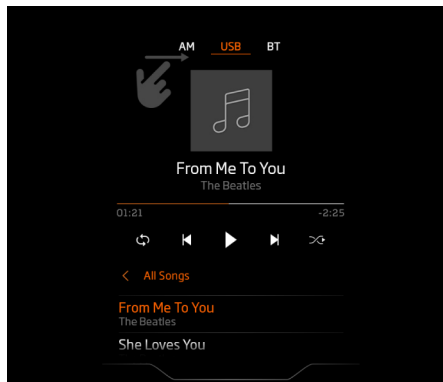

If music devices are connected to the USB port, the auxiliary socket and Bluetooth®, all sources will appear on the screen, with their respective symbols at the top of the screen.

**NOTE:** If a device is not available, it will be greyed out in the list.

## Supported media devices

For a list of current compatible media devices, please contact your McLaren Retailer.

## Supported media files

The media system can play files of the following format/encoding combinations.

### Audio:


- MP3
- AAC
- WMA
- OGG Vorbis
- AC3
- AMR
- FLAC
- WAV
- AIFF

### Video:

- MPEG1
- MPEG2
- H.264/MPEG-4 AVC
- MPEG-4 Video
- DivX 4/5
- XviD HT
- VC-1

# Central Display Media

## Media controls

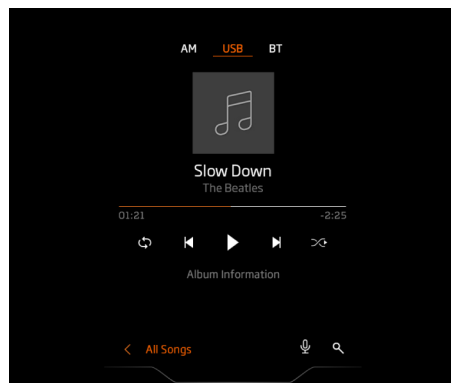

Music played from the internal storage or connected device can be controlled using the McLaren Infotainment System (MIS) touch screen.

Once music has started playing, the artist's name, the album title and the song title will appear on the screen. If there is any artwork associated with the song, that will also be displayed, if no artwork is available, a representation of a musical note will be shown.

Move forward or backward through the current track by touching and holding the or icons. Alternatively, you can touch and drag the progress bar to move through the track.

A single touch of will skip to the next track. A single touch of icons will skip to the start of the current track, a second touch will skip to the previous track.

Swipe gestures can also be used to skip tracks. Swipe the screen from left to right in order to skip to the next track. Swipe the screen from right to left in order to skip to the start of a track, swipe again to skip to the previous track.

Touch the or icon to skip to the next or previous folder.

To pause a track, touch the icon. To resume play, touch the icon. A track can also be paused or played by tapping the screen.

To randomly play through the current selection, press the icon. The icon will turn amber when random is active.

To activate the repeat feature, press the icon. The icon will turn amber when repeat is active.

**NOTE:** This function is not available for Bluetooth® devices.

## Connecting an external device



Open the centre console and connect the device as required.

Ensure that the centre console is closed before driving.

1. USB1 or iPod
2. USB2

See Device pairing, page 4.20 for details on connecting a Bluetooth® device.

## Central Display Media


- i** NOTE: Any internal batteries fitted to your device will be charged through either USB port.
- i** NOTE: The USB1 port has a high power output suitable for charging mobile devices.

### USB and iPod

Connect a USB device, see Connecting an external device, page 4.28.

From the Media screen, select USB.


- i** NOTE: Any internal batteries fitted to your device will be charged through the USB port.

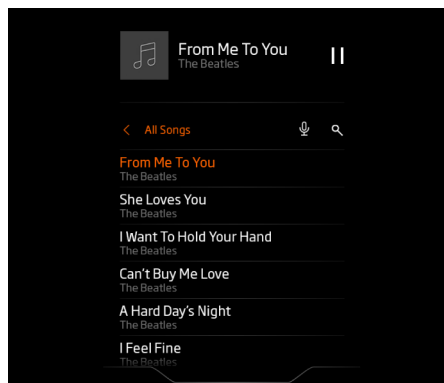

- All songs
- Artist
- Album
- Genre


- Folder

Browse to the folder or playlist you wish to listen to, select a track to begin playing.

Touch  and use the on-screen keyboard to search for audio files.




### Copy to storage

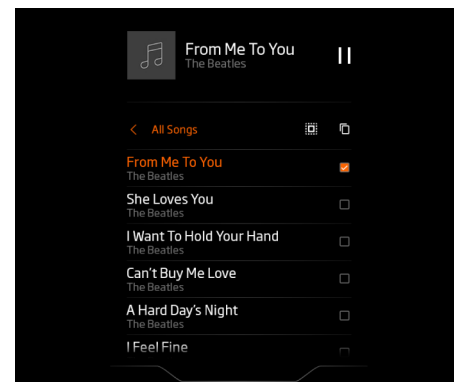Use the copy function to copy music files from a USB device to storage.



1. Press and hold the track or folder you want to copy.

## Central Display Media

2. Select other tracks or folders you want to copy, or touch  to select all items in the current list.
3. Touch  to copy the files selected.
4. Chose the destination folder, or touch  to create a new folder.
5. Touch PASTE to paste the items.

### Storage


From the Media screen, select Storage.

Browse to the folder or playlist you wish to listen to, select a track to begin playing.



### Import files

Files can be imported from a connected USB device. See Copy to storage, page 4.29.

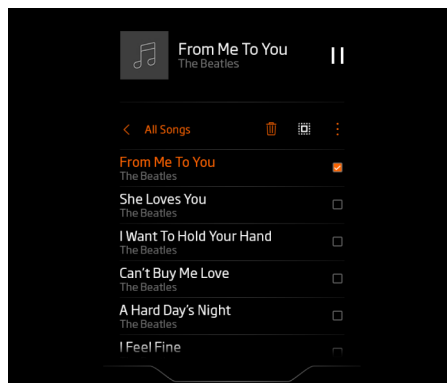
### Erase storage




1. Press and hold the track or folder you want to erase.

2. Select other tracks or folders you want to erase, or touch  to select all items in the current list
3. Touch  to erase the selected files.
4. Confirm that you are sure you want to delete the selected items.

### Rename

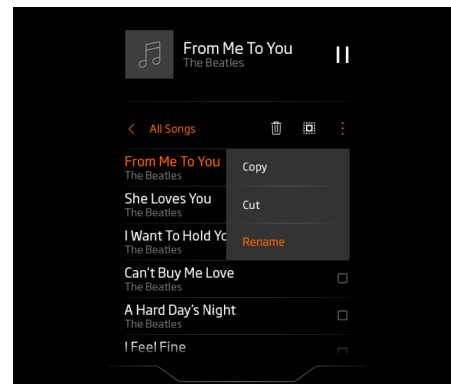


1. Press and hold the track or folder you want to rename.
2. Touch  to open the menu.
3. Select Rename, and enter the new name.

## Central Display Media

4. Touch **OK** to confirm the new name.

### Move or Copy

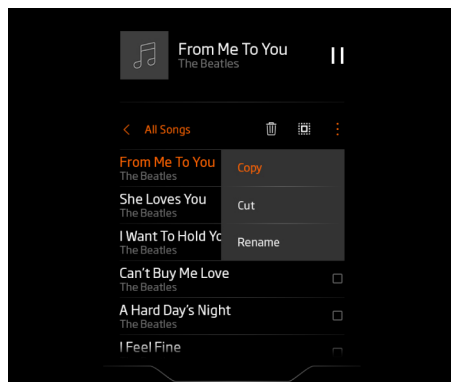

1. Press and hold the track or folder you want to move or copy to another folder.
2. Select other tracks or folders you want to move or copy, or touch  to select all items in the current list.
3. Touch  to open the menu.
4. Select the destination folder, or touch  to create a new folder.
5. Touch **Paste** move or copy the items to the selected folder.

### Bluetooth audio

Connect a Bluetooth® device, see Device pairing, page 4.20.

From the Media screen, select the Bluetooth audio source.

Music may begin playing automatically, depending on the Bluetooth® device connected.

If music does not start playing automatically, select play on the device itself.


The Bluetooth® symbol  will appear at the top of the screen while music is playing.

The volume can be adjusted using the McLaren Infotainment System (MIS), see System controls, page 4.02.

Audio volume is dependent on the output volume of the device attached, and the MIS volume.

# Central Display Media

## Radio

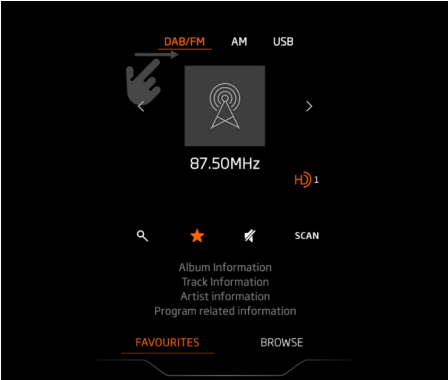

- DAB/FM
- AM


Select one of the radio functions in the McLaren Infotainment System (MIS) media screen. Swipe gestures are used to switch audio sources. The radio will launch and tune to the previously selected station.

## Wavebands

The radio can receive and tune DAB, FM and AM stations.

The waveband currently selected is displayed at the top of the screen.

## Radio controls

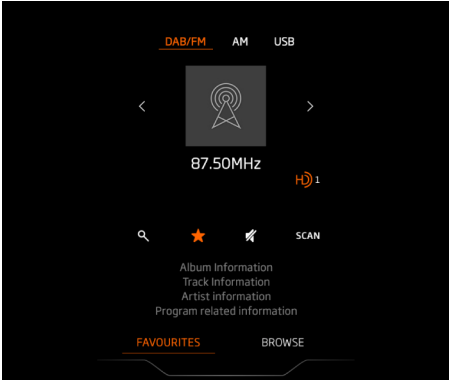


A station can be selected by either manually tuning or selecting a favourite. The frequency will be displayed on the screen along with the station name if available.

**i** **NOTE:** If the station frequency changes, the favourite preset will have to be set again.

To automatically tune to the previous or next available station, touching the ◀ or ▶ icons.

Swipe gestures can also be used to tune the radio.

## Central Display Media

Touch the  icon to search radio stations and the keypad will appear.

Touch the  icon to save a station as a favourite.

Touch the  icon to mute the radio.

Touch the **SCAN** to scan for available radio stations.

### Radio data system (RDS)

RDS is a system which allows digital data to be sent to radio receivers at the same time as the FM signal.

Two types of digital data can be received and their status shown on the screen: Alternative Frequencies and Traffic Alerts.

### Alternative frequencies (AF)

The AF feature automatically selects the strongest signal for radio reception.

As your vehicle moves away from one transmitter and nearer to another, AF will switch transmitters to maintain the best reception possible.

AF can be toggled **On** or **Off** in the Settings menu, see FM, page 4.14.

### Traffic alert (TA)

Traffic alerts interrupt radio and media playback to inform the driver of traffic conditions.


TA can be toggled **On** or **Off** in the Settings menu, see FM, page 4.14.

# Central Display Audio

## Overview

Touch the audio icon to display the audio setting screen.

The audio settings apply to all functions of the McLaren Infotainment System (MIS).

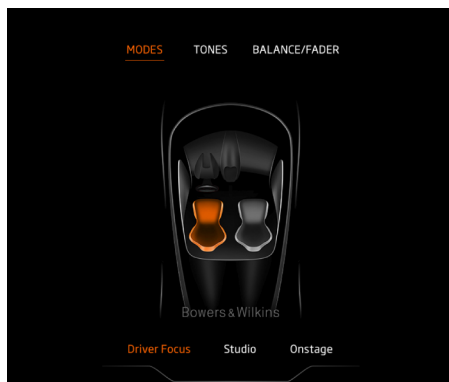

Swipe across the top of the screen to select from the following options:


- Modes, page 4.34
- Tones, page 4.34
- Balance/Fader, page 4.35

## Modes

There are 3 preset audio modes.

- Driver Focus - True sound. As the artist intended.
- Studio - Optimised listening for the driver seat. This is the default mode.
- Onstage - Surround Sound Envelopment.

## Tones

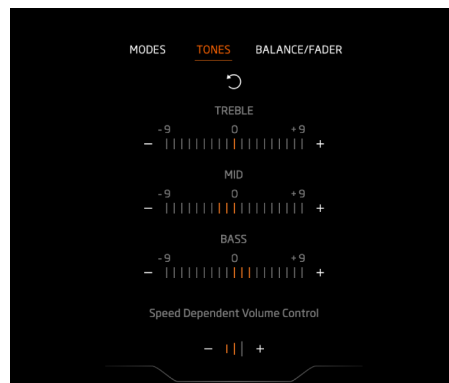

## Treble

Touch the + or - icons adjacent to treble to achieve the desired sound reproduction quality. The range is 0 to +9 or 0 to -9 in increments of 1.

## Mid

Touch the + or - icons adjacent to mid to achieve the desired sound from the speakers. The range is 0 to L9 or 0 to R9 in increments of 1.

## Bass

Touch the + or - icons adjacent to bass to achieve the desired sound reproduction quality. The range is 0 to +9 or 0 to -9 in increments of 1.

## Speed dependent volume


This feature increases the volume setting at higher vehicle speeds to compensate for the background mechanical noise.

Repeatedly touch the icon to change between Off, 1, 2, and 3. Select the setting which offers the optimum sound reproduction.



## Central Display Audio

### Balance/Fader

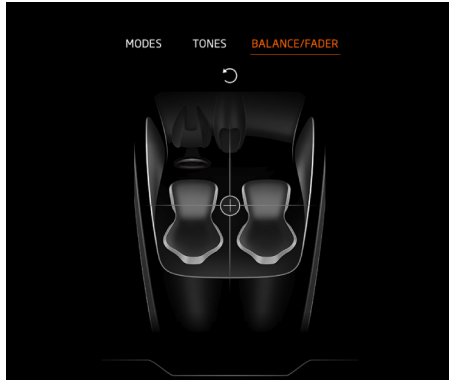

Touch and drag the cross-hair to adjust the balance and fader.

# Central Display Navigation

## Overview



The navigation system uses signals from Global Positioning System (GPS) satellites together with information from vehicle sensors and map data stored on the McLaren Infotainment System (MIS) to determine the precise location of the vehicle.

Using this data, the system is able to create the optimum route to your destination, taking into account any journey preferences you may have set.

Creation of a specific route is achieved by using the on-screen menus and the MIS controls, to make your selections. This results in your route being highlighted on the map.

Once you have started a journey, turn information is displayed on the Central Infotainment Touchscreen, supplemented by voice guidance if required, at appropriate points during the journey.

When a significant diversion is made from a planned route, the system will automatically recalculate an alternative route to the destination.

## Safety



**WARNING: For your safety, ensure that you do not become distracted from the task of driving, through use of the navigation system. Read and adhere to the safety message which appears the first time you enter the navigation system after switching on the ignition.**

National road traffic laws and traffic signals must always be obeyed.

Always remember that the purpose of the navigation system is to help in determining the optimum route, it must never be considered as an aid when visibility is reduced.

GPS signals may be interrupted when travelling through tunnels or other situations where GPS signal could be blocked. Navigation will continue on the route until GPS signal is regained.

Errors in vehicle position are also possible under the conditions described, and if any of the following have occurred:

- driving inside a building e.g. a multi-storey car park
- travelling on a road with a second parallel road very close

- a turntable has been used to rotate the vehicle
- the vehicle has been transported to a different location

# Central Display Navigation


## Using Navigation

Touch the Navigation icon from the McLaren Infotainment System (MIS) Home screen or press the Navigation button.


The first time you access navigation after the ignition is switched on, the MIS displays safety warning messages. Please read these messages.

The caution message will automatically disappear once the navigation system has finished loading.

A map showing your current location will appear on the Central Infotainment Touchscreen screen.


 The location and direction of travel of your car is shown as an arrow head on the screen.

To manipulate the area of the map which is displayed, touch the screen and gently move your finger in any direction to move around the map.

Touch  to access the options for setting a destination, see Setting a destination, page 4.37.

The MIS has a multi-touch screen, allowing easy zooming in and out using pinch gestures. Touch the screen with thumb and forefinger and move them closer together to zoom out, move them further apart in order to zoom in again.

The + and - icons can also be used to zoom in and out.


Touch  to centre the screen on your current location.

Details on the screen will change depending on the zoom setting. For example, road names and some Points of Interest (POIs) will be shown when zoomed in close, but not when zoomed further out.

The screen will also zoom in or out automatically to predefined levels depending on vehicle speed. This function can be turned on or off in the settings menu.

The screen colour will automatically change between day and night mode for easier viewing based on the time.

## Setting a destination

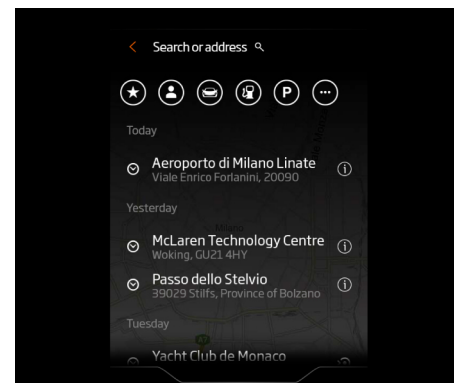


## Using the screen

Manually move around the map, until the map is displayed at the most effective scale for locating the general area of your destination.

Touch the map to mark the position of your desired destination.

## Search or Address

 Touch Search or Address to enter a city, town or street name.

# Central Display Navigation

## Previous destinations

Previous destinations are shown in a list in date order. Touch a previous destination to set it as your new destination.

## Favourites



Touch the favourites icon to view your favourite destinations. Touch the address to set it as your new destination.

## Contacts



Touch the contacts icon to view address information stored in your contacts. Touch the address to set it as your new destination.

## McLaren retailers



Touch the McLaren icon to locate your nearest McLaren retailer. A list of McLaren retailers is shown with the nearest at the top of the list. Touch the address to set it as your new destination.

## Fuel stations



Touch the fuel icon to locate your nearest fuel station. A list of fuel stations is shown with the nearest at the top of the list. Touch the address to set it as your new destination.

## Parking



Touch the parking icon to locate your nearest parking area. A list of parking areas is shown with nearest at the top of the list. Touch the address to set it as your new destination.

## Additional search categories



Touch the additional icon to see additional search categories. Use this function to search for points of interest including: airports, ATM's, hotels, hospitals and shops.




## Route Overview

Once your destination has been selected, an overview will be displayed, with your route highlighted. Your start position, current position, any waypoint(s) and your destination will be shown along the highlighted route.

Select  to save the destination as a favourite or **Go!** to begin navigation.


# Central Display HomeLink


## Overview


-  **WARNING:** Do not use HomeLink® with any garage door opener that lacks the safety stop and reverse feature.
-  **WARNING:** Do not use HomeLink® with any garage door opener that was manufactured before April 1982.
-  **WARNING:** When programming HomeLink® to a garage door opener or entry gate, make sure that the area is clear of people and objects. Damage or injury may occur, as the gate or garage door activates during programming.


The HomeLink® wireless control system replaces up to three remote controls. HomeLink® can be used to activate devices such as gate operators, garage door openers, entry door locks, security systems, and home lighting.

## Programming

-  **WARNING:** When programming a garage door opener or gate operator, it is advised to unplug the device during the programming process. This prevents possible damage to the garage door opener or gate operator from repeat operation.


 **NOTE:** Please note that the instructions below apply to the majority of HomeLink® compatible devices. Some HomeLink® applications or HomeLink® compatible systems require slightly different instructions, for information on compatible devices and instructional videos, visit: [www.homelink.com](http://www.homelink.com).

 **NOTE:** Garage door openers manufactured after 1995 could be equipped with rolling code protection. In this case, refer to the manufacturer's instructions.

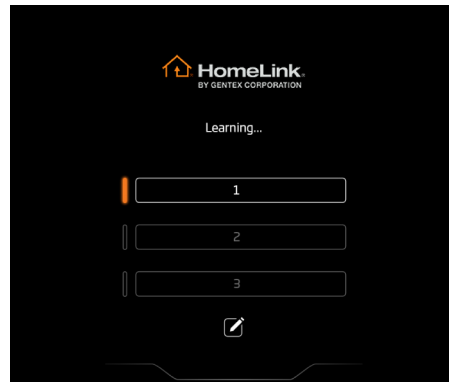

1. Touch the HomeLink® button that you would like to program, 'Learning' will be displayed on the Central Infotainment Touchscreen. The icon next to the button will flash slowly.  
If the button has been programmed before, touch the button for 20 seconds to start 'Learning' and replace the previous setting.
2. Position the garage door opener remote control 2-8 cm away from the left-hand headlamp.

## Central Display HomeLink

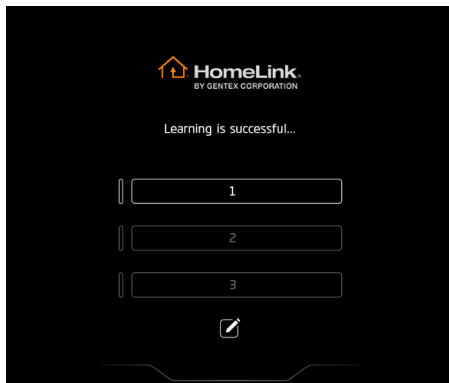

3. Press and hold the button on the garage door opener remote control, 'Learning is successful' will be displayed on the Central Infotainment Touchscreen. The button on the Central Infotainment Touchscreen will change colour and the icon will stop flashing





**NOTE:** Some remote device systems require the operator to press and release the garage door opener remote control button every 2-10 seconds during programming.

4. Press the programmed HomeLink® button, if the device activates, programming is complete, if the device does not activate, continue with steps 5 to 7.
5. Locate the learn or smart button on the motor-head unit, located on the garage door opener's receiver. Refer to the garage door opener manual to identify the learn or smart button.
6. Press and release the learn or smart button. There are typically 30 seconds to initiate Step 7.
7. Return to the vehicle. Touch and release the programmed HomeLink® button every 2 seconds up to five separate times to activate the device. If the device activates, programming is complete.

To clear all buttons and HomeLink® settings, see HomeLink, page 4.15.

### Edit button label


You can rename the HomeLink® buttons to describe the operation they control. For example: 'Garage door' or 'Driveway gate'.

1.  Touch the edit icon.
2.  Touch the edit icon next to the button you want to rename.
3. Enter the new button name using the keypad, and touch OK to confirm.

## Central Display

### HomeLink

#### Operation

 **WARNING:** Before you operate a HomeLink® controlled device check that there is sufficient clearance for the device to operate. Do not park too close to gates or doors, they could contact the vehicle when opening or closing.

The HomeLink® function can be accessed in the Apps or Widget screens.

Touch the button to operate the programmed home link device. Transmitting will be displayed and the light will illuminate.

 **NOTE:** If Garage Door Opener not available is shown check:

- Your vehicle is within range of your HomeLink® device.
- Your HomeLink® device is switched on.
- The McLaren Infotainment System (MIS) HomeLink® function is programmed correctly. See Programming, page 4.39.









## Comfort and Convenience

<b>Windows.....</b>	<b>5.02</b>
Safety.....	5.02
Opening and closing.....	5.02
<b>Climate Control.....</b>	<b>5.04</b>
Overview.....	5.04
Controls.....	5.04
Modes of operation.....	5.05
A/C (screen) button.....	5.06
Demisting/Defrosting.....	5.06
Temperature control.....	5.07
Air recirculation mode.....	5.08
Blower speed control.....	5.08
Air distribution settings.....	5.09
Heated seats.....	5.10
Heated rear window.....	5.10
<b>Interior Features.....</b>	<b>5.11</b>
Interior lighting.....	5.11
Entry lighting.....	5.12
Exit lighting.....	5.12
Electrochromic roof.....	5.13
Stowage compartments.....	5.13
Cup holders.....	5.15
Owner documentation.....	5.15
Sun visors.....	5.16
Accessory power sockets.....	5.16
USB sockets.....	5.17

## Comfort and Convenience Windows

### Safety

**⚠ WARNING:** Ensure that no one can be trapped as you open or close the windows. Do not rest any part of your body against the window. There is a risk of becoming trapped by the movement of the window. If there is a risk of entrapment, stop movement of the window.

### Opening and closing

**⚠ WARNING:** The key fob allows the engine to be started and is also used to activate other features on the vehicle. **Take the key fob with you, every time you leave the vehicle to prevent unsupervised operation of the windows, which may result in injury.**

Switches for both windows are located on the driver's door console. A switch for the passenger's window is located on the passenger's door console.



1. Driver's window switch.
2. Passenger's window switch.

Press switch (1) or (2). The window will open for as long as the switch is pressed.

Pull switch (1) or (2). The window will close for as long as the switch is pressed.

To open or close a window fully, press or pull switch (1) or (2) fully and release.

**i NOTE:** To stop a window opening or closing, press or pull the appropriate switch.

**i NOTE:** If the vehicle is in awake mode, window control will not be available.

### Resetting the windows

The windows must be reset if the battery has been discharged or disconnected, or if the anti-trap feature has been activated.

Ensure that both doors are closed and the ignition is switched on.

## Comfort and Convenience Windows



Push switches (1) and (2) downwards until the windows are open and hold them in this position for 5 seconds.

Pull both switches upwards until the windows are closed and hold them in this position for 5 seconds.

The windows are now reset.

If this does not resolve the issue, please contact your McLaren retailer immediately.

### Anti-trap protection



**WARNING: Do not leave children unattended in the vehicle, they could be injured by the movement of the window.**

Anti-trap protection will stop windows closing if an obstruction or resistance is detected.

If the anti-trap protection is triggered, check the window and the window aperture and remove any obstruction, before operating the windows again. In the event of an anti-trap event when closing the door, see Closing a door, page 1.08.

# Comfort and Convenience

## Climate Control

### Overview

The system can be operated in automatic mode or settings can be adjusted manually.

The combination filter reduces the quantity of dust and pollutants entering the vehicle.


**⚠ WARNING: Follow the recommended settings given for heating or cooling. If the windows mist up, you may no longer be able to observe road and traffic conditions and could cause an accident.**

**i** NOTE: The climate control system operates more effectively with the doors and windows closed. However, if the vehicle has been standing in a hot environment for a long time, ventilate by opening the windows briefly.


**i** NOTE: The interior air temperature sensor is located between the steering wheel and the centre console. Do not obstruct airflow to this sensor or the performance of the climate control system will be reduced.

**i** NOTE: The vehicle will retain the current climate control settings when the ignition is switched off.

### Controls

The climate control system is operated using the Central Infotainment Touchscreen. Press the  button to switch on the climate control screen.

### Climate Controls

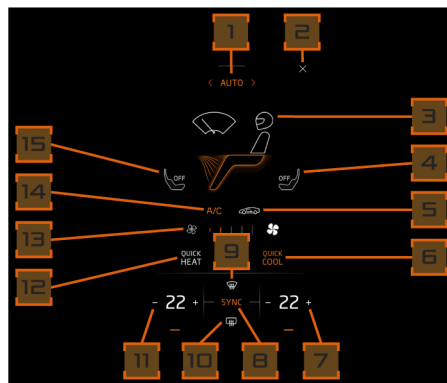

1. AUTO button
2. Close climate control menu
3. Air distribution buttons
4. Heated seat button - Right-hand side
5. Air recirculation button

6. Quick COOL button
7. Temperature control - Right-hand side
8. SYNC button
9. Demist button
10. Heated rear window/mirrors
11. Temperature control - Left-hand side
12. Quick heat button
13. Blower speed control
14. Air conditioning (A/C) button
15. Heated seat button - Left-hand side

# Comfort and Convenience

## Climate Control

### Modes of operation

#### Automatic Mode

In automatic mode, the climate control system maintains the set interior temperature using a combination of differing blower speeds, air recirculation and air distribution.

The control panel uses different colours to indicate operational states:

- Amber indicates ON.
- White indicates OFF but available for use.
- Grey indicates not available for use.

To switch on automatic mode, touch the AUTO button.

The button illuminates and the air distribution, temperature and blower speed are adjusted automatically on both sides of the vehicle.

In AUTO mode, there is no need to adjust the blower speed or air distribution, the system will operate whichever controls it needs to maintain the set temperature.

If you do wish to change the air distribution of the climate control system, touch the preferred button. This will then put the system into AUTO fan mode.

This is denoted by the colour of the blower speed slider. The bar is grey and the slider moves by itself when the blower is under automatic control. Here, the system is continuing to control the blower speed to maintain the set temperature.

If the blower speed is adjusted while AUTO is active, manual mode will be selected by default. If the AUTO button is then pressed, AUTO mode will be activated again.

If necessary, the system settings can be manually adjusted, see Manual Mode, page 5.05.

#### Manual Mode

To adjust the air temperature, see Temperature control, page 5.07.

To adjust the blower speed manually, see Blower speed control, page 5.08.

#### SYNC Mode

SYNC mode allows any changes the driver makes to their air temperature settings to be mirrored automatically for the passenger's temperature setting.

Touching the on-screen SYNC button will cause it to illuminate and automatically implement the driver's air temperature settings to the passenger's side.

The driver can exit SYNC mode at any time by a single touch of the SYNC button. The SYNC button on the screen will then extinguish.

#### Hot Evac

The Hot Evac feature can be activated from the vehicle settings menu. See Climate, page 4.12.



**i** NOTE: If a door is opened during the Hot Evac operation, the Hot Evac function will cancel.

## Comfort and Convenience Climate Control

Press and hold the key fob unlock button for 2 seconds, the Hot Evac feature will operate if switched on in the vehicle settings menu.

The following features operate during the Hot Evac operation:


- Climate control blower Speed to Maximum for 30 seconds
- Climate control temperature set to LO for 30 seconds
- Windows lower

### A/C (screen) button

The A/C enhances the cooling and dehumidifying of air. It is used by max-cooling and defrosting modes.

Use the A/C screen button as an ON/OFF switch.

### Demisting/Defrosting

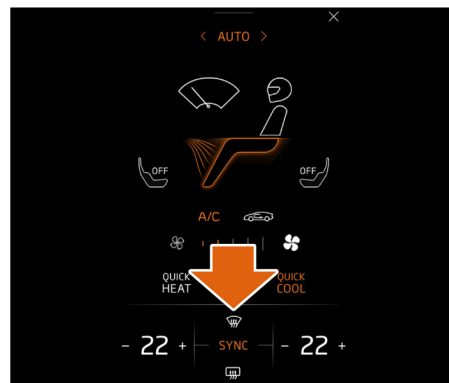

Touch the demist button to activate the screen demist function. The button will illuminate and an icon will be displayed at the top of the screen to indicate the function is active. The air conditioning switches on if previously off and the blower will operate at full speed with the air temperature set to 'HI'.

**i** NOTE: It is possible to manually reduce the blower speed, see Blower speed control, page 5.08.

**i** NOTE: Air recirculation is inhibited when demist mode is selected.






## Comfort and Convenience


### Climate Control


Touch the demist button again to exit the demist mode. The icon on the button extinguishes, and the air temperature and blower speed return to their original settings.

#### Temperature control

Touch  to increase the temperature, or touch  to decrease.


 **NOTE:** The temperature can be adjusted in 0.5°C (1°F) increments from 16°C to 28°C (61°F to 83°F). McLaren recommend the temperature is set to 22°C (72°F).

To set the temperature to maximum, touch  until **HIGH** is displayed. In AUTO mode, the climate control system adjusts the air temperature to the highest setting, the blower speed is set to maximum and air is directed to the footwells.

To set the temperature to minimum, touch  until **LOW** is displayed. In AUTO mode, the climate control system sets the air temperature to the lowest setting, the blower speed is set to maximum and air is directed to the centre air vents.

The temperature set will appear on the Central Infotainment Touchscreen.

To adjust the driver and passenger temperatures at the same time touch **SYNC**, then adjust the temperature. The temperature controls will remain synchronised until you touch **SYNC** again.

 **NOTE:** With **LOW** selected, it is not possible to switch off the air conditioning.

## Comfort and Convenience Climate Control

### Air recirculation mode




Select air recirculation when unpleasant smells or fumes are entering the vehicle. Air from outside the vehicle is now prevented from entering the cabin.

**WARNING:** Switch to air recirculation mode briefly if outside temperatures are low. Be aware that the windows could mist up, which may impair your visibility. As a result, you could be distracted from road and traffic conditions and cause an accident.

**NOTE:** Switch on the air conditioning to prevent the windows misting.

Touch the air recirculation button, to activate air recirculation. The button will illuminate. To switch off air recirculation, touch the button again and the button illumination will be extinguished.

### Blower speed control

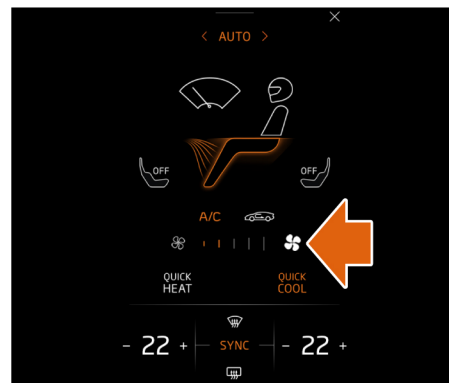

**NOTE:** When the engine is first started, the blower speed is limited and the air is directed at the windscreen until the engine has warmed up.

**NOTE:** When the engine is restarted from hot, the blower may operate at low speed. This removes warm air from the vents, the blower speed will then increase to the requested setting.

Touch the fan icon and drag it to the desired setting.

## Comfort and Convenience

### Climate Control

If in automatic mode, adjusting the blower speed will cause the AUTO button to extinguish.

Press the AUTO button to return to automatic mode.

#### Air distribution settings




The air distribution can be set using the air distribution controls.

Press the top screen area to direct air to the windscreen, press the middle screen area to direct air to the centre air vents, press the bottom screen area to direct air to the footwell vents.

All three screen areas, a combination of any two or an individual area can be selected at any time.

When an air distribution screen area is pressed, the screen icon will illuminate.

#### Dashboard air vents

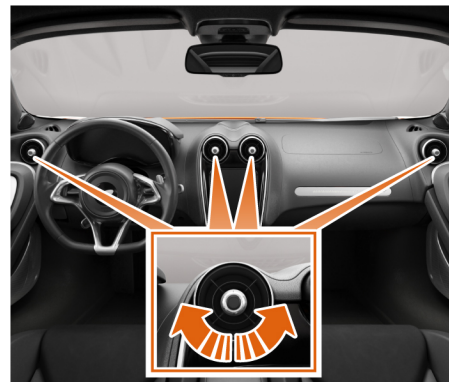

Turn a quarter turn in either direction until the vent is open or closed.

#### Central dashboard air vent


The central dashboard air vent can be opened and closed by pushing the centre blade.

## Comfort and Convenience Climate Control

### Heated seats

**⚠ WARNING:** To avoid the risk of injury, constantly monitor the seat temperature.

**⚠ WARNING:** The heated seats will not switch off automatically once it reaches its optimum temperature dependent on the level selected. Please ensure the switch of the heated seat function is turned off once the desired heat/period of heat has been achieved.

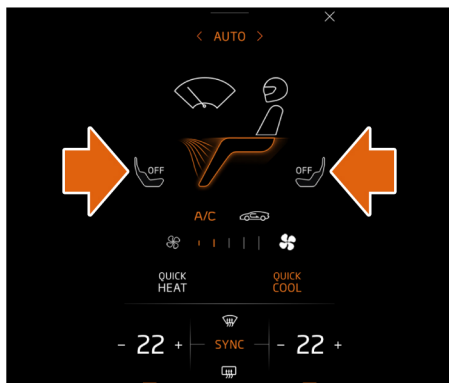

Touch the button once to switch seat heating on to the low temperature setting, one bar on the button will illuminate. Touch the button again to switch to the medium temperature setting, two bars on the button will illuminate. Touch the button again to switch to the full temperature setting, three bars on the button will illuminate.


To switch off, touch the button again and the icon on the button will be extinguished.

The seat heater will remain in operation until switched off.

**i** NOTE: Seat heating is only available when the engine is running. If seat heating is not available, the button will appear greyed out.

**i** NOTE: Seat heating will switch off automatically when the engine is stopped by the Eco Start-Stop System, but will resume heating when the engine restarts. See Eco Start-Stop system, page 2.09.

### Heated rear window

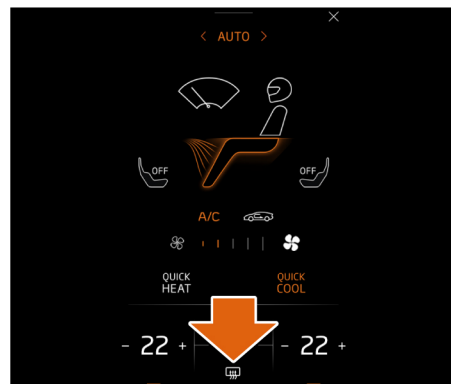

**⚠ WARNING:** Remove any accumulated ice or snow from the mirrors and windows before setting off. Impaired visibility could endanger yourself and others.

Touch the button to heat the rear window and exterior mirrors. The icon on the button will illuminate. To switch off, touch the button again and the icon on the button will be extinguished.

The heated rear window and mirrors switch off automatically after a set time, depending on the outside air temperature.

# Comfort and Convenience

## Interior Features

### Interior lighting



1. Left-hand reading light on/off/gradual touch pad
2. Interior lighting on/off touch pad
3. Right-hand reading light on/off/gradual touch pad

For full interior lighting, press the touch pad (2) quickly.

**i** **NOTE:** Ensure that the interior lighting is switched off when leaving the vehicle.

To switch off the interior lighting, press touch pad (2) again.

### Reading lights

Press touch pads (1) or (3) to switch on the desired reading light.

For gradual reading illumination, press and hold touch pad (1) or (3) until desired lighting is achieved.

Press touch pads (1) or (3) again to switch off the respective reading light.

### Courtesy lighting

The interior of your McLaren is lit in the following areas:

- the driver's and passenger's footwells, when you open a door
- the centre console (illuminated by a light within the overhead light panel), if the ignition is on
- the interior door handles, if the ignition is on

The courtesy lighting extinguishes 60 seconds after the doors have been closed or when the ignition is switched on.

The front luggage compartment light illuminates when the front luggage compartment is opened.


The Rear luggage compartment light illuminates when the rear luggage compartment is opened.

The glove box light illuminates when the glove box is opened.

### Ambient lighting

Ambient lighting is installed in the doors, lower console, footwells and the dashboard fascia.

The ambient lighting colour and brightness can be adjusted using the McLaren Infotainment System (MIS) settings menu.

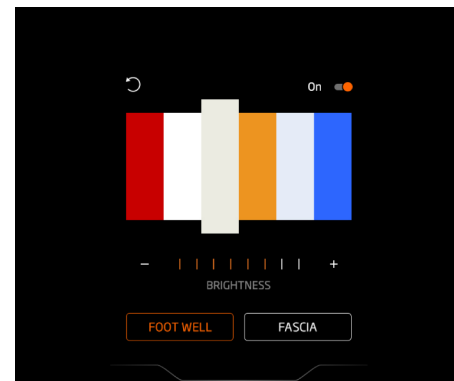

## Comfort and Convenience

### Interior Features

Touch the switch icon to toggle ambient lighting **On** or **Off**. If ambient lighting is **Off** the ambient lighting menu choices will not be shown.

Touch the coloured bars to select the ambient lighting colour. The selected colour will expand and appear larger than the other colours.

Touch **Reset** to return the ambient lighting to the default setting.

Touch **Footwell** to toggle the foot well ambient lighting **On** or **Off**.

Touch **Facia** to toggle the facia ambient lighting **On** or **Off**.

Touch the + or - symbols to adjust the brightness of the ambient lighting. Alternatively swipe the brightness bar.

### Entry lighting

Entry lighting improves visibility and security when you approach the vehicle.

When the vehicle is unlocked, the headlamps and tail lamps illuminate for a period of time or until the ignition is switched on.

To set the entry lighting duration, see Entry and exit lighting, page 4.10.

### Exit lighting

Exit lighting improves visibility and security when you leave the vehicle by illuminating the headlamps and tail lamps for a period of time.

To set the exit lighting duration, see Entry and exit lighting, page 4.10.

Exit lighting can also be activated manually by pulling the direction indicator stalk towards you momentarily three times. The vehicle must be in an awake mode with the ignition off.

Every additional pull on the direction indicator stalk whilst the exit lighting has been activated will increase the time increment by an additional 15 seconds.

Once the vehicle has been exited, locked and completed its set operating time, the exit lighting will be extinguished and the function will not be available, unless it is switched on in the McLaren Infotainment System (MIS) or is manually activated again through the direction indicator stalk.

## Comfort and Convenience

### Interior Features

#### Electrochromic roof




The electrochromic roof control panel is located on the roof headliner, between the driver and the passenger. Touch the control panel to change the tint of the electrochromic roof.

When the ignition is switched off, the feature will switch off and the glass will be tinted.

When the ignition is switched on, the glass will always start in an off (tinted) state, even if it had been switched on previously.

#### Stowage compartments

##### Glove box

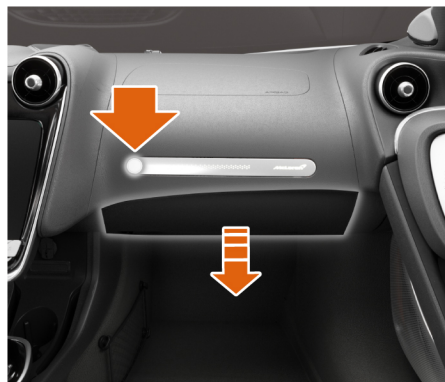

A glove box is fitted on the passenger side of the dashboard for storing small items.

Touch the button on the dashboard, the glove box will automatically lower to an open position. To close, push the glove box up firmly and ensure that it is latched securely.

**i** NOTE: When the vehicle is locked or Valet Mode is on, the glove box will be locked and the release button disabled.

**⚠** WARNING: The glove box must be closed when items are stored in it. Occupants could be injured by objects being thrown around during sharp braking, a sudden change of direction or an accident.

**i** NOTE: Always close the stowage compartment when leaving the vehicle, or the interior motion sensor (if fitted) will not function.

##### Centre console stowage compartment



A compartment is fitted in the centre console for storing small items.

## Comfort and Convenience

### Interior Features

Depress the release button on the underside of the lid and lift to open. To close, push the lid down firmly and ensure that it is latched securely.

**i** NOTE: When the vehicle is locked or Valet Mode is on, the stowage compartment will be locked and the release button disabled.

**!** WARNING: The stowage compartment must be closed when items are stored in it. Occupants could be injured by objects being thrown around during sharp braking, a sudden change of direction or an accident.



The USB and a 3.5 mm auxiliary audio input sockets are located in the stowage compartment. See Connecting an external device, page 4.28.

**i** NOTE: Always close the stowage compartment when leaving the vehicle, or the interior motion sensor (if fitted) will not function.

**i** NOTE: The area behind the seats is not designed for storing luggage or any other personal items.

#### Seat stowage pocket

A pocket is fitted to the front edge of the driver's seat for storing small items.

#### Door stowage compartments



A compartment is fitted in each door for storing small items.


Pull the front edge of the lid to open, push back to close.


**!** WARNING: The stowage compartment must be closed when items are stored in it. Occupants could be injured by objects being thrown around during sharp braking, a sudden change of direction or an accident.



## Comfort and Convenience

### Interior Features

 **WARNING:** The stowage compartment must not be opened when the door is open as there is a risk of objects falling out.

 **NOTE:** The door stowage compartments are locked closed when the doors are open to prevent objects falling out. Do not try to force the door compartments open when they are locked.


#### Stowage nets

Nets are fitted to both sides of the centre console for storing small items.

#### Cup holders



Utilise the cup holders for safe convenient storage of closed drink containers when on a journey.

 **WARNING:** Drinking while the vehicle is moving could cause you to become distracted which could lead to an accident.

#### Owner documentation

Your McLaren is equipped with the following documents:

- Service and Warranty Guide - provides information on what to do and who to contact in the event of problems.
- Owner's Handbook - provides information on how to operate your McLaren.



The Service and Warranty Guide can be stored in a slot under the dashboard on the passenger's side.

## Comfort and Convenience

### Interior Features

#### Sun visors



Fold the sun visors down to protect your eyes from bright sunlight as you are driving.

#### Vanity mirrors

Slide the panel on the sun visors to reveal a personal mirror.

#### Accessory power sockets

##### Front luggage compartment socket



The accessory socket, located in the front luggage compartment, has a maximum load rating of 20 Amps and is the only one that can be used to connect a McLaren supplied battery charger.

**i** NOTE: Do not leave any device (except a McLaren supplied battery charger), that draws power from the vehicle, connected to the socket for extended periods without the engine running. This may lead to excessive battery drain.

##### Interior accessory 12 V socket



The interior accessory 12 V socket is located adjacent to the front cup holder in the centre console and has a maximum load rating of 15 Amps.

## Comfort and Convenience

### Interior Features

**i** NOTE: Do not connect a battery charger to the interior accessory socket.

#### USB sockets

Media USB socket



Two USB sockets are located inside the centre console stowage compartment.

The USB sockets can be used to connect USB flash drives, iPods and other compatible MP3 players.

These sockets can also be used to charge compatible mobile phones or media devices.







# Maintaining Your McLaren

<b>Fluid Topping Up.....</b>	<b>6.02</b>
Engine oil.....	6.02
Gearbox oil level.....	6.04
Coolant.....	6.05
Power steering fluid.....	6.06
Brake fluid.....	6.07
Windscreen washer fluid.....	6.08
<b>Emergency Equipment.....</b>	<b>6.10</b>
Emergency equipment safety.....	6.10
Front luggage compartment equipment.....	6.10
Warning triangle.....	6.10
First aid kit.....	6.11
Tyre sealant.....	6.11
Towing eye.....	6.12
Fuel funnel.....	6.12
Manual door release key holder.....	6.12
Fire extinguisher.....	6.13
<b>Battery Care and Maintenance.....</b>	<b>6.14</b>
Battery safety.....	6.14
Charging the battery.....	6.14
Boost starting from another vehicle.....	6.15
<b>Fuses.....</b>	<b>6.18</b>
Fuse replacement.....	6.18
Main fuse box.....	6.18
Secondary fuse box.....	6.21
Battery fuse box.....	6.23

<b>Lighting.....</b>	<b>6.25</b>
Vehicle lights.....	6.25
<b>Manual Unlocking and Opening.....</b>	<b>6.26</b>
Unlocking - discharged battery.....	6.26
Starting the vehicle.....	6.27
Door opening from inside - discharged battery.....	6.28
Opening front luggage compartment - discharged battery.....	6.29
Opening rear luggage compartment - discharged battery.....	6.31
Replacing key fob battery.....	6.33
<b>Washers and Wipers.....</b>	<b>6.34</b>
Replacing the wiper blades.....	6.34
<b>Wheels and Tyres.....</b>	<b>6.36</b>
Wheels and tyres.....	6.36
Deflated tyre.....	6.40
<b>Vehicle Care.....</b>	<b>6.42</b>
Washing your McLaren.....	6.42
Cleaning the interior.....	6.43
Car cover.....	6.44
<b>Raising the Vehicle.....</b>	<b>6.45</b>
Vehicle lifting points.....	6.45
<b>McLaren Assistance.....</b>	<b>6.46</b>
McLaren assistance.....	6.46
Replacement battery.....	6.46
In the event of a breakdown.....	6.46
Towing for recovery.....	6.47

# Maintaining Your McLaren

**Driving Abroad.....6.48**  
    Driving abroad.....6.48





# Maintaining Your McLaren Fluid Topping Up

## Engine oil



The engine uses approximately 0.5 litres of oil for every 625 miles (1,000 km), depending on your style of driving. The oil consumption may be higher than this when the vehicle is new or if you frequently drive at high engine speeds.


You will only be able to estimate the oil consumption after the vehicle has been driven for several thousand miles or kilometres.

**i** NOTE: Lubricant additives could damage the engine or gearbox. Damage caused by such additives is not covered by the vehicle warranty. Further information is available from your McLaren retailer.

## Checking the engine oil

1. Ensure the following conditions are met:
  - Vehicle stationary and positioned on a level surface.
  - Neutral selected and the foot brake applied (use left foot).

**i** NOTE: The foot brake must be applied for the entire duration of the oil level check.

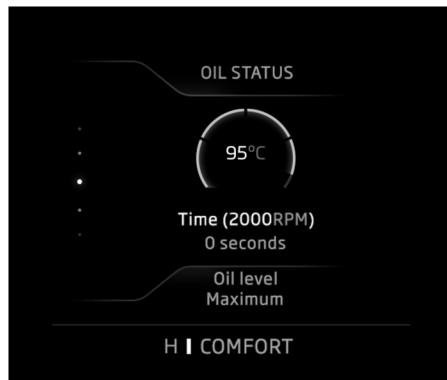


2. The level is viewed in the Vehicle Info section on the Driver Display, see Oil status, page 3.07.
3. Start the engine and hold the engine speed at 2,000 rpm for 120 seconds. Allow the engine oil temperature to reach a temperature of 90°C (194°F).

**i** NOTE: The throttle pedal can be fully depressed as the engine speed will be electronically limited to 2,000 rpm.

4. When the timer has reached '0', the oil level will be shown on the Driver Display along with a description.

**i** NOTE: The line on the display indicates the maximum oil level for 19 seconds after the oil level is read.

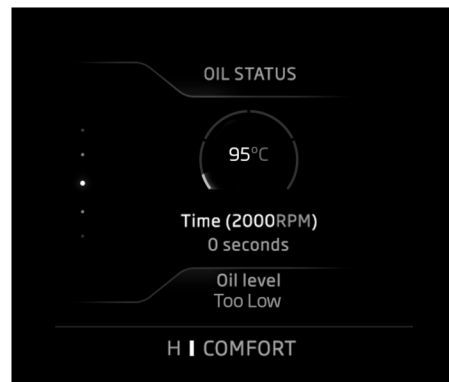

5. If the engine oil is below the target level, stop the engine and top up the oil in accordance with the following procedure.

## Maintaining Your McLaren Fluid Topping Up

- i** NOTE: Once the oil level check has been completed and returned a value, do not continue to test the system. This may lead to aeration of the oil and return a false value. To end the oil level check, release the throttle pedal and return to the Vehicle info menu by moving the menu stalk back.

### Topping up the engine oil

- !** **WARNING:** If the engine is stopped due to the Eco Start-Stop System you should be aware that the engine may restart without warning.

- !** **WARNING:** The engine must be switched off before carrying out the engine oil top up process.

1. Open the rear luggage compartment.  
See Rear luggage compartment, page 1.10.



2. Unscrew the engine oil filler cap.
3. Top up with the correct quantity engine oil.  
Refer to Top up quantity, page 6.04 and Engine oil specification, page 7.10.

- 🌿 ENVIRONMENTAL:** When topping up, take care not to spill any oil. Oil must not be allowed to escape into the soil or waterways.

- i** NOTE: Wait two minutes to allow oil to flow from the filler tube to the tank. This will ensure an accurate oil level reading.

4. Check the Driver Display to ensure level is correct.

- i** NOTE: If you have inadvertently overfilled the engine with oil, you must have any excess removed at your McLaren retailer. The engine or the catalytic converter could be damaged.


5. Refit the engine oil filler cap.

- i** NOTE: Ensure the oil filler cap is refitted correctly.

6. Close the rear luggage compartment.  
See Rear luggage compartment, page 1.10.

# Maintaining Your McLaren Fluid Topping Up

## Top up quantity

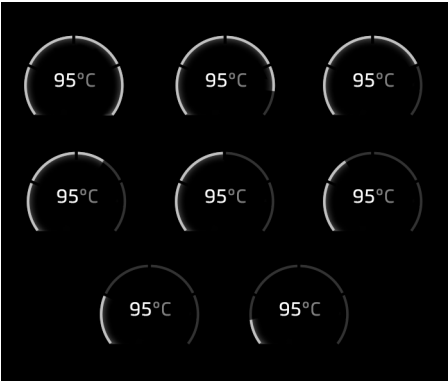

Based on the oil status displayed on the Driver Display, add the required quantity of oil as shown in the following table, then check the engine oil level again.

Segments on display	Quantity of oil required
½ - under filled	0.90 litre
1 - min.	0.70 litre
1 ½ - OK	0 litre

Segments on display	Quantity of oil required
2 - OK	0 litre
2 ½ - OK	0 litre
3 - OK	0 litre
3 ½ - max.	0 litre
4 - overfilled	Contact your McLaren retailer

## Oil temperature

If the oil temperature is too high, a warning will be displayed on the Driver Display. Reduce the vehicle and engine speed until the warning message disappears.

## Gearbox oil level

If you experience oil loss or problems with gear shifts, have the gearbox checked by your McLaren retailer.

**i** NOTE: The clutch and gearbox oil has mileage related service intervals. This maintenance can only be carried out by your McLaren retailer.

# Maintaining Your McLaren Fluid Topping Up

## Coolant

Coolant is a mixture of water and antifreeze/corrosion inhibitor. Only check the coolant when the vehicle is positioned on level ground and the engine is cool.

### Topping up the coolant

**WARNING:** The coolant system is pressurised. Only unscrew the cap when the engine is cool. You could be scalded by hot escaping coolant if you unscrew the cap whilst the engine is warm.


**WARNING:** Coolant is highly flammable. Fire, naked flames and smoking are prohibited when handling coolant.

**WARNING:** Coolant is toxic. Keep containers sealed and away from children. If coolant is accidentally consumed, seek medical help straight away.

**WARNING:** If the engine is stopped due to the Eco Start-Stop System you should be aware that the engine may restart without warning.

**WARNING:** The engine must be switched off before carrying out the coolant level check and top up process.

1. Open the rear luggage compartment.  
See Rear luggage compartment, page 1.10.
2. Slowly unscrew the cap by half a turn anti-clockwise and allow excess pressure to escape.
3. Unscrew the cap fully and remove it.

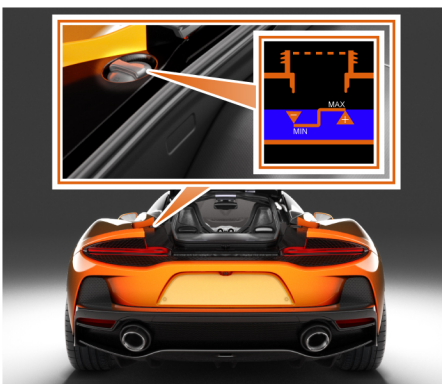

4. The coolant level is correct when it is at the top of the + marker.

5. Top up the coolant if necessary. See Coolant, page 7.11.

**ENVIRONMENTAL:** When topping up, take care not to spill any coolant. Coolant must not be allowed to escape into the soil or waterways.


6. Replace the cap by turning it clockwise to the stop.
7. Close the rear luggage compartment.  
See Rear luggage compartment, page 1.10.

# Maintaining Your McLaren Fluid Topping Up

## Power steering fluid



Right-hand drive models

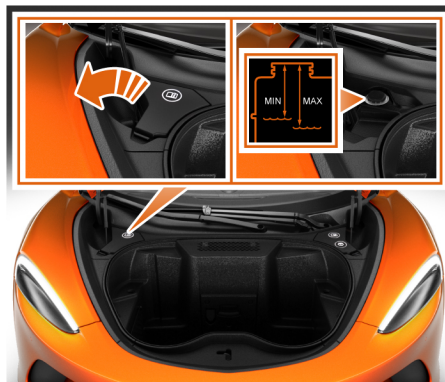

Left-hand drive models



**WARNING: Power steering fluid is highly flammable. Fire, naked flames and smoking are prohibited when handling power steering fluid.**



**WARNING: Power steering fluid is toxic. Keep containers sealed and away from children. If fluid is accidentally consumed, seek medical help straight away.**




**WARNING:**

**The vehicle must not be in vehicle lift mode. Before you check the power steering fluid level check the vehicle lift icon is not illuminated on the Driver Display. See Vehicle lift, page 1.46.**

### Checking fluid level


1. Switch the ignition on and start the engine. Select Comfort handling mode, see Handling control, page 2.21.
2. Allow the engine to idle for 20 seconds before checking the fluid level.
3. Open the front luggage compartment, see Front luggage compartment, page 1.09.
4. Remove the access cover, then unscrew the cap anti-clockwise and remove it.
5. Measure the distance, inside the reservoir, down to the fluid level. Maximum fill level is 50 mm and minimum fill level is 55 mm from the top of the filler neck.
6. Top up if necessary using only Pentosin CHF202 power steering fluid, contact your McLaren retailer.


## Maintaining Your McLaren Fluid Topping Up

 **ENVIRONMENTAL:** When topping up, take care not to spill any power steering fluid. Power steering fluid must not be allowed to escape into the soil or waterways.


7. Replace the cap and access cover.
8. Close the front luggage compartment, see Front luggage compartment, page 1.09.


### Brake fluid

 **WARNING:** Brake fluid is highly flammable. Fire, naked flames and smoking are prohibited when handling brake fluid.

 **WARNING:** Brake fluid is toxic. Keep containers sealed and away from children. If fluid is accidentally consumed, seek medical help straight away.

 **WARNING:** Only use fluid from new, air tight containers.

 **WARNING:** The engine must be switched off before carrying out the brake fluid check and top up process.

 **NOTE:** Avoid spilling brake fluid, it is harmful to painted surfaces. Any spillages must be removed immediately with a mixture of car shampoo and water.



Right-hand drive models

## Maintaining Your McLaren Fluid Topping Up



Left-hand drive models

### Checking fluid level

1. Open the front luggage compartment, see Front luggage compartment, page 1.09.
2. Remove the access cover, then unscrew the cap anti-clockwise and remove it.
3. The brake fluid is correct if the level just covers the base of the filter in the filler neck.
4. Top up if necessary using only new brake fluid. See Brake fluid, page 7.12.



**ENVIRONMENTAL:** When topping up, take care not to spill any brake fluid. Brake fluid must not be allowed to escape into the soil or waterways.

5. Replace the cap and access cover.
6. Close the front luggage compartment, see Front luggage compartment, page 1.09.

### Windscreen washer fluid



**WARNING:** Some washer fluids are highly flammable. Fire, naked flames and smoking are prohibited when handling washer fluid.



**WARNING:** Washer fluid is toxic. Keep containers sealed and away from children. If fluid is accidentally consumed, seek medical help straight away.




**NOTE:** Add washer fluid to the reservoir all year round.

### Topping up the windscreen washer fluid

1. Open the front luggage compartment, see Front luggage compartment, page 1.09.
2. Mix a solution of windscreen washer fluid concentrate and water in a container before adding to the reservoir. Concentration of the windscreen washer solution should be mixed to suit the outside temperatures. See Windscreen washer fluid, page 7.12.



## Maintaining Your McLaren Fluid Topping Up

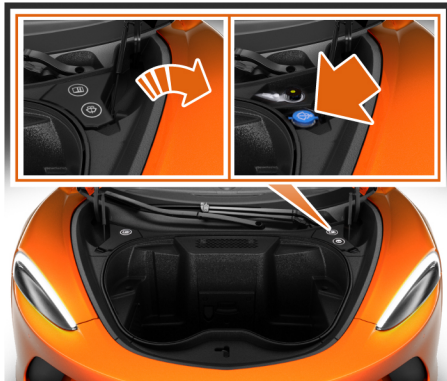


3. Remove the access cover.
4. Open the reservoir cap.
5. Top up the windscreen washer fluid.
6. Close the cap.
7. Replace the access cover.
8. Close the front luggage compartment, see Front luggage compartment, page 1.09.

# Maintaining Your McLaren Emergency Equipment

## Emergency equipment safety

Before using the emergency equipment, familiarise yourself with the following safety information.

 **WARNING:** Always ensure the emergency equipment supplied is used in the proper manner and for the purpose it was designed. Always use the emergency equipment in a safe and responsible manner and be aware of other road users.

## Front luggage compartment equipment



The emergency equipment is stored in a foam block, against the front wall of the front luggage compartment.


## Warning triangle



The warning triangle (1) is stored in a red case, at the front of the front luggage compartment. Release the two straps to remove the warning triangle.

# Maintaining Your McLaren Emergency Equipment

## Setting up the warning triangle

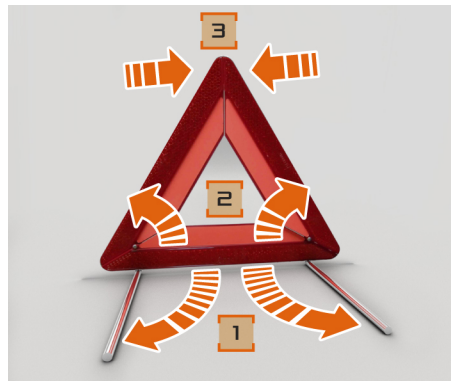

Fold the legs (1) sideways from the bottom.  
Pull side reflectors (2) upwards to form a triangle and lock them at the top using press-stud (3).  
Place the warning triangle at an appropriate distance from the vehicle to warn other traffic of a breakdown.

## First aid kit



The first aid kit (2) is located at the front of the front luggage compartment.

**i** NOTE: Check the expiry dates of the first aid kit materials every 12 months, and replace them if necessary.

## Tyre sealant



The tyre sealant (3) is stored in the foam block at the front of the front luggage compartment. Remove the first aid kit and release the two straps to remove the tyre sealant.

For instructions on how to use the tyre sealant, see Deflated tyre, page 6.40.

**i** NOTE: Check the expiry date of the tyre sealant every 12 months, and replace if necessary.

# Maintaining Your McLaren Emergency Equipment

## Towing eye



The towing eye (4) is located in a foam block, against the front wall of the front luggage compartment.

**i** NOTE: Your McLaren is equipped with a front towing eye mounting only. It is not possible to tow other vehicles.

For information on installing the towing eye, see Towing eye and mounting, page 6.47.

## Fuel funnel



The fuel funnel (5) is stored in a foam block, against the front wall of the front luggage compartment.

**i** NOTE: Only use the fuel funnel when filling the vehicle with fuel from sources other than a fuel pump on a garage forecourt.  
Do not use the fuel funnel when topping up coolant, engine oil or any other fluids in the vehicle.

For information on using the fuel funnel, see Filling with the fuel funnel, page 2.43.

## Manual door release key holder



The manual door release key holder (6) is supplied with the vehicle.

**i** NOTE: The manual door release key holder is used to assist with turning the mechanical key in order to gain access to the vehicle if the vehicle battery or key fob battery has become discharged. Therefore, the manual door release key holder should not be kept inside the vehicle.

## Maintaining Your McLaren Emergency Equipment

For information on using the manual door release key holder, see Unlocking - discharged battery, page 6.26.

### Fire extinguisher



The fire extinguisher is located at the rear of the front luggage compartment.

Release the retaining strap and remove the fire extinguisher.

To operate, follow the manufacturer's instructions on the side of the fire extinguisher.

**i** **NOTE:** The fire extinguisher must be checked every 12 months or it may fail in an emergency. Once the extinguisher is used it will have to be replaced.

# Maintaining Your McLaren

## Battery Care and Maintenance

### Battery safety

Before using the battery charger, familiarise yourself with the following safety information.

**⚠ WARNING:** Your McLaren is fitted with a lithium-ion battery. Only a lithium-ion battery charger can be used on this type of battery. Contact your McLaren retailer for more information.

**⚠ WARNING:** The lithium-ion battery fitted to your McLaren is sealed for life and no attempt should be made to break the battery seal to inspect the battery cells.

**⚠ WARNING:** Leave a suitable lithium-ion battery charger connected to the lithium-ion battery and switched on during periods when your vehicle is not in regular use. This will help maintain and prolong the life of the battery.

**⚠ WARNING:** Before use, check that all cables are in good condition; do not use cables that are damaged.

Ensure that all cables are kept away from sharp edges, are not pinched or trapped and are not close to hot surfaces or water.

Never charge a damaged battery. The battery must only be charged in a well ventilated area; the charger must never be covered or placed on the battery.

Do not place any metal objects on a battery. You could cause a short circuit and the battery could ignite. Keep the charger out of reach of children at all times.

### Charging the battery

**i NOTE:** To maintain your lithium-ion battery in optimum condition, always leave the McLaren supplied battery charger connected to the battery and switched on during periods when your vehicle is not in regular use.

**i NOTE:** Do not connect the battery charger to the interior accessory socket.




Refer to the instructions supplied with the battery charger.


## Maintaining Your McLaren Battery Care and Maintenance


The charger connects to the accessory socket in the front luggage compartment. See Front luggage compartment socket, page 5.16.


### Boost starting from another vehicle


Using booster cables


 **WARNING:** Ensure that both batteries are 12 V and that the booster cables have insulated clamps and are approved for use with 12 V batteries.

 **WARNING:** Do not connect positive (+) terminals to negative (-) terminals.

 **WARNING:** Take care when working near rotating parts of the engine. Ensure cables are kept well clear.

 **NOTE:** Do not use a 24 V booster start system. These produce excessive voltage and can damage the vehicle's electrical system.

 **NOTE:** It is not possible to push or tow start a vehicle with a discharged battery.

 **NOTE:** If using a donor vehicle, please allow it to have the engine running for a minimum of 2 minutes before trying to start the disabled vehicle.

### Boosting procedure

1. If a donor vehicle is to be used, park it so that the battery location is adjacent, but ensure the two vehicles do not touch.
2. Apply the parking brake and ensure that the transmission of both vehicles is set in neutral (or park for vehicles with automatic transmission).
3. Switch off the ignition and all electrical equipment in both vehicles.
4. Open the front luggage compartment and remove any items stowed inside.



## Maintaining Your McLaren Battery Care and Maintenance

5. Remove the 2 quarter turn screws securing the top of the battery access cover.



6. Open the top of the battery access cover and disconnect the 2 electrical connectors on the back of the cover.
7. Lift the battery access cover upwards, off its locating pegs, and remove.



**NOTE:** Before connecting the booster cables, ensure that the battery terminals on the disabled vehicle are correctly and securely connected and that all electrical equipment has been switched off.



8. Connect one end of the positive (+) booster cable to the positive (+) terminal on the donor vehicle's battery.
9. Connect the other end of the positive (+) booster cable to the positive (+) terminal tab on the disabled vehicle's battery (A).
10. Connect one end of negative (-) booster cable to the negative (-) terminal on the donor vehicle's battery.
11. Connect the other end of the negative (-) booster cable to the negative (-) terminal on the disabled vehicle's battery (B).

12. Check that the cables are clear of any moving components and that all four connections are secure.



**WARNING:** Ensure that each connection is securely made and that there is no risk of the clips accidentally slipping or being pulled from the connection points/battery terminal - this could cause sparking, which could lead to fire or explosion.

13. Start the engine of the donor vehicle and allow it to run for 2 minutes.
14. The electrical system on the disabled vehicle should now be ready for the engine to be started.
15. Start the engine of the disabled vehicle.
16. Allow both vehicles to idle for 2 minutes.
17. Switch off the donor vehicle.




**NOTE:** Do not switch on any electrical circuits on the previously disabled vehicle until after the booster cables have been removed.



## Maintaining Your McLaren

### Battery Care and Maintenance

 NOTE: If battery is fully discharged, or has been disconnected, it may be necessary to reset the windows, see Resetting the windows, page 5.02. If this does not resolve the issue, please contact your McLaren retailer immediately.

#### Disconnecting the cables

1. Disconnect the booster cables in the reverse order to that used for connection.
2. Refit the battery access cover, connect the 2 electrical connectors and secure with the 2 screws.

# Maintaining Your McLaren Fuses

## Fuse replacement

**⚠ WARNING:** Fuses protect the vehicle's electrical systems. The failure of any fuse will render the system it protects inoperative. Use replacement fuses of the same rating and type. Incorrect fuse ratings can overload a system and cause a fire or malfunction. Blown fuses should be replaced and no attempt should be made to repair a blown fuse.

**i NOTE:** Before removing a fuse, turn off all electrical equipment and switch off the ignition.


There are three fuse boxes fitted to your McLaren.

Fuse Box	Location
Main fuse box	Behind a panel in the rear bulkhead, behind the left-hand seat.
Secondary fuse box	Below the dashboard on the passenger's side.

Battery fuse box	On top of the battery, in the luggage compartment, beneath the luggage compartment cover.
------------------	---

## Main fuse box

### Main fuse box access

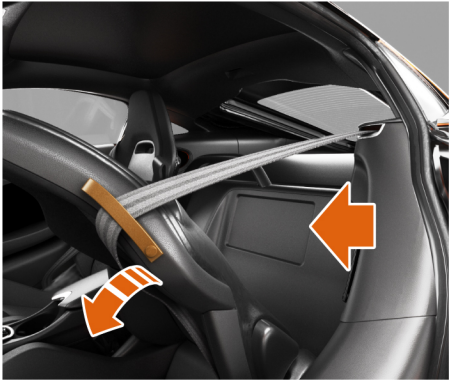

1. To access the main fuse box:
  - if a manual seat is fitted, lift the tilt release lever and tilt the left-hand seat backrest forwards
  - if an electric seat is fitted, pull the release strap (shown above) and tilt the left-hand seat backrest forwards

# Maintaining Your McLaren Fuses



- 2. Release the two lower clips securing the panel to the bulkhead and remove the panel.
- 3. Refer to the fuse specification to determine which fuse protects the non-functioning electrical system, see Main fuse box fuse specification chart, page 6.19.

**i** NOTE: A label identifying the fuses is attached to the inside of the access panel.

- 4. Remove the appropriate fuse and replace it with a fuse of the same value as the original. If in doubt, check the fuse specification chart.
- 5. Fit the access panel by inserting the two upper retaining clips in the bulkhead and securing with the two lower clips.

**i** NOTE: If a replacement fuse does not solve the electrical problem, or it fails immediately, contact your McLaren retailer.

## Main fuse box fuse specification chart

No.	Amps	Circuit protected
F1	60	Right-Hand Secondary Air Pump
F2	60	Left-Hand Secondary Air Pump
F3	-	-
F4	-	-
F5	30	Transmission Control Unit

No.	Amps	Circuit protected
F6	30	Transmission Control Unit
F7	30	Starter
F8	30	Heated Rear Window
F9	30	Audio Amplifier (16 Channel)
F10	-	-
F11	-	-
F12	-	-
F13	5	Transmission Control Unit
F14	5	Engine Control Module
F15	10	Relays
F16	3	Tailgate
F17	3	Door Locking Switch
F18	50	ECU Main Relay Feed
F19	40	Fuel Pump

## Maintaining Your McLaren Fuses

No.	Amps	Circuit protected
F20	30	Seat Driver's
F21	30	Seat Passenger's
F22	-	-
F23	5	Tilt and Microwave Sensor
F24	20	Infotainment Control Unit
F25	10	Driver's/Passenger's Door Latch
F26	3	Auxiliary USB Board
F27	2	Infotainment
F28	-	-
F29	20	Vacuum pump
F30	-	-
F31	50	Cooling Fan Left-Hand
F32	50	Cooling Fan Right-Hand

No.	Amps	Circuit protected
F33	-	-
F34	-	-
F35	-	-
F36	20	ECM Power Supply
F37	15	Canister Purge, Lambda Sensors, Cooling Fan Relay Coil
F38	15	Fuel Injection and Ignition - Left-Hand Bank
F39	15	Fuel Injection and Ignition - Right-Hand Bank
F40	10	Engine Ancillaries
R41	-	-
R42	-	-
R43	-	-
R44	-	-

No.	Amps	Circuit protected
F45	10	Electrical Thermostats, Camshaft Actuators
F46	3	Output Shaft Speed, Even Gear Shaft Speed
F47	3	Input Shaft Speed, Odd Gear Shaft Speed
F48	-	-
F49	5	Starter
R50	-	-
R51	-	Heated Rear Window
R52	-	-
R53	-	Transmission Control Unit
R54	-	Transmission Control Unit
R55	-	Starter
R56	-	Secondary Air Pump RH

## Maintaining Your McLaren Fuses

No.	Amps	Circuit protected
R57	-	Cooling Fans
R58	-	ECU Main relay Feed


### Extended diagnostic port

The extended diagnostic port is located behind the right-hand seat. This feature can only be used by your McLaren retailer.

### Secondary fuse box

#### Secondary fuse box access

1. Access to the secondary fuse box is gained by lowering the closing panel below the dashboard on the passenger's side.

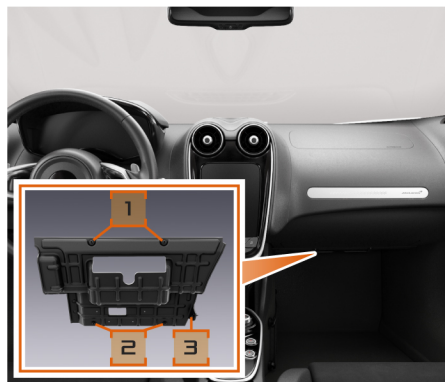

2. Remove the two front screws (1).
3. Remove the side fixing clip (3).

**i** **NOTE:** If you wish to lower the closing panel fully, also remove the two clips at the rear (2).

4. Lower the closing panel, sufficiently to gain access to the fuse box.

**i** **NOTE:** Do not lower the closing panel further than necessary as it could be damaged.



5. Remove the appropriate fuse and replace it with a fuse of the same value as the original. If in doubt, check the fuse specification chart, see Secondary fuse box fuse specification chart, page 6.22.
6. Raise the closing panel into position, fit the clip and fit and tighten the two front screws.

# Maintaining Your McLaren

## Fuses

Secondary fuse box fuse specification chart

No.	Amps	Circuit protected
F1	20	Driver's Door
F2	20	Passenger's Door
F3	25	Lights
F4	35	Lights
F5	35	Body
F6	35	Body
F7	35	Alarm
F8	-	-
F9	-	-
F10	-	-
F11	-	-
F12	-	-
F13	10	Instrument cluster

No.	Amps	Circuit protected
F14	5	Transmission Control Unit
F15	10	Air Conditioning
F16	3	Alarm Control Unit
F17	3	Tracker
F18	7.5	Alarm
F19	5	Central Display
F20	3	Transmission Control Unit Relays
F21	15	Display Control Unit
F22	-	-
F23	-	-
F24	5	Development Connector
F25	10	OBD2 Diagnostics
F26	-	-

No.	Amps	Circuit protected
F27	-	-
F28	-	-

# Maintaining Your McLaren Fuses

## Battery fuse box

### Battery fuse box access


1. Open the luggage compartment lid and remove any items stowed inside.



2. Remove the 2 quarter turn screws securing the top of the battery access cover.




3. Open the top of the battery access cover and disconnect the 2 electrical connectors on the back of the cover.
4. Lift the battery access cover upwards, off its locating pegs, and remove.

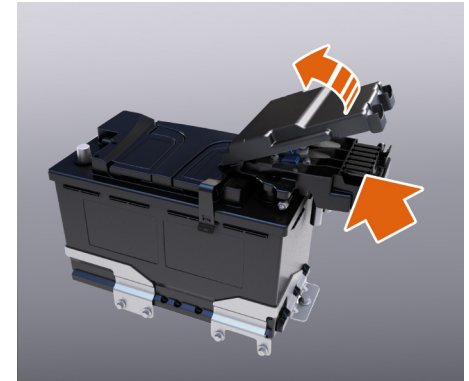

5. Press the 2 catches on the right-hand side of the cover and remove the cover from the fuse box.

# Maintaining Your McLaren Fuses

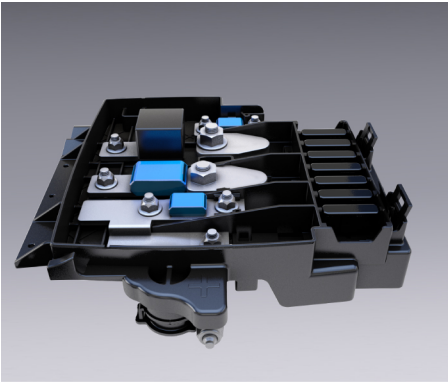

- 6. Remove the appropriate fuse and replace it with a fuse of the same value as the original. If in doubt, see Battery fuse box fuse specification chart, page 6.24.
- 7. Engage the left-hand side of the cover with the fuse box, and push the right-hand side down to fully engage the clips.
- 8. Refit the battery access cover, connect the 2 electrical connectors and secure with the 2 screws.
- 9. Stow the contents removed from the luggage compartment.

Battery fuse box fuse specification chart

No.	Amps	Circuit protected
F1	30	Transmission Control Unit
F2	30	Transmission Control Unit
F3	30	Air Conditioning - Motor - Control Module
F4	50	Secondary Fuse Box Supply
F5	40	Electronic Stability Control Valves
F6	40	Electronic Stability Control Motor
F7	20	Auxiliary Power Socket - Luggage Compartment
F8	40	Secondary Fuse Box Supply
F9	100	Electro Hydraulic Power Assisted Steering
F10	200	Main Fuse Box Supply

No.	Amps	Circuit protected
F11	30	Secondary Fuse Box Supply



# Maintaining Your McLaren Lighting

## Vehicle lights


Lighting is an important aspect of vehicle safety. You must ensure that all lights are working at all times.

All the external lights on your McLaren use the latest light-emitting diode technology.

Unlike traditional filament bulbs, these lights have a long life and low power consumption while providing the same amount of illumination.

## Headlamps

Your McLaren is fitted with light-emitting diode headlamps. These provide greater visibility on both dipped and main beams, especially during adverse weather and driving conditions.

 **NOTE:** Do not attempt to change light-emitting diode yourself, as you could damage the vehicle lighting systems. In case of failure, contact your McLaren retailer.

## Maintaining Your McLaren Manual Unlocking and Opening


### Unlocking - discharged battery

If you are unable to lock or unlock the vehicle because the vehicle battery or key fob battery has become discharged, use the mechanical key.

#### Unlocking and opening procedure



1. Push against the thumb indent and slide the back cover away from the key fob.

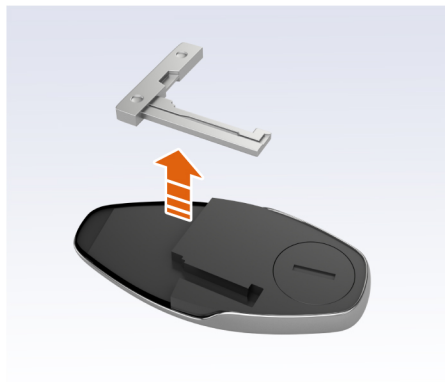


2. Release and remove the mechanical key from the key fob.



3. Insert the mechanical key into the manual door release key holder.

See Manual door release key holder, page 6.12

## Maintaining Your McLaren Manual Unlocking and Opening

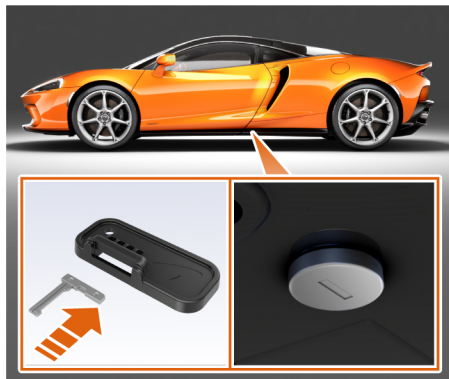

4. Insert the mechanical key into the lock and, turn the key anti-clockwise until mechanical resistance is preventing full release of the door.
5. Apply pressure to the latch area of the door (to counteract pressure of the door seals), and turn the key further to release the door.
6. Fit the mechanical key back into the key fob.

**i** NOTE: Unlocking the vehicle using the mechanical key will activate the anti-theft system and may cause the alarm to sound. Once the door is open, open the centre console stowage compartment, put the key fob against the front wall of the stowage compartment within 10 seconds. The vehicle will recognise the key fob and stop the alarm from sounding.

7. If the key fob battery has become discharged, replace the battery at the earliest possible opportunity, see Replacing key fob battery, page 6.33.

## Starting the vehicle



If the key fob battery has become discharged, and the engine will not start:

1. Open the centre console stowage compartment.
2. Place the key fob in the centre console stowage compartment, against the front wall.

In this position the vehicle is able to sense the presence of the valid key fob and the vehicle can be started and driven.

## Maintaining Your McLaren Manual Unlocking and Opening

Replace the key fob battery at the earliest possible opportunity, see Replacing key fob battery, page 6.33.

### Door opening from inside - discharged battery



To release a door from inside, release the manual door release strap retainer and pull the strap.

The door latch will then release, allowing the door to be partially raised before it automatically swings outwards and upwards.

To refit the release strap, feed the strap into its holder and snap the retainers into place.

**i** NOTE: Only use this strap when the battery has become discharged.

**i** NOTE: Please ensure that both of the retainers on the manual door release strap are fitted correctly, and in the correct positions on the door aperture after use.

**i** NOTE: Please ensure that the manual door release strap is fully retracted before fitting the retainers to their door aperture locations.

## Maintaining Your McLaren Manual Unlocking and Opening

### Opening front luggage compartment - discharged battery

**i** NOTE: The key fob or luggage compartment buttons on the dashboard will not release the luggage compartments if the battery is discharged or disconnected. In the event of this use the manual release mechanism.

#### Opening procedure



1. Push against the thumb indent and slide the back cover away from the key fob.



2. Release and remove the mechanical key from the key fob.



3. Insert the mechanical key into the manual door release key holder.  
See Manual door release key holder, page 6.12

## Maintaining Your McLaren Manual Unlocking and Opening



4. Insert the mechanical key into the lock and, turn the key anti-clockwise until mechanical resistance is preventing full release of the door.
5. Apply pressure to the latch area of the door (to counteract pressure of the door seals), and turn the key further to release the door.

**i** NOTE: Unlocking the vehicle using the mechanical key will activate the anti-theft system and may cause the alarm to sound. Once the door is open, open the centre console stowage compartment, put the key fob against the front wall of the stowage compartment within 10 seconds. The vehicle will recognise the key fob and stop the alarm from sounding.



6. Push the handle in the left-hand door aperture.
7. The luggage compartment will fully unlock and open slightly.



8. Lift the luggage compartment lid and release the safety latch.
9. Open the luggage compartment lid, the gas struts will support it in the fully open position.
10. Fit the mechanical key back into the key fob.
11. If the key fob battery has become discharged, replace the battery at the earliest possible opportunity, see Replacing key fob battery, page 6.33.

## Maintaining Your McLaren Manual Unlocking and Opening

### Opening rear luggage compartment - discharged battery

**i** NOTE: The key fob or luggage compartment buttons on the dashboard will not release the luggage compartments if the battery is discharged or disconnected. In the event of this use the manual release mechanism.


**i** NOTE: To open the tailgate manually it is necessary to raise the vehicle, remove fasteners from the rear wheel arch liner, and move the wheel arch liner to access the lock.

Alternatively charge the battery in the front luggage compartment, see Opening front luggage compartment - discharged battery, page 6.29 and Charging the battery, page 6.14. This will allow you to open the tailgate using the buttons on the dashboard.

### Opening procedure



1. Push against the thumb indent and slide the back cover away from the key fob.

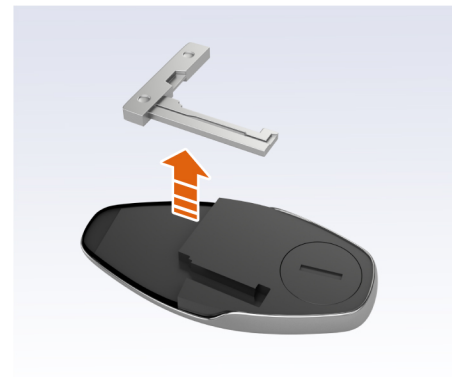


2. Release and remove the mechanical key from the key fob.

## Maintaining Your McLaren Manual Unlocking and Opening



3. Insert the mechanical key into the manual door release key holder.  
See Manual door release key holder, page 6.12

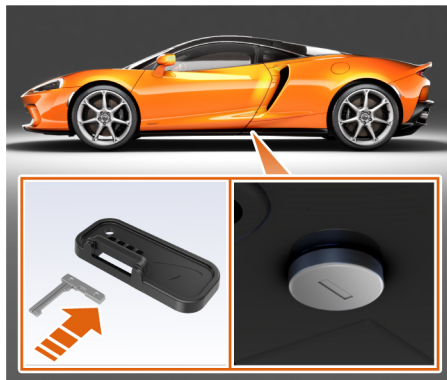

4. Insert the mechanical key into the lock and, turn the key anti-clockwise until mechanical resistance is preventing full release of the door.
5. Apply pressure to the latch area of the door (to counteract pressure of the door seals), and turn the key further to release the door.

**i** NOTE: Unlocking the vehicle using the mechanical key will activate the anti-theft system and may cause the alarm to sound. Once the door is open, open the centre console stowage compartment, put the key fob against the front wall of the stowage compartment within 10 seconds. The vehicle will recognise the key fob and stop the alarm from sounding.

6. Raise and support the vehicle.
7. Remove the fasteners from the rear wheel arch liner.
8. Carefully pull back the rear edge of the rear wheel arch liner to access the lock.



## Maintaining Your McLaren Manual Unlocking and Opening




9. Insert the mechanical key into the lock and, turn the key anti-clockwise to release the rear tailgate.
10. Open the tailgate, the gas struts will support it in the fully open position.
11. Fit the mechanical key back into the key fob.
12. Install the wheel arch liner.
13. If the key fob battery has become discharged, replace the battery at the earliest possible opportunity, see Replacing key fob battery, page 6.33.

### Replacing key fob battery



1. Push against the thumb indent and slide the back cover away from the key fob.

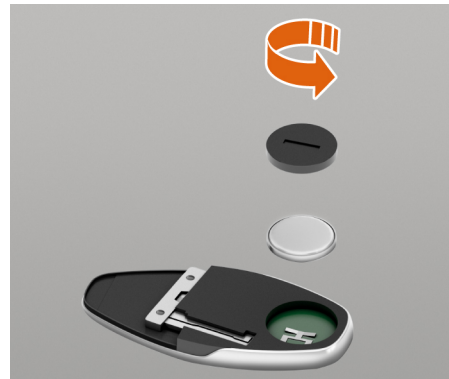

2. Unscrew the battery cover and remove the discharged the battery.
  3. Install a new battery, ensuring that the polarity is correct.
- i** **NOTE:** Handle the battery as little as possible. Moisture and oil from fingers can affect battery life and cause corrosion of the contacts. Only hold the battery on the edges.
4. Refit the battery cover, ensuring that the seal is seated correctly.
  5. Refit the key fob the back cover.

# Maintaining Your McLaren Washers and Wipers

## Replacing the wiper blades

**WARNING:** Ensure the ignition is switched off before you replace the wiper blades. The windscreen wipers could be set in motion and injure you.

**WARNING:** Replace the wiper blades every 12 months or the windscreen will not be wiped properly. You may not be able to observe the road and traffic conditions as a result and could cause an accident.

### Parking the wiper blades

1. Press the STOP/START button once to switch on the ignition but **DO NOT** touch the brake pedal.
2. Pull the wiper control stalk towards you twice, the wipers will move to a winter park position and then to the service park position.

The winter park position locates the wiper arms vertically to aid water run-off and help prevent snow build-up.

The service park position locates the wiper arms in a convenient position for wiper blade replacement.

To remove the main wiper blade



1. Position the wiper blades in the service park position on the windscreen see Parking the wiper blades, page 6.34.
2. Lift the main wiper arm from the screen.
3. Rotate the wiper blade through 90° and remove in the direction of the arrow.

**NOTE:** Never open the luggage compartment lid when the wiper arms are positioned away from the windscreen. You could damage the luggage compartment lid and/or the wiper arms.

**NOTE:** Do not lower the wiper arms onto the windscreen without the wiper blades fitted.

To install a new main wiper blade

1. Slide the wiper blade onto the wiper arm and rotate 90°.

**NOTE:** Ensure the wiper blade is securely fitted in the wiper arm.

2. Lower the wiper arms onto the windscreen.
3. Pull the wiper control stalk towards you once, the wipers will move back to the normal park position.

## Maintaining Your McLaren Washers and Wipers

To remove the small wiper blade



1. Position the wiper blades in the service park position on the windscreen see Parking the wiper blades, page 6.34.
2. Lift the small wiper arm from the screen.
3. Depress the wiper blade clip and slide it out from the arm.

**i** NOTE: Never open the luggage compartment lid when the wiper arms are positioned away from the windscreen. You could damage the luggage compartment lid and/or the wiper arms.

**i** NOTE: Do not lower the wiper arms onto the windscreen without the wiper blades fitted.

To install a new small wiper blade


1. Slide the wiper blade onto the wiper arm and ensure that the clip engages in the arm.

**i** NOTE: Ensure the wiper blade is securely fitted in the wiper arm.

2. Lower the wiper arms onto the windscreen.
3. Pull the wiper control stalk towards you once, the wipers will move back to the normal park position.

# Maintaining Your McLaren Wheels and Tyres

## Wheels and tyres


 **WARNING:** Have worn tyres replaced in axle pairs and ensure the tyres are fitted as specified. With worn tyres, the driving stability of the vehicle will be adversely affected, especially when driving at high speeds. Consult your McLaren retailer if you have had new tyres fitted for information on the appropriate bedding in time based on your driving style.


- With new tyres, avoid high speed cornering and excess speed.
- Only have wheels and tyres of the same type and make fitted.
- Never use a tyre which has been punctured and then repaired.
- Only have tyres of the correct size fitted.
- Tyres degrade over time due to the effects of ultraviolet light, extreme temperatures, high loads, and environmental conditions. It is recommended that tyres are replaced every 6 years, or sooner if required.


McLaren recommend that you only use Pirelli summer or winter tyres, see Wheel and tyre sizes, page 7.07.


These tyres provide the best possible performance in conjunction with the safety systems on your vehicle and have been specifically approved by McLaren.


McLaren cannot accept any responsibility for damage that may result from use of other tyres and wheels. Further information about wheels and tyres can be obtained from your McLaren retailer.

 **WARNING:** Using tyres other than those which have been recommended by McLaren, may contact the bodywork and adversely affect the handling. This may cause loss of vehicle control, resulting in serious personal injury or death. Noise levels and fuel consumption may also be adversely affected. In addition, when driving with a load or when using snow traction devices, they could cause contact between the bodywork and axle components. This could result in damage to the tyres or the vehicle.

 **NOTE:** Retreaded tyres must not be used. Do not fit used tyres if you have no information about their previous usage.

 **NOTE:** Modification to the brake system and wheels is not permitted, nor is the use of spacer plates or brake dust shields. Any such modifications will invalidate the vehicle warranty on the area modified.

 **NOTE:** A wheel change must be carried out at your McLaren retailer. The vehicle could be damaged if it is jacked up incorrectly.

 **NOTE:** Store tyres in a cool, dry place, preferably in the dark. Protect the tyres from oil, grease and petrol.

# Maintaining Your McLaren Wheels and Tyres

## Tyre markings



1. Width of tyre in millimetres.
2. Tyre profile given as percentage of tyre width.
3. Indicates that the tyre is radial ply.
4. Indicates the diameter of the wheel rim in inches.
5. The numbers denote load index and the letter indicates the speed rating. 91 indicates a weight of 615 kg (1,350 lbs) and Y indicates speeds over 186 mph (300 km/h).

6. Displays the maximum load which can be carried by the tyre.
7. Treadwear grade number. The higher the figure the longer a tyre will last.
8. The alpha character denotes resistance to heat. An 'A' rated tyre offers most heat resistance.
9. Information about the manufacture of the tyre. Contains place and date of manufacture.

## Tyres



**WARNING: The tyres must be mounted according to the labelling on the tyre wall. The word 'OUTSIDE' must be on the outer edge of the tyre when it is fitted to the wheel or the stability of the vehicle will be adversely affected, especially at high speeds.**

## Asymmetric tyres



Asymmetric tyres have a tread pattern that is different from one side of the tread to the other. This combination of tread offers better grip in both wet and dry conditions.

The outer tread features a larger stiffer tread pattern that aids with cornering stability. The inner tread pattern aids stability in wet conditions. A central groove in the tyre aids straight line stability.



**WARNING: Only tyres recommended by McLaren are to be fitted to the vehicle.**

## Maintaining Your McLaren Wheels and Tyres

**⚠ WARNING:** The tyres must be mounted according to the labelling on the tyre wall. The benefits of asymmetric tyres will only be available if the tyres are fitted correctly.

### Inspecting wheels and tyres

At least every 7 days, check the tyres for cuts, punctures, tears, bumps, deformation and cracks. Check wheels for severe corrosion. Damaged wheels could cause a loss of tyre pressure.

Regularly check the tyre tread depth and the condition of the tread across the whole width of the tyre. Turn the front wheels to full lock in order to inspect the inner tread.



When the tread is worn to 1.6 mm, the wear indicators appear on the surface of the tread pattern, producing a continuous band of rubber across the width of the tyre. Tyres must be replaced as soon as the wear indicator becomes visible, or sooner if legislation dictates replacement at a greater tread depth.

**i NOTE:** It is recommended that you always have your tyres replaced by your McLaren retailer. Each wheel has a tyre pressure sensor connected to the tyre valve. In order to avoid damage to the sensor, the tyres must be replaced using the correct procedure.

**⚠ WARNING:** Tyre grip decreases rapidly on wet or icy roads, particularly when the tread depth is close to the minimum. You could lose control of the vehicle and cause an accident due to the reduced grip of the tyres. Reduce your speed and drive with greater care.

**i NOTE:** If tread wear is uneven across the tyre, or becomes excessive, the wheel alignment should be checked.

Regularly check the pressure of all your tyres and correct the pressure as necessary, see Tyre pressures, page 7.08.

All wheels must have a valve cap fitted to protect the valve against dirt and moisture.


### Driving precautions


When parking your McLaren, ensure that the tyres do not contact the kerb or other obstacles. If it is necessary to drive over kerbs, speed humps or potholes, drive slowly and approach the obstacle at a shallow angle or the tyres could be damaged.


# Maintaining Your McLaren Wheels and Tyres

While driving, pay attention to vibrations, noises and unusual handling characteristics, e.g. pulling to one side. This may indicate that the tyres or wheels are damaged. If you experience anything unusual, reduce your speed and stop the vehicle as soon as safety permits to check the tyres and wheels for damage. If you find no signs of damage, have the tyres and wheels inspected at your McLaren retailer.

## Tyre pressures

 **WARNING: Tyre pressure that is too high or too low has a negative effect on the vehicle's active safety, this could lead to an accident. Frequently check the pressure of all tyres, particularly prior to long trips, and correct the pressure as necessary.**


 **WARNING: If the pressure in a tyre drops repeatedly, inspect the tyre for foreign objects or signs of punctures, check the valve for air leaks.**

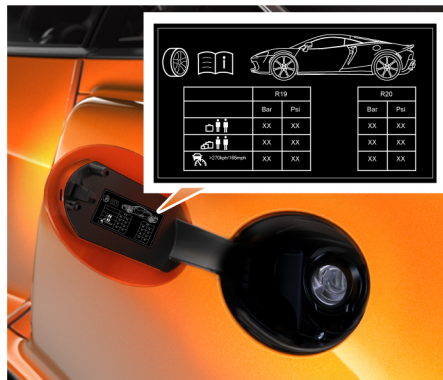

For the tyre pressures for various operating conditions, see Tyre pressures, page 7.08. They are also printed on a label attached to the fuel filler flap.

If the vehicle is to be driven at high speeds, the tyre pressure must be checked, and if necessary adjusted.

 **NOTE:** In some markets, the tyre pressure label is attached to the base of the driver's side door.

 **NOTE:** Tyre pressures given for low loads are minimum values which offer optimum ride comfort.

Increased pressures for higher loads will not adversely affect the running of the vehicle, but ride comfort will be impaired.

Check the pressures when the tyres are cold. If it is necessary to check the tyres when they are warm, pressures will be higher. Do not let air out of warm tyres to match the recommended cold tyre pressures.

Driving with tyre pressure that is too high or too low can:

- create a risk of tyre failure with resultant accidents, causing injury or death.
- shorten the life of the tyres.
- cause increased tyre damage.
- have a negative effect on handling characteristics (e.g. by causing aquaplaning).

 **ENVIRONMENTAL:** Check tyre pressures at least every 7 days.

## Interchanging wheels

 **WARNING: Only approved wheels with winter tyres can be fitted to your McLaren as alternatives.**

# Maintaining Your McLaren Wheels and Tyres

## Deflated tyre

Your McLaren is equipped with a container of tyre sealant, which is located in the luggage compartment.

In the event of a puncture, follow the steps below to ensure your safety, and the safety of other vehicle occupants and other road users.

### Repairing a puncture

1. Stop the vehicle as far away as possible from traffic and on a firm and level surface.
2. If on a public highway, switch on the hazard warning lamps, see Hazard warning lamps, page 1.42.
3. Apply the parking brake and select neutral.
4. Passengers should exit the vehicle safely and remain well away from the vehicle, the road and any traffic.
5. Place the warning triangle at an appropriate distance from the vehicle to warn other traffic of a breakdown, see Warning triangle, page 6.10.

### Using the tyre sealant



You can use the tyre sealant to seal small punctures, particularly those in the tyre's tread. The tyre sealant can be used at ambient temperatures down to -20°C (-4°F).

**WARNING:** The tyre sealant is unable to seal punctures if:

- there are cuts or punctures in the tyre greater than 4 mm.
- the wheel rims are damaged.
- you have driven at very low tyre pressures or with deflated tyres.

**Contact your McLaren retailer immediately.**

Remove the tyre sealant from the luggage compartment and follow the instructions on the container.

**i** NOTE: If possible, locate the cause of the puncture and position the wheel so the puncture is at the lowest point to enable the sealant to be more effective.

Have the punctured tyre replaced as soon as possible.

**WARNING:** Have punctured tyres replaced. McLaren do not recommend that punctured tyres are repaired.

**WARNING:** If the tyre sealant comes into contact with your eyes or skin, immediately rinse thoroughly with clean water, change out of clothing which has been in contact with the tyre sealant. If an allergic reaction occurs, contact a doctor immediately.



## Maintaining Your McLaren Wheels and Tyres



**WARNING:** Keep the tyre sealant out of reach of children. If tyre sealant is swallowed, immediately rinse the mouth thoroughly and drink a large amount of water. Do not induce vomiting. Contact a doctor immediately. Do not inhale tyre sealant fumes.



**NOTE:** After using tyre sealant, the tyre valve, incorporating the tyre pressure monitoring system sensor, will have to be replaced.

# Maintaining Your McLaren Vehicle Care

## Washing your McLaren



**ENVIRONMENTAL:** Some cleaning products contain chemicals that are hazardous to the environment. Always take precautions to prevent fluids from spilling and never use excessive quantities.

### Hand washing your McLaren

1. Pre-rinse the body thoroughly with a hose pipe held at a shallow angle to loosen any dirt and wet the paintwork ready for washing, avoiding direct spray on engine cover vents.
2. Prepare a bucket of warm water and a good quality car shampoo. Refer to the shampoo manufacturer's instructions for dilution ratios.

3. Working from the top of the vehicle down, wash the vehicle, ideally using a lambswool wash mitt rather than a sponge, use generous quantities of water paying particular attention to areas where dirt can accumulate. Use one wash mitt for the top of the vehicle (roof, luggage compartment lid and areas above the wheel arch line) and a separate mitt for areas below the wheel arch line.



**NOTE: Do not clean the wheels with these wash mitts.**



**NOTE: Do not allow the shampoo to dry, it will leave streaks on the paint work.**

4. Tar spots and stubborn grease marks can be removed using white spirit or denatured alcohol. After cleaning, immediately wash the area with soapy water to remove all traces of spirit or alcohol.
5. Once the vehicle is clean, work from the top of the vehicle down and rinse thoroughly using a hose pipe held at a shallow angle, avoiding direct spray on engine cover vents.
6. Dry the vehicle using a chamois leather or drying towel.



**NOTE:** In case of signs of water in the engine bay, it is advised to drive the vehicle and warm the engine to operating temperature to dry off any excessive water from the engine.

### Washing the wheels



**NOTE:** Wash the wheels frequently, do not allow brake dust to become ingrained in the wheel rim finish.

Wash the wheels using warm water, a good quality car shampoo and a wheel brush or wash mitt that is used only on the wheels. Apply polish to non-satin finished wheels to assist in keeping them clean.



**NOTE:** Never apply polish to satin finish wheels, this will result in localised glossy patches on the surface of the wheel.



**NOTE:** Do not use acid based wheel cleaners as these can damage the wheel rim finish leading to corrosion.



**NOTE:** Ensure the brakes are fully dried after the wheels have been cleaned before the vehicle is stored.

# Maintaining Your McLaren Vehicle Care

## Wiper blades and rubber seals

Clean wiper blades and rubber seals using warm water and a good quality car shampoo only. Do not use petroleum or alcohol-based cleaners.

## Windscreen, windows and mirrors


Regularly clean all windows inside and out using a window cleaning solution. An automotive glass cleaner is recommended. After washing the vehicle with car shampoo containing wax, clean the outside of the windscreen with glass cleaner. Do not use abrasive cleaning compounds as mirror glass is particularly susceptible to damage.

## Underbody cleaning

Salt used on roads to control snow and ice during the winter can collect on the vehicle's underbody, if this is not removed, corrosion can occur. During the winter months, regularly hose the underbody with water paying particular attention to the wheel arches and areas where dirt can accumulate.

## Polishing

Occasionally polish the paint work using a good quality polish, following up with a protective wax.

 **NOTE:** Do not use cutting compound, colour restoration products or polishes containing a harsh abrasive. These can scratch the surface and permanently damage the paint work.

## Paint damage and rectification

Regularly inspect the paint work for damage. Any stone chips or deep scratches should be repaired as soon as possible. Contact your McLaren retailer for advice.

## Cleaning the interior

 **NOTE:** Your McLaren retailer will be able to recommend products for cleaning the interior of your vehicle.

## Carpet and fabrics

Before cleaning upholstery, always test the cleaning solution on a concealed area. Clean with diluted upholstery cleaner and a clean cloth.

## Leather

Before cleaning leather, always test the cleaning solution on a concealed area. Clean with warm water and a non-detergent soap or a proprietary leather cleaner. Dry with a dry, clean, lint-free cloth. Do not use abrasive cleaning products or polish.

Do not polish the upper surfaces of the dashboard. Polished surfaces are reflective and may interfere with the driver's view. Clean with diluted upholstery cleaner, then wipe with a damp cloth.

# Maintaining Your McLaren Vehicle Care

## Carbon Fibre

Before cleaning visible carbon fibre, always test the cleaning solution on a concealed area. Clean with a propriety matt dashboard cleaner. Contact your McLaren retailer for more information. Do not use abrasive cleaning products or polish.

## Alcantara®

Dust the material with care. Moisten a soft cloth or a sponge with water, wring it thoroughly and run it over the whole Alcantara® material. Make sure not to wet it excessively; rinse the cloth or sponge and repeat as necessary.

Leave the material to dry overnight.

Once the material has dried, in order to restore the material, brush it delicately with a soft bristle brush.

## Seat belts

Extend the belts and clean with warm soapy water only. Do not use any type of detergent or chemical cleaning product. Allow the belts to dry naturally while extended, preferably away from direct sunlight.

## Instruments and display screens

Clean the Driver Display and Central Infotainment Touchscreen using a damp cloth. Do not use abrasive cleaning products or polish.

## Car cover

A car cover, suitable for use inside a garage, can be purchased from your McLaren retailer.

McLaren recommend that the vehicle is covered if it is to be left in storage for periods over two weeks. Clean the vehicle inside and out, ensuring that it has fully dried, prior to fitting the cover.




**NOTE:** Allow the engine to cool before fitting the cover or the hot exhaust pipes could cause damage to the cover.

## Maintaining Your McLaren

### Raising the Vehicle

#### Vehicle lifting points

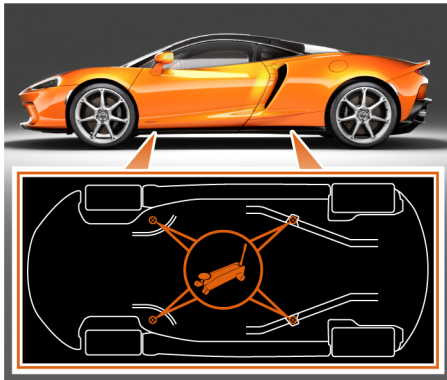

**WARNING:** Ensure the vehicle is correctly positioned on a jack or vehicle lift before raising the vehicle to a workable height. Always engage vehicle lift safety locks or use suitable stands to ensure your safety before working under the vehicle.

Refer to the illustration, and labels on the vehicle, for correct lifting locations.

Make this information available to any third parties who may be assisting in the recovery of your McLaren.



**NOTE:** Lifting the vehicle at any other points will damage the vehicle.



**NOTE:** Use a jack with a flat lifting platform and a rubber pad to protect the chassis from surface damage. Do not lift under a body panel.

## Maintaining Your McLaren

### McLaren Assistance

#### McLaren assistance

If your McLaren is immobilised, do not attempt to make your own arrangements for assistance.

Refer to your Service and Warranty Guide, this contains all the information you need.

#### Replacement battery

If your McLaren has been immobilised due to a fault with the vehicle battery, the battery must only be replaced with a lithium-ion battery of the correct specification.

#### In the event of a breakdown

In the event of a problem with your vehicle, contact your McLaren retailer. If your McLaren retailer is unavailable, contact the roadside assistance operator who is available 24 hours a day, 7 days a week.



**NOTE:** The contact details of your roadside assistance operator can be found in your Service and Warranty Guide.

The McLaren retailer or roadside assistance operator will verify your identity and that of your vehicle, as well as determining your exact location.

They will then discuss the problem with you and, with your agreement, determine the best solution.

# Maintaining Your McLaren

## McLaren Assistance


### Towing for recovery

Your McLaren is equipped with a front towing eye mounting only.

- i** NOTE: Do not tow the vehicle, doing so could damage the gearbox. The towing eye must only be used to winch the vehicle onto a trailer or transporter for recovery purposes. Do not use a rigid bar to tow the vehicle.

#### Towing eye and mounting

1. Remove the cover from the towing eye mounting in the front bumper.

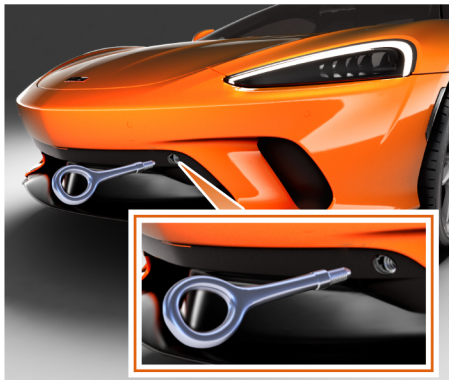

2. Screw the towing eye clockwise into the mounting hole, ensuring that it is screwed in to the full extent of the thread.

- i** NOTE: To avoid damage to the towing eye and the vehicle, it is important to ensure that the towing eye is in full contact with the mating surface of the front structure.

- i** NOTE: A winch cable/strap must be secured to the towing eye only or the vehicle could be damaged.

3. Remove the towing eye, stow it in the luggage compartment and refit the cover to the towing eye mounting as soon as the vehicle has been recovered.

# Maintaining Your McLaren

## Driving Abroad

### Driving abroad

McLaren retailers are also at your disposal when you are travelling abroad.

The legal requirements when driving abroad vary from country to country and are constantly changing. Always seek advice from your McLaren retailer regarding what is required to remain legal in the countries in which you are travelling.

In certain countries, only low-octane fuel is available. For further information about fuel grades, see Recommended fuel, page 2.44.



**NOTE:** The headlamp asymmetric dipped beam is designed to light up the near side of the road more intensely. On your McLaren, the same headlamp dipped beam setting applies for driving on either the left-hand or right-hand side of the road.







# Vehicle Data and Glossary

- Genuine McLaren Parts and Accessories.....7.02**
  - Overview.....7.02
- Vehicle Identification.....7.03**
  - Vehicle identification number (VIN).....7.03
- Data.....7.04**
  - Overview.....7.04
  - Vehicle operating temperatures.....7.04
  - Engine.....7.04
  - Maximum speeds in each gear.....7.05
  - Gear ratios.....7.05
  - Vehicle dimensions.....7.05
  - Vehicle weights.....7.07
  - Wheel and tyre sizes.....7.07
  - Turning circle.....7.08
  - Tyre pressures.....7.08
- Service Products, Fluids and Capacities.....7.10**
  - Service products.....7.10
  - Engine oil specification.....7.10
  - Fuel.....7.10
  - Coolant.....7.11
  - Power steering fluid.....7.11
  - Brake fluid.....7.12
  - Windscreen washer fluid.....7.12
- Technical Glossary.....7.13**
  - Technical glossary.....7.13

## Vehicle Data and Glossary

# Genuine McLaren Parts and Accessories

### Overview

McLaren recommend that you only use genuine McLaren replacement parts and accessories. The use of non-genuine parts could have a detrimental effect on the vehicle's operation and safety. McLaren tests replacement parts and accessories, for reliability, safety and suitability. McLaren accepts no responsibility for the use of non-genuine parts on their vehicles, even if they have been independently approved.

In many countries, replacement parts and accessories are only officially approved for installation if they comply with legal requirements. All genuine McLaren replacement parts and accessories meet these requirements.

Genuine McLaren parts and accessories can be obtained from your McLaren retailer where the parts will be professionally fitted.

Ensure that any accessories are suitable for your McLaren. Accessories which constitute a modification to the vehicle could invalidate the vehicle's warranty. This applies if they:

- change the vehicle type approved in the warranty.
- could endanger road users.

- adversely affect the vehicle's emissions and noise levels.

Always quote the vehicle identification number when ordering parts or accessories. See Vehicle identification number (VIN), page 7.03.

## Vehicle Identification


### Vehicle identification number (VIN)



The vehicle identification number can be found on the bottom left-hand corner of the windscreen.

The number can also be found engraved on the body behind the right-hand seat, stamped on a plate at the base of the driver's side door aperture and viewed in the Vehicle info section on the Driver Display, see Vehicle identification number, page 3.08.

## VIN plate

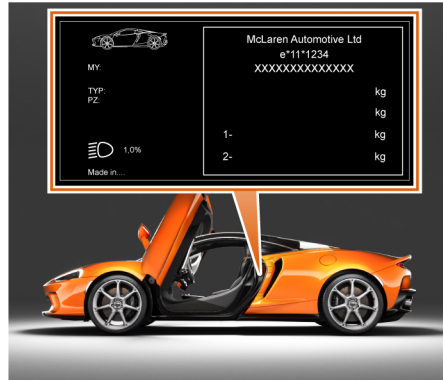

The vehicle identification number plate also contains the following:

- Maximum permitted laden weight
- Maximum permitted laden weight including trailer
- Maximum permitted front axle laden weight
- Maximum permitted rear axle laden weight

# Vehicle Data and Glossary Data

## Overview

This section contains all the necessary technical data for your vehicle and applies to the vehicle's standard equipment. The data may therefore differ for vehicles with optional equipment. You can obtain further information from your McLaren retailer.

## Vehicle operating temperatures

Minimum ambient operating temperature	-20°C (-4°F)
Maximum ambient operating temperature	+50°C (+122°F)

**i** NOTE: If the vehicle is used outside the minimum and maximum ambient temperatures, performance degradation may be experienced. McLaren disclaims any liability of the stated engine power not being achieved if the vehicle is being used outside of the stated temperature ranges or being used at altitude.

## Engine

Engine specification	
Rated output (kW) @rpm	537 @ 7,500
Rated output (PS) @rpm	620 @ 7,500
Rated torque (Nm) @rpm	630 @ 5,500
Rated torque (lb-ft) @rpm	464 @ 5,500
Number of cylinders	8
Displacement cm <sup>3</sup>	3,994
Maximum engine speed (rpm)	8,500
Power to weight ratio (PS/tonne)	425

# Vehicle Data and Glossary

## Data


### Maximum speeds in each gear

Gear	mph (km/h)
1st gear	50 (80)
2nd gear	76 (122)
3rd gear	105 (169)
4th gear	136 (218)
5th gear	173 (278)
6th gear	212 (340)
7th gear	197 (317)

### Gear ratios

1st gear	3.982:1
2nd gear	2.612:1
3rd gear	1.905:1
4th gear	1.479:1
5th gear	1.160:1
6th gear	0.906:1
7th gear	0.686:1
Final drive	3.308:1

### Vehicle dimensions

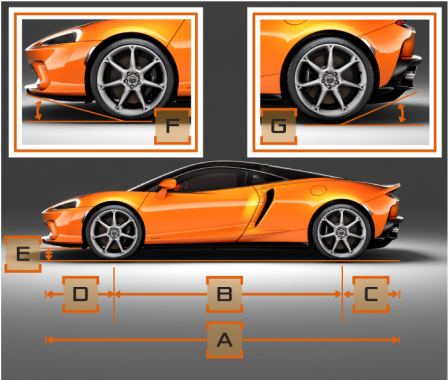

A	Vehicle length	4,683 mm (15 ft 4 in)
B	Wheelbase	2,675 mm (8 ft 9 in)
C	Rear overhang	907 mm (3 ft)
D	Front overhang	1,100 mm (3 ft 7 in)

# Vehicle Data and Glossary

## Data

E	Ground clearance (normal)	110 mm (4 in)
	Ground clearance (vehicle lift)	131 mm (5 in)
F	Approach angle (normal)	9.7°
	Approach angle (vehicle lift)	12.5°
G	Departure angle (normal)	13.9°
	Departure angle (vehicle lift)	13.1°



H	Vehicle width (doors closed, mirrors folded)	2,045 mm (6 ft 9 in)
I	Vehicle height (doors closed, normal)	1,213 mm (4 ft)
	Vehicle height (doors closed, vehicle lift)	1,234 mm (5 ft)



J	Vehicle width (doors open at widest point)	3,286 mm (10 ft 9 in)
K	Vehicle height (doors open)	1,977 mm (6 ft 6 in)

 NOTE: All dimensions are approximate.



# Vehicle Data and Glossary

## Data

### Vehicle weights

Weight	kg (lbs)
Dry weight	1,461 (3,220)
Unladen weight (all fluids and 90% fuel)	1,527 (3,366)
Kerb weight (plus 75 kg driver)	1,602 (3,531)
Kerb weight distribution - front axle	673 (1,484)
Kerb weight distribution - rear axle	929 (2,048)
Maximum gross vehicle weight (GVW)	1,796 (3,959)
Maximum gross vehicle weight distribution - front axle	783 (1,726)

Maximum gross vehicle weight distribution - rear axle	1013 (2,232)
Maximum load - front luggage compartment	50 (110)
Maximum load - rear luggage compartment	50 (110)

### Wheel and tyre sizes

#### Wheel sizes

Front wheels	8J x 20
Rear wheels	10.5J x 21

#### Summer tyres

Front tyres	
- Pirelli P Zero™	225/35 R20

Rear tyres	
- Pirelli P Zero™	295/35 R21

#### Winter tyres

Front tyres	
- Pirelli SottoZero™ 2	225/35 R20

# Vehicle Data and Glossary

## Data

Rear tyres	
- Pirelli SottoZero™ 2	295/35 R21

### Turning circle


Turning circle kerb-to-kerb	12.1 m (39 ft 8 in)
--------------------------------	---------------------

### Tyre pressures

Loading condition	Front wheels		Rear wheels	
	Bar	Psi	Bar	Psi
Normal use	2.2	32	2.2	32
Speeds over 165 mph (270 km/h)	2.7	39	2.7	39

The tyre pressures can also be found on a label on the inside of the fuel filler flap.

## Vehicle Data and Glossary Data

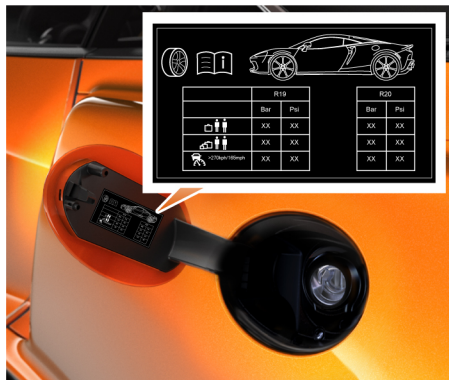


**i** NOTE: In some markets, the tyre pressure label is attached to the base of the driver's side door aperture.


Vehicle Data and Glossary

Service Products, Fluids and Capacities

Service products

Service products are fuel, engine oil, coolant and brake fluid. McLaren recommend that you only use products tested and approved for McLaren. Damage resulting from using non-approved service products is not covered by the liability for material defects.

 **WARNING:** When handling, storing and disposing of any service products, please observe the relevant regulations. Failure to do so could endanger people and the environment. Do not allow service products to come into direct contact with your eyes or open wounds. Contact a doctor immediately if any service product is swallowed.

 **ENVIRONMENTAL:** Dispose of service products in an environmentally responsible manner.


Engine oil specification




Engine oil capacity	8.0 litres
---------------------	------------


 **NOTE:** McLaren recommend only Mobil 1 FS 0W-40 engine oil.

You may obtain further information from your McLaren retailer.

 **NOTE:** Do not use any lubricant additives. These could lead to increased wear and damage to the mechanical assemblies. Damage caused by additives, which are not approved, is not covered by the McLaren warranty.

Fuel

 **WARNING:** Fuel is highly flammable. Fire, naked flames and smoking are prohibited when handling fuels. Switch off the engine before refuelling.

 **WARNING:** Do not allow fuel to come into contact with skin or clothing. Allowing fuels to come into direct contact with your skin or inhaling fuel vapours is damaging to your health.

For more information about fuel, see Recommended fuel, page 2.44.

Fuel tank

Total capacity	60 litres (13.2 UK gal.)
Capacity remaining when amber low level lamp illuminates	20 litres (4.4 UK gal.)
Capacity remaining when red low level lamp illuminates	11 litres (2.4 UK gal.)

## Vehicle Data and Glossary

### Service Products, Fluids and Capacities

#### Coolant

Cooling system capacity	24.5 litres (5.4 UK gal.)
Antifreeze/corrosion inhibitor	Mobil Extra Antifreeze
Antifreeze quantity for protection to -20°C (-4°F)	12.25 litres (2.7 UK gal.)

The coolant is a mixture of water, antifreeze and corrosion inhibitor. It performs the following functions in the cooling system:

- Antifreeze protection
- Increased efficiency of the cooling system
- Offers anti-corrosion protection

**i** NOTE: Use Mobil Extra Antifreeze in all climates, all year round. If coolant is not used, the cooling system will not be sufficiently protected from corrosion and the cooling system efficiency will be reduced.

**i** NOTE: To prevent damage to the engine, only top up with a pre-mixed coolant that provides the desired level of antifreeze protection.

If antifreeze/corrosion inhibitor is present in the correct concentration, the boiling point of the coolant will be around 130°C (266°F). The antifreeze and corrosion inhibitor concentration in the cooling system should be approximately 50% ±5%. This will protect the cooling system against freezing in temperatures of -40°C (-40°F).

The antifreeze and corrosion inhibitor concentration in the cooling system should not exceed 55%, which provides antifreeze protection down to -45°C (-49°F), as a higher concentration will not dissipate heat as effectively.

If the vehicle is losing coolant, do not drive your vehicle and contact your McLaren retailer.

#### Power steering fluid

Only use Pentosin CHF202 power steering fluid.


## Vehicle Data and Glossary

### Service Products, Fluids and Capacities

#### Brake fluid


Only use Pentosin DoT 5.1 brake fluid.


Over time, the brake fluid absorbs moisture from the air, this reduces its boiling point.

 **WARNING: If the boiling point of the brake fluid is reduced too much, vapour pockets may form in the brake system when the brakes are applied hard (e.g. when driving downhill or track driving) impairing the braking efficiency. Therefore, the brake fluid must be replaced at the recommended service intervals.**

 **WARNING: Only use fluid from new, air tight containers.**

#### Windscreen washer fluid


 **WARNING: Some washer fluids are highly flammable. Fire, naked flames and smoking are prohibited when handling washer fluid.**

 **WARNING: Washer fluid is toxic. Keep containers sealed and away from children. If fluid is accidentally consumed, seek medical help straight away.**

McLaren recommend the use of Mobil screenwash concentrate.

The reservoir has a capacity of approximately 2.5 litres.

Dilute the screenwash concentrate as instructed by the screenwash manufacturer.

 **NOTE: The concentration of to the screenwash required may vary in different seasons.**

# Vehicle Data and Glossary

## Technical Glossary

### Technical glossary

#### Active dynamics control

A system that allows the driver to change the handling and performance characteristics of the vehicle.

#### Anti-lock braking system (ABS)

The ABS prevents the wheels from locking when you brake. This allows the vehicle to be steered during braking manoeuvres.

#### Automatic driver recognition cards

A card which must be on the person entering the vehicle or the tracker system signals that the vehicle is being moved without authorisation.

#### Brake assist system

The brake assist system operates in emergency braking situations. If you depress the brake pedal quickly, the brake assist system automatically increases the force being applied to the brakes and thus shortens the stopping distance.

#### Brake disc wiping

Brake disc wiping operates when the windscreen wipers are switched on. It prevents moisture build up on the brake discs during periods of heavy rain, by applying the brakes momentarily, so that the pads touch the discs.

#### Brake steer

Brake steer offers the benefits of a torque vectoring differential, but is integrated into the braking system reducing weight and providing excellent speed of response.

If the system detects that the vehicle is starting to understeer through a corner, the inside rear brake is gently applied. This helps to increase the yaw rate of the vehicle, making the vehicle feel more resistant to understeer. The lateral 'g' force is also increased giving better handling characteristics.

If the driver uses too much throttle exiting a corner, the inside rear wheel increases speed, which without brake steer could cause the vehicle to become unstable. In this situation, brake steer will again gently apply the brake on the inside rear wheel, thereby restoring traction and stability.

#### Cylinder cut

Cylinder cut operates during automatic upshifts in Sport and Track powertrain modes and manual upshifts in Comfort powertrain mode.

When calling for an upshift under hard acceleration, fuel is interrupted (cut) in a defined number of engine cylinders. This rapidly decrease the engine torque and engine speed, allowing faster upshifts to be achieved. This will make the upshift more audibly noticeable than a normal upshift.

#### Electronic brake pre-fill

If the accelerator pedal is suddenly released, the electronic brake pre-fill function immediately brings the brake pads into contact with the discs, enabling more rapid braking.

#### Electronic stability control (ESC)

ESC monitors driving stability and traction between the tyres and the road surface.

# Vehicle Data and Glossary

## Technical Glossary

### Global positioning system (GPS)

By means of the appropriate receivers, satellite signals supply information on the geographical position of the vehicle. These signals are compared with a digital map and used both to determine the position of the vehicle and for its route guidance.

### Handling control

The handling control switch affects the Proactive Chassis Control II system.

### Hill hold control

Hill hold control prevents roll-back on hill starts. The brake system automatically applies the brakes until the accelerator is pressed.

### Ignition cut

Ignition cut operates during manual upshifts in powertrain mode.

When calling for an upshift under hard acceleration, ignition is interrupted (cut) in a defined number of engine cylinders. This rapidly decreases the engine torque and engine speed, allowing faster upshifts to be achieved.

### Inertia push

When Non-Active is selected or within Track powertrain mode when calling for an upshift at high engine speeds under hard acceleration, inertia push delivers greater acceleration. Under normal driving conditions, outside of inertia push when maximum performance is not called for, the engine and transmission speeds are aligned for a smooth seamless upshift. However, with inertia push, the clutch holding the next gear is engaged with greater force and the engine speed is not allowed to decrease fully, therefore utilising the inertia of its internal rotating masses. This in turn provides a torque impulse as the gear is engaged aiding acceleration and maximising performance.

### Keyless entry

Keyless entry allows the driver to unlock the vehicle and disarm the alarm by simply opening the door when the key fob is within 1.2 m (3 ft 11 in) of the door sensors.

### Launch control

Launch control is designed to give the maximum acceleration performance from a standing start.

### Motorway function lighting

The motorway function lighting improves the headlamp illumination range when the vehicle speed exceeds a predetermined threshold.

### Parking sensors

The parking sensor system comprises four ultrasonic sensors in the front bumper, four ultrasonic sensors in the rear bumper and two sounders. When the parking sensors detect an obstruction while manoeuvring, the sounders provide an audible warning.

### Performance shift cue (PSC)

PSC is an audible shift indicator, which will sound to indicate that an upshift is required to maintain optimum performance.

### Rear view camera (RVC)

The RVC is mounted in the centre of the rear bumper. The live video feed is displayed on either the Driver Display or the Central Infotainment Touchscreen when the function is active.



## Vehicle Data and Glossary

### Technical Glossary

#### Seamless shift gearbox

The seamless shift gearbox is a 7 speed, dual clutch gearbox. Gear changes can be fully automatic or driver controlled. The gear changes are almost instantaneous. It is this coupled with uninterrupted torque delivery from the engine which provides the relentless acceleration.

#### Static Adaptive Headlamps

With the headlamps on, the Static Adaptive Headlamps adjust the beams when cornering, providing improved illumination in the direction of travel.

#### Supplementary restraint system (SRS)

The SRS comprises a number of air bags which are automatically deployed in an accident to provide additional occupant protection.

#### Tyre pressure monitoring system (TPMS)

The TPMS constantly checks the pressure and temperature in all four tyres. It warns if the pressure drops or the temperature rises in one or more of the tyres.

#### Vehicle identification number (VIN)

The VIN is a unique 17 digit number which provides information about your vehicle, as well as when and where it was built.

Typical VIN = SBM22GCBOKW000001







# Conformity Information

**Compliance.....8.02**  
Tyre Pressure Monitoring System (TPMS).....8.02

# Conformity Information Compliance

## Tyre Pressure Monitoring System (TPMS)

Hereby, Huf Hüsbeck & Fürst GmbH & Co. KG declares that the radio equipment type TSSSG4G5 and TSSRE4Dg are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

- [http:// www.huf-group.com/eudoc](http://www.huf-group.com/eudoc)

Frequency band: 433.92 MHz (TSSSG4G5 and TSSRE4Dg)

Maximum Transmission Power: <10 mW (TSSRE4Dg)

Manufacturer: Huf Electronics Bretten GmbH, Gewerbestr. 40, 75015 Bretten, Germany

Por la presente, Huf Hüsbeck & Fürst GmbH & Co. KG declara que el tipo de equipo radioeléctrico TSSSG4G5 y TSSRE4Dg es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección de Internet siguiente:

- [http:// www.huf-group.com/eudoc](http://www.huf-group.com/eudoc)

Banda de frecuencia: 433.92 MHz (TSSSG4G5 and TSSRE4Dg)

Potencia máxima de radiofrecuencia transmitida: <10 mW (TSSRE4Dg)

Los fabricantes: Huf Electronics Bretten GmbH, Gewerbestr. 40, 75015 Bretten, Germany

Hiermit erklärt Huf Hüsbeck & Fürst GmbH & Co. KG, dass der Funkanlagentyp TSSSG4G5 und TSSRE4Dg der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

- [http:// www.huf-group.com/eudoc](http://www.huf-group.com/eudoc)

Frequenzband: 433,92 MHz (TSSSG4G5 und TSSRE4Dg)

Abgestrahlte maximale Sendeleistung: <10 mW

Hersteller: Huf Electronics Bretten GmbH, Gewerbestr. 40, 75015 Bretten, Germany

Le soussigné, Huf Hüsbeck & Fürst GmbH & Co. KG, déclare que l'équipement radioélectrique du type TSSSG4G5 et TSSRE4Dg est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

- [http:// www.huf-group.com/eudoc](http://www.huf-group.com/eudoc)

Bandes de fréquences utilisées: 433.92 MHz (TSSSG4G5 et TSSRE4Dg)

Puissance de radiofréquence maximale: <10 mW

Les fabricants: Huf Electronics Bretten GmbH, Gewerbestr. 40, 75015 Bretten, Germany

Il fabbricante, Huf Hüsbeck & Fürst GmbH & Co. KG, dichiara che il tipo di apparecchiatura radio TSSSG4G5 e TSSRE4Dg è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

- [http:// www.huf-group.com/eudoc](http://www.huf-group.com/eudoc)

Banda di frequenza: 433.92 MHz (TSSSG4G5 e TSSRE4Dg)

Massima potenza di trasmissione: <10 mW

Fabbricante: Huf Electronics Bretten GmbH, Gewerbestr. 40, 75015 Bretten, Germany







# Index

<b>A</b>	
Accelerator pedal position.....	2.16
Accessories.....	7.02
Active dynamics panel.....	2.20
active button.....	2.20
handling control.....	2.21
launch control.....	2.25
powertrain control.....	2.22
Active speed limiter.....	2.39
cancelling an upper speed limit.....	2.40
setting an upper speed limit.....	2.39
Air bags.....	1.29
child passengers.....	1.33
deployment.....	1.32
front air bags.....	1.29
occupant classification system.....	1.30
Out Of Position (OOP) testing.....	1.32
replacement.....	1.29
side head air bags.....	1.30
system modification.....	1.29
Air distribution - climate control.....	5.09
Air recirculation mode - climate control.....	5.08
Air vents	
central dashboard.....	5.09
dashboard.....	5.09
Alarm.....	1.15
arming.....	1.15
disarming.....	1.15
panic.....	1.42
Anti-lock braking system.....	2.27
Anti-trap protection - windows.....	5.03
Audio	
overview.....	4.34
Automatic light control.....	1.39
Automatic locking.....	1.09
Automatic mirror folding	
settings.....	4.11
Automatic mode - climate control.....	5.05
Automatic mode - transmission.....	2.17
Automatic wipe.....	1.44
<b>B</b>	
Battery.....	6.14
Battery care and maintenance	
battery charging.....	6.14
charging the battery.....	6.14
Battery fuse box.....	6.23
fuses.....	6.23
Battery replacement - key fob.....	6.33
Battery safety.....	6.14
Battery status.....	3.07
Belts - seat	
Blower speed - climate control.....	5.08
Boost starting.....	6.15
Brake assist system.....	2.28
Brake disc wiping.....	2.28
Brake fluid.....	7.12
topping up.....	6.07
Brake pedal.....	2.08
Brakes	
Anti-lock braking system.....	2.27
Anti-lock braking system warning	
light.....	2.28
bedding-in.....	2.41
brake assist system.....	2.28
brake disc wiping.....	2.28
brake steer.....	2.29
electronic brake pre-fill.....	2.29
foot.....	2.08
hill hold control.....	2.29
parking.....	2.06
pedal.....	2.08
warning light.....	2.08
Brake-steer.....	2.29
Breakdown.....	6.46
Bulb replacement.....	6.25
<b>C</b>	
Camera.....	2.14
rear view.....	2.14
Capacities.....	7.10
cooling system.....	7.11
engine oil.....	7.10

# Index

fuel tank.....	7.10	radio controls.....	4.32	Climate	
Car cover.....	6.44	radio data system.....	4.33	hot evac.....	4.12
Catalytic converter.....	2.12	radio settings.....	4.13	Climate control.....	5.04
high temperature.....	2.12	receiving a call.....	4.24	air conditioning controls.....	5.04
Central Display		safety.....	4.36	air distribution.....	5.09
bluetooth audio.....	4.31	security settings.....	4.16	air recirculation mode.....	5.08
climate settings.....	4.12	setting a destination.....	4.37	air vents.....	5.09
connecting an external device.....	4.28	settings.....	4.05	automatic mode.....	5.05
connectivity settings.....	4.05	storage.....	4.30	blower speed.....	5.08
contacts.....	4.25	system controls.....	4.02	central air vent.....	5.09
copyright.....	4.02	system settings.....	4.18	controls.....	5.04
device pairing.....	4.20	time and units settings.....	4.06	demisting.....	5.06
driving preference.....	4.10	USB and iPod.....	4.29	heated mirrors.....	5.10
ending a call.....	4.25	using navigation.....	4.37	heated rear window.....	5.10
garage door opener.....	4.39, 4.39-4.40,	Centre console stowage		heated seats.....	5.10
HomeLink.....	4.39, 4.39-4.40,	compartment.....	5.13	Hot Evac.....	5.05
in-call options.....	4.24	Changing wheels.....	6.39	manual mode.....	5.05
introduction.....	4.04	Checking engine oil.....	6.02	switching on/off.....	5.06
lighting settings.....	4.10	Child passengers.....	1.33	SYNC mode.....	5.05
making a call.....	4.22	Child restraint system.....	1.33	temperature.....	5.07
media controls.....	4.28	KISI child seat function.....	1.34	Clock.....	3.04
media settings.....	4.14	Cleaning.....	6.42	Closing the luggage compartment.....	1.10
other information.....	4.02	Centre Display.....	6.44	Closing the rear luggage	
overview - audio.....	4.34	Driver Display.....	6.44	compartment.....	1.11
overview - media.....	4.27	exterior.....	6.42	Closing the windows.....	5.02
overview - navigation.....	4.36	instruments and display screens.....	6.44	Comfort entry/exit	
overview - phone.....	4.19	interior.....	6.43	settings.....	4.11
overview - radio.....	4.32	wheels.....	6.42	Coolant.....	7.11
phone settings.....	4.13			topping up.....	6.05

# Index

Copyright.....	3, 4.02
Cruise control.....	2.35
cancelling.....	2.36
decreasing speed.....	2.37
increasing speed.....	2.37
resuming speed.....	2.38
setting.....	2.35
Cup holders.....	5.15

## D

### Data

overview.....	7.04
Daytime running lamps.....	1.40
Defrosting - climate control.....	5.06
Demisting - climate control.....	5.06
Deployment - air bags.....	1.32
Diagnostic port.....	6.18
Dimensions.....	7.05
Dipped beam headlamps.....	1.39
Direction indicators.....	1.41
Discharged battery.....	1.04
Discharged key fob battery.....	6.33
starting the engine.....	6.27
unlocking.....	6.26
Display.....	3.17
comfort mode.....	3.17
Electronic stability control mode.....	3.18
fuel level.....	3.20

fuel range.....	3.20
gear position indicator.....	3.18
handling and powertrain display.....	3.18
instruments cluster.....	3.04
messages.....	3.10
non-active mode.....	3.17
oil temperature.....	3.19
sport mode.....	3.17
track mode.....	3.17
trip computer.....	3.05
vehicle info.....	3.06
water temperature.....	3.19
Display messages.....	3.10
Display screen cleaning.....	6.44
Door	
stowage compartments.....	5.14
Door mirror heating.....	1.37
Doors	
automatic locking.....	1.09
closing.....	1.08
locking.....	1.05
locking and unlocking from inside.....	1.07
manual opening from inside.....	6.28
opening from inside.....	1.07
opening from inside - discharged battery.....	6.28
opening from outside.....	1.04
opening from outside - discharged battery.....	6.26

Door stowage compartments.....	5.14
Drink holders.....	5.15
Driver Display.....	3.04, 3.17
comfort mode.....	3.17
fuel level.....	3.20
gear position indicator.....	3.18
media.....	3.09
messages.....	3.10
navigation.....	3.10
non-active mode.....	3.17
overview.....	2.05, 3.02
phone.....	3.08
right-hand display overview.....	2.05, 2.06
shift lights.....	3.02
speedometer.....	3.03
sport mode.....	3.17
tachometer.....	3.02
track mode.....	3.17
trip computer.....	3.05
vehicle info.....	3.06
water temperature.....	3.19
Driver Display overview.....	2.05
Driving abroad.....	6.48
Driving away.....	2.10
Driving in winter.....	2.46
Driving precautions.....	6.38
Driving preference settings.....	4.10

# Index

Driving safety systems	
general.....	2.27
Dynamic ESC modes.....	2.30
Dynamic headlamps.....	1.40

## E

Economical driving.....	2.11
Eco start-stop system.....	2.09
Electrical status.....	2.02
Electric seats.....	1.20
backrest rake adjustment.....	1.20
forward and rearward adjustment.....	1.20
height adjustment.....	1.21
lumbar adjustment.....	1.21
Electric seats and mirror memory.....	1.21
Electric Windows	
safety.....	5.02
Electrochromic roof.....	5.13
Electronic brake pre-fill.....	2.29
Electronic Stability Control.....	2.30
deactivating.....	2.30
dynamic modes.....	2.30
reactivating.....	2.31
Electronic user manual.....	3
Emergency equipment.....	6.10
fire extinguisher.....	6.13
first aid kit.....	6.11
fuel funnel.....	6.12

manual door release key holder.....	6.12
safety.....	6.10
towing eye.....	6.12
tyre sealant.....	6.11
warning triangle.....	6.10
Emergency fuel filling funnel.....	6.12
Engine.....	2.08
eco start-stop system.....	2.09
immobiliser.....	1.15
power output.....	7.04
running in.....	2.41
starting.....	2.08
stopping.....	2.09
technical data.....	7.04
warning light.....	2.11
Engine oil.....	6.02
capacity.....	7.10
checking.....	6.02
level warnings.....	6.02
specification.....	7.10
temperature warnings.....	6.04
topping up.....	6.03
usage.....	6.02
Entry lighting.....	5.12
Equipment.....	6.10
front luggage compartment.....	6.10
Error messages.....	3.06
Exhaust.....	2.12
temperature monitoring.....	2.12

Exit lighting.....	5.12
Exterior lighting.....	1.38
Exterior mirrors.....	1.36
heating.....	1.37
memory.....	1.21
mirror automatic fold.....	1.37
mirror fold.....	1.37
reverse dip.....	1.37
Extinguisher.....	6.13
Eye - towing.....	6.12

## F

### Features

12 V socket.....	5.16
cup holders.....	5.15
electrochromic roof.....	5.13
entry lighting.....	5.12
exit lighting.....	5.12
interior lighting.....	5.11
stowage compartments.....	5.13
sun visors.....	5.16
USB sockets.....	5.17
Filling with fuel.....	2.43
Fire extinguisher.....	6.13
First aid kit.....	6.11
Fluid - brake.....	7.12
topping up.....	6.07
Fluid - power steering.....	7.11

# Index

topping up.....	6.06
Foot brake.....	2.08
Force limiters - seat belts.....	1.28
Front air bags.....	1.29
Front luggage compartment.....	1.09
equipment.....	6.10
manual opening.....	6.29
opening - discharged battery.....	6.29
unlocking and opening.....	1.09
Fuel.....	2.43
funnel.....	6.12
quality.....	2.44
safety.....	7.10
tank.....	7.10
Fuel level display.....	3.20
Fuel range display.....	3.20
Funnel - fuel.....	6.12
Fuse box	
battery.....	6.23
main.....	6.18
secondary.....	6.21
Fuses	
battery fuse box.....	6.23
main fuse box.....	6.18
replacement.....	6.18
secondary fuse box.....	6.21

## G

Garage door opener.....	4.39
edit button label.....	4.40
operation.....	4.41
overview.....	4.39
programming.....	4.39
settings.....	4.15
Gearbox.....	2.15
gear positions.....	2.15
gearshift paddles.....	2.18
kickdown.....	2.16
manual/automatic mode.....	2.17
oil topping up.....	6.04
Gear position indicator.....	3.18
Gear positions.....	2.06
Gear ratios.....	7.05
Gear shift indicator.....	2.11
General.....	2.27
Genuine McLaren parts and accessories.....	7.02
Glossary - technical.....	7.13
Glove box.....	5.13
Ground clearance.....	5

## H

Handling control.....	2.21
Hazard warning lamps.....	1.42

Headlamps.....	1.39
dynamic headlamps.....	1.40
flash.....	1.39
main beam.....	1.39
Heated mirrors.....	1.37
Heated rear window.....	5.10
Heated seats.....	5.10
Hill hold control.....	2.29
HomeLink.....	4.39
edit button label.....	4.40
operation.....	4.41
overview.....	4.39
programming.....	4.39
settings.....	4.15
Horn.....	1.26
Hot Evac - climate control.....	5.05

## I

Identification number - vehicle.....	7.03
Ignition - switching on.....	2.03
Immobiliser.....	1.15
Increasing vehicle ground clearance.....	1.46
Increasing vehicle ride height.....	1.46
Individual unlock settings.....	1.07
In gear speeds.....	7.05
Inspecting tyres.....	6.38
Inspecting wheels.....	6.38
Instrument cluster display.....	3.04

## Index

Instruments.....	3.17	ambient lighting.....	5.11	Launch control.....	2.25
cleaning.....	6.44	courtesy lighting.....	5.11	Lifting points - vehicle.....	6.45
comfort mode.....	3.17	Interior mirror.....	1.36	Lighting	
display.....	3.17	Interior motion sensor.....	1.16	ambient lighting.....	5.11
display messages.....	3.10	Introduction.....	2	automatic control.....	1.39
display window.....	3.17	overview.....	4.04	courtesy lighting.....	5.11
driver display overview.....	2.05	Stored data.....	6	daytime running lamps.....	1.40
Electronic stability control mode				dipped beam.....	1.39
display.....	3.18	<b>J</b>		direction indicators.....	1.41
fuel level display.....	3.20	Jacking the vehicle.....	6.45	dynamic headlamps.....	1.40
fuel range display.....	3.20	Jump starting.....	6.15	exterior.....	1.38
gear position indicator.....	3.18	<b>K</b>		hazard warning lamps.....	1.42
handling and powertrain display.....	3.18	Key fob.....	1.02	headlamp flash.....	1.39
left-hand display overview.....	2.05	battery replacement.....	6.33	interior.....	5.11
non-active mode.....	3.17	discharged battery.....	1.04	main beam.....	1.39
oil temperature display.....	3.19	entry.....	1.02	parking lights.....	1.43
overview.....	3.02	stowing.....	1.03	rear fog lamp.....	1.41
right-hand display overview.....	2.06	Keyless entry.....	1.02	settings.....	4.10
shift lights.....	3.02	Kickdown.....	2.16	sidelamps.....	1.39
speedometer.....	3.03	Kit - first aid.....	6.11	switch.....	1.38
sport mode.....	3.17	Kit - tyre repair.....	6.40	Light switch.....	1.38
tachometer.....	3.02			Limhome.....	2.11
track mode.....	3.17	<b>L</b>		Locking.....	1.05
trip computer.....	3.05	Lamps - side.....	1.39	automatic.....	1.09
vehicle info.....	3.06			from inside.....	1.07
water temperature display.....	3.19			from outside.....	1.05
Interchanging wheels.....	6.39			mislock.....	1.06
Interior accessory power socket.....	5.16			Luggage compartment	
Interior lighting.....	5.11			closing.....	1.10

# Index

front.....	1.09
Luggage retention.....	1.13

## M

Main beam.....	1.39
Main fuse box.....	6.18
fuses.....	6.18
Main instruments overview.....	2.05
Manual door release	
key holder.....	6.12
Manual door release key holder.....	6.12
Manual mode - climate control.....	5.05
Manual mode - transmission.....	2.17
Manual seats.....	1.19
backrest rake adjustment.....	1.19
forward and rearward adjustment.....	1.19
height adjustment.....	1.19
Manual unlocking.....	6.26
McLaren Assistance.....	6.46
in the event of a breakdown.....	6.46
McLaren Infotainment System	
bluetooth audio.....	4.31
climate settings.....	4.12
connecting an external device.....	4.28
connectivity settings.....	4.05
contacts.....	4.25
copyright.....	4.02
device pairing.....	4.20

driving preference.....	4.10
ending a call.....	4.25
in-call options.....	4.24
introduction.....	4.04
lighting settings.....	4.10
making a call.....	4.22
media controls.....	4.28
media settings.....	4.14
other information.....	4.02
overview - audio.....	4.34
overview - media.....	4.27
overview - navigation.....	4.36
overview - phone.....	4.19
overview - radio.....	4.32
phone settings.....	4.13
radio controls.....	4.32
radio data system.....	4.33
radio settings.....	4.13
receiving a call.....	4.24
safety.....	4.36
security settings.....	4.16
setting a destination.....	4.37
settings.....	4.05
storage.....	4.30
system controls.....	4.02
system settings.....	4.18
time and units settings.....	4.06
USB and iPod.....	4.29
using navigation.....	4.37

Media.....	3.09
bluetooth audio.....	4.31
connecting an external device.....	4.28
media controls.....	4.28
overview.....	4.27
settings.....	4.14
storage.....	4.30
USB and iPod.....	4.29
Media USB socket.....	5.17
Messages.....	3.06
Mirror	
automatic exterior mirror fold.....	1.37
exterior.....	1.36
exterior mirror fold.....	1.37
heating.....	1.37, 5.10
interior.....	1.36
memory.....	1.21
reverse dip.....	1.37
Mirrors	
vanity.....	5.16
Mislock.....	1.06
Motion sensor - interior.....	1.16

## N

Navigation.....	3.10
overview.....	4.36
safety.....	4.36
setting a destination.....	4.37

# Index

using navigation.....	4.37
Notification lights.....	2.04

## O

Odometer.....	3.06
Oil - engine.....	6.02
capacity.....	7.10
checking.....	6.02
level.....	6.02
level warnings.....	6.02
specification.....	7.10
status.....	3.07
temperature display.....	3.19
temperature warnings.....	6.04
top up.....	6.03
Oil - gearbox.....	6.04
Opening a door	
from inside.....	1.07
from outside.....	1.04
Opening and closing the vents	
central dashboard air vent.....	5.09
dashboard air vents.....	5.09
Opening the windows.....	5.02
Operating temperatures - vehicle.....	7.04
Other information.....	4.02
Outside temperature display.....	3.04
Owner documentation.....	5.15

## P

Panic alarm.....	1.42
Parking brake.....	2.06
Parking days.....	2.02
Parking lights.....	1.43
Parking sensors.....	2.12
Parts.....	7.02
Parts and accessories.....	7.02
Passengers - child.....	1.33
Performance shift cue	
settings.....	4.11
Phone.....	3.08
contacts.....	4.25
Device pairing.....	4.20
ending a call.....	4.25
in-call options.....	4.24
making a call.....	4.22
overview.....	4.19
receiving a call.....	4.24
settings.....	4.13
Power output.....	7.04
engine.....	7.04
Power steering fluid.....	7.11
topping up.....	6.06
Powertrain control.....	2.22
Precautions - driving.....	6.38
Pressures - tyre.....	6.39, 7.08
Products - service.....	7.10

Puncture repair kit.....	6.40
--------------------------	------

## R

Radio	
overview.....	4.32
radio controls.....	4.32
radio data system.....	4.33
Radio settings.....	4.13
Rain sensor.....	1.44
Ratios - gear.....	7.05
Reading lights.....	5.11
Rear fog lamp.....	1.41
Rear luggage compartment.....	1.10
closing.....	1.11
luggage retention.....	1.13
manual opening.....	6.31
opening - discharged battery.....	6.31
rear.....	1.10
stowage.....	1.13
unlocking and opening.....	1.10
Rear view camera.....	2.14
Rear View Camera (RVC)	
settings.....	4.11
Rear Window	
heating.....	5.10
Recirculation mode - climate control.....	5.08
Recommended fuel quality.....	2.44
Recovery of your vehicle.....	6.47



# Index

Refuelling.....	2.43
Replacement battery.....	6.46
Replacing	
bulbs.....	6.25
fuse.....	6.18
key fob battery.....	6.33
vehicle battery.....	6.46
wiper blade.....	6.34
Restraint system.....	1.29
child.....	1.33
KISI child seat function.....	1.34
supplementary.....	1.29
Rev counter.....	3.02
Road speed limit display	
settings.....	4.11
Running in.....	2.41

## S

Safety.....	1.27
air bags.....	1.29
air bags Out Of Position (OOP).....	1.32
air bag system modification.....	1.29
battery.....	6.14
electric windows.....	5.02
fuel.....	7.10
mirrors.....	1.36
replacement of air bags.....	1.29
seat belts.....	1.27

seats.....	1.18
Sealant - tyre.....	6.11
Seamless Shift Gearbox.....	2.15
gear positions.....	2.15
gearshift paddles.....	2.18
kickdown.....	2.16
manual/automatic mode.....	2.17
Seat belts.....	1.27
force limiters.....	1.28
safety.....	1.27
tensioners.....	1.28
wearing.....	1.28
Seat belt warning light.....	1.28
Seats	
backrest - electric rake adjustment....	1.20
backrest - manual rake adjustment....	1.19
electric adjustment.....	1.20, 1.20
electric backrest rake adjustment.....	1.20
electric forward and rearward	
adjustment.....	1.20
electric height adjustment.....	1.21
electric seat and mirror memory.....	1.21
electric seat lumbar adjustment.....	1.21
heating.....	1.23, 5.10
manual adjustment.....	1.19
manual backrest rake adjustment.....	1.19
manual forward and rearward	
adjustment.....	1.19
manual height adjustment.....	1.19

safety.....	1.18
stowage pocket.....	5.14
Seat stowage pocket.....	5.14
Secondary fuse box.....	6.21
fuses.....	6.21
Security	
settings.....	4.16
Sensors	
interior motion.....	1.16
parking.....	2.12
Service and Warranty.....	5.15
Service interval.....	3.08
Service products.....	7.10
Settings	
automatic mirror folding.....	4.11
Bluetooth.....	4.05
climate.....	4.12
comfort entry/exit.....	4.11
Connectivity.....	4.05
driving preference.....	4.10
garage door opener.....	4.15
HomeLink.....	4.15
hot evac.....	4.12
lighting.....	4.10
media.....	4.14
overview.....	4.05
Performance shift cue.....	4.11
phone.....	4.13
Rear View Camera (RVC).....	4.11

# Index

Road speed limit.....	4.11	Starting the engine.....	2.08	System	
security.....	4.16	discharged key fob battery.....	6.27	settings.....	4.18
system.....	4.18	Steering column		System controls.....	4.02
time and units.....	4.06	electrical adjustment.....	1.24		
tyre type.....	4.12	manual adjustment.....	1.24	<b>T</b>	
Wi-Fi.....	4.05	Steering wheel		<hr/>	
wiper modes.....	4.12	electrical adjustment.....	1.24	Tachometer.....	3.02
wiper sensitivity.....	4.11	horn.....	1.26	Technical data.....	7.04
Settings - individual unlock.....	1.07	manual adjustment.....	1.24	engine.....	7.04
Setting up warning triangle.....	6.11	Stopping the engine.....	2.09	gear ratios.....	7.05
Shift lights.....	3.02	Stored data.....	6	speeds - in gear.....	7.05
Side head air bags.....	1.30	Stowage		turning circle.....	7.08
Sidelamps.....	1.39	rear luggage compartment.....	1.13	tyre pressures.....	7.08
Snow socks.....	2.46	Stowage compartments.....	5.13	vehicle dimensions.....	7.05
Specification - engine oil.....	7.10	centre console.....	5.13	vehicle operating temperatures.....	7.04
Specifications.....	7.04	door.....	5.14	vehicle weights.....	7.07
Speedometer.....	3.03	glove box.....	5.13	wheel and tyre sizes.....	7.07
Speeds - in gear.....	7.05	nets.....	5.15	Technical glossary.....	7.13
START/STOP button.....	2.03	seat.....	5.14	Temperature - climate control.....	5.07
Starting and driving		Stowage nets.....	5.15	Temperature display.....	3.04
foot brake.....	2.08	Stowing the key fob.....	1.03	Tensioners - seat belt.....	1.28
gear positions.....	2.06	Summer tyres.....	7.07	Topping up.....	6.02
instruments and warning lights.....	2.03	Sun visors.....	5.16	brake fluid.....	6.07
main instruments.....	2.05	Supplementary Restraint System.....	1.29	coolant.....	6.05
notification lights.....	2.04	Switching air conditioning on/off.....	5.06	engine oil.....	6.03
parking brake.....	2.06	Switching on the ignition.....	2.03	gearbox oil.....	6.04
starting the engine.....	2.08	Switch - lighting.....	1.38	power steering fluid.....	6.06
switching on the ignition.....	2.03	Symbols.....	4	windscreen washer fluid.....	6.08
warning lights.....	2.03	SYNC mode - climate control.....	5.05	Tow-away protection.....	1.16

# Index

Towing.....	6.47
eye.....	6.12
Track driving.....	5
Track use.....	2.42
Traction control system.....	2.30
Triangle - warning.....	6.10
Turning circle.....	7.08
Tyre monitoring.....	3.07
Tyre pressures.....	6.39, 7.08
Tyres.....	6.37
asymmetric.....	6.37
inspecting.....	6.38
markings.....	6.37
monitoring system.....	2.32
pressure monitoring.....	2.33
pressures.....	6.39, 7.08
repair kit.....	6.40
sealant.....	6.11
summer.....	7.07
temperature monitoring.....	2.34
winter.....	7.07
Tyre type.....	4.12

## U

Unlocking and opening the front luggage compartment.....	1.09
Unlocking and opening the rear luggage compartment.....	1.10

Unlocking - discharged battery.....	6.26
Unlocking from inside.....	1.07
Unlocking from outside	
key fob.....	1.02
keyless.....	1.04
Upper speed limit	
cancelling.....	2.40
setting.....	2.39
USB socket	
media.....	5.17
USB sockets.....	5.17

## V

Vanity mirrors.....	5.16
Vehicle dimensions.....	7.05
Vehicle electrical status.....	2.02
Vehicle identification number.....	3.08, 7.03
Vehicle info.....	3.06
battery status.....	3.07
error messages.....	3.06
oil status.....	3.07
service interval.....	3.08
tyre monitoring.....	3.07
vehicle identification number.....	3.08
vehicle lift.....	1.46
lower.....	1.47
operation.....	1.46
raise.....	1.47

Vehicle lifting points.....	6.45
Vehicle Recovery.....	6.46, 6.46
Vehicle speeds.....	7.05
Vehicle starting.....	2.08
discharged key fob battery.....	6.27
Vehicle use.....	2.41
Vehicle washing.....	6.42
Vehicle weights.....	7.07
Vents	
central dashboard.....	5.09
dashboard.....	5.09
Volumetric alarm.....	1.16

## W

Warning - engine oil level.....	6.02
Warning - engine oil temperature.....	6.04
Warning light	
Anti-lock braking system.....	2.28
brakes.....	2.08
engine.....	2.11
seat belt.....	1.28
Supplementary Restraint System.....	1.32
Warning lights.....	2.03
Warning triangle.....	6.10
Washer fluid	
windscreen.....	6.08, 7.12
Washing.....	6.42
exterior.....	6.42

# Index

wheels.....	6.42	Wiper modes.....	4.12
Water temperature display.....	3.19	Wiper sensitivity.....	4.11
Wearing seat belts.....	1.28		
Weights.....	7.07		
Wheel and tyre sizes.....	7.07		
Wheels.....	6.36		
inspecting.....	6.38		
interchanging.....	6.39		
Wheels and tyres.....	6.36		
Wheel sizes.....	7.07		
Wheel - steering			
electrical adjustment.....	1.24		
manual adjustment.....	1.24		
Window demisting - climate control.....	5.06		
Windows			
anti-trap protection.....	5.03		
opening and closing.....	5.02		
safety.....	5.02		
Windscreen washer fluid.....	6.08, 7.12		
Windscreen wipers.....	1.44		
rain sensor.....	1.44		
single wipe.....	1.44		
wash/wipe.....	1.45		
wiper blade replacement.....	6.34		
wiper modes.....	4.12		
wiper sensitivity.....	4.11		
Winter driving.....	2.46		
Winter tyres.....	7.07		
Wiper blade replacement.....	6.34		



