



Ultimate Series

Owner's Handbook

Assistance

Retailer Network

McLaren Atlanta	24 hours: +1 770 394 4234
McLaren Bergen County	24 hours: +1 201 445 9494
McLaren Beverly Hills	24 hours: +1 818 585 9620
McLaren Boston	24 hours: +1 617 774 7867
McLaren Chicago	24 hours: +1 773 547 3877
McLaren Dallas	24 hours: +1 214 497 1082
McLaren Denver	24 hours: +1 720 999 6644
McLaren Greenwich	24 hours: +1 203 537 9128
McLaren Houston	24 hours: +1 832 247 6375
McLaren Long Island	24 hours: +1 516 478 4326
McLaren Mexico City	24 hours: +52 144 4204 5711
McLaren Montreal	24 hours: +1 855 462 5273
The Collection McLaren	24 hours: +1 305 442 9696
McLaren Newport Beach	24 hours: +1 714 252 3284

McLaren Palm Beach	24 hours: +1 561 659 0758
McLaren Philadelphia	24 hours: +1 610 886 3000
McLaren Rancho Mirage	24 hours: +1 442 274 4098
McLaren San Francisco	24 hours: +1 650 815 4472
McLaren Santiago	24 hours: +56 994 496 824
McLaren Scottsdale	24 hours: +1 480 544 5592
McLaren Sterling	24 hours: +1 571 264 2340
McLaren Tampa Bay	24 hours: +1 727 537 0626
McLaren Toronto	24 hours: +1 416 877 2620
McLaren Vancouver	24 hours: +1 888 683 3757
McLaren Client Services	UK business hours: +44 148 326 1500 client.services@mclaren.com

If you have been unable to obtain assistance using the number(s) listed for towing/roadside assistance, or the dealer is unable to provide towing/roadside assistance, please call 855-4McLaren (855- 462-5273).



Contents

- 1.01 Before You Drive**
- 2.01 Driving Controls**
- 3.01 Instruments**
- 4.01 Central Display**
- 5.01 Comfort and Convenience**
- 6.01 Maintaining Your McLaren**
- 7.01 Vehicle Data and Glossary**
- 8.01 Conformity Information**
- 9.01 Ayrton Senna Institute**

Introduction

Introduction

Please read this information to familiarize yourself with your McLaren and its features before you drive. This provides the necessary information for you to get the optimum benefit and enjoyment from your McLaren.

This publication describes all options and features available for the McLaren Senna. Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, optional equipment or the fitment of McLaren approved accessories.



NOTE: The images shown in this publication may not exactly reflect your unique vehicle.

The documents supplied with your McLaren are an integral part of the vehicle. Ensure that you pass them onto the new owner if you sell the vehicle.

The information is divided into specific sections, to assist in finding the particular information you require:

Before You Drive

Details the settings you need to make in the cockpit to ensure you are fully prepared and have safe and easy access to all controls before driving.

Driving Controls

This section contains detailed information regarding the equipment and driving controls fitted to your McLaren and how to use those controls to best effect during a journey.

Instruments

This section contains information on the Folding Driver Display, including information on how to operate features of the McLaren Infotainment System (MIS).

Central Display

This section contains information on the McLaren Infotainment System (MIS), including information on how to view and change vehicle settings.

Comfort and Convenience

Contains information on those systems and features which make the cockpit a pleasant environment in which to spend time.

Maintaining your McLaren

Information on maintaining your McLaren is located here. Also included is advice on using your McLaren in winter weather and if you choose to drive your vehicle abroad, what to do if something should go wrong and how to manage any possible problems which arise as a result. Information on fuses, lights and what to do if you experience a puncture.

Vehicle Data and Glossary

Refer to this section when you need information regarding the fluid specifications and quantities that are required for the various systems on your McLaren, or when you need to know a specific piece of data relating to your McLaren or its performance.

The technical glossary contains a brief explanation of some of the more complex systems fitted to your McLaren. Your McLaren Retailer will be able to assist should you need more information.

Index

The table of contents and the index will help you find information quickly, when you need it.

Introduction

Information about this document

McLaren is constantly updating its vehicles to meet and exceed the latest technologies. McLaren therefore reserves the right to introduce changes in design, equipment and technical features at any time.

© McLaren Automotive Limited.

This publication must not be reproduced, translated or reprinted, in whole or in part, without written permission from McLaren Automotive Limited.

The equipment fitted to your McLaren may vary from the images shown depending on vehicle and market specification.

All information, illustrations and specifications in our applications are based on data available and are correct at the time of issue. The availability of options may vary from market to market due to local restrictions and regulations. Some illustrations in these applications may not necessarily reflect the specifications or options available in your local market and may show optional equipment.


The specifications contained in these applications are for information purposes only and McLaren Automotive reserves the right to change product specifications at any time without notice or incurring obligation. For full specification details and information on standard and optional equipment, please consult your McLaren Retailer.

This vehicle may be covered by patents. See cars.mclaren.com/patents.

Printed in United Kingdom, 15QA029CP.


Electronic user manual

If your vehicle is fitted with an electronic user manual, the Owner's Handbook is available on the Central Infotainment Touchscreen.

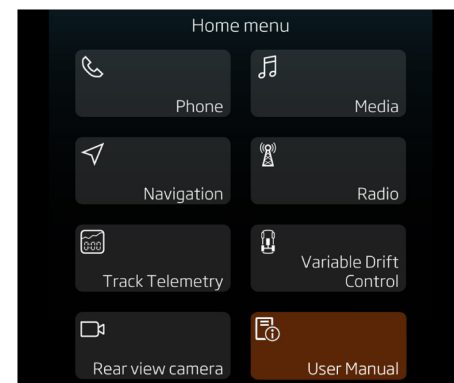



To access the manual, select User manual from the McLaren Infotainment System (MIS) Home screen.

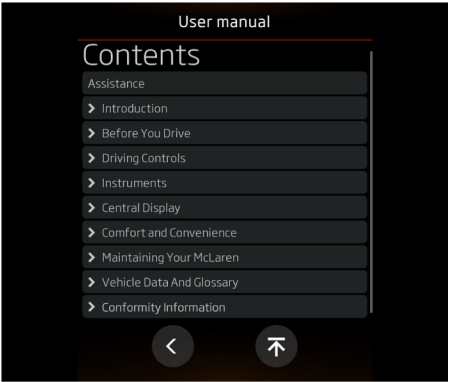Introduction





Select the required language, then select a topic from the contents page.

 The home icon appears at the top and bottom of each page. Selecting the home button will return you to the main contents page.

 These icons can be used to navigate to the previous or next topic as required.




Select 'Related Topics' to quickly access the other information within the current section.

 This icon can be used like a web browser back button, to go back to the previous view.

 This icon can be used to return to the main contents page.


Symbols

You will find the following symbols in this Owner's Handbook. These symbols are intended to give you an instant visual message on what type of information is being displayed.

Warnings	
	A warning draws your attention to activities that could cause injury or death.
Notes	
	Notes draw your attention to activities that contain possible risks to your McLaren, provide advice that you may find useful, or give additional information regarding a particular subject.
Environmental notes	
	Environmental notes give you tips on minimizing the impact that you and your vehicle have on the environment.

Introduction


Operating safety

 **WARNING:** The electronic systems fitted to your McLaren interact with each other. Tampering with these systems could cause malfunctions in other interconnected systems. Such faults could seriously endanger the operational safety of your McLaren and your own safety. Additional work or modifications made to the vehicle, which have been carried out incorrectly can also affect its operating safety.

Vehicle use


Observe the following when using your McLaren:

- The safety notes throughout this information
- Road traffic laws and regulations

 **WARNING:** There are various warning labels attached to your McLaren. These are intended to make you and others aware of various risks. Do not remove any warning labels from the vehicle.

If you remove these warning labels, you or others may not then be aware of dangers, which may result in an injury.

Ground clearance

 **WARNING:** Damage to the underside of the vehicle may occur when approaching steep inclines or declines.

Drive with care when:


- approaching kerbs.
- approaching steep inclines.
- departing steep declines.
- driving on rough roads.
- driving in areas where traffic calming measures have been deployed.
- driving in any other environment where sudden change of road surface height or elevation are encountered such as car parks.


See Vehicle dimensions, page 7.06.

Track driving

To achieve optimum performance and reliability, it is important to ensure the following preconditions are met before attempting to drive your vehicle on a track:

- Engine oil is at normal operating temperature
- Engine oil level shows 3, 4, 5 or 6 green segments, see Checking the engine oil, page 6.02
- Engine coolant is at normal operating temperature
- Tires should not exceed the safe operating temperatures

 **NOTE:** Before you use your vehicle on a track, consult your McLaren Retailer. McLaren recommend that your vehicle is inspected before and after track use.


 **NOTE:** Always drive within your limits and the limits of the vehicle.


Introduction

Cooling down

McLaren recommend that you take time to cool the vehicle down during track driving, due to the high temperatures that may be generated by the brakes and transmission which could affect performance. Time should be taken to drive the vehicle at a slower speed without using hard braking or carrying out excessive gear changes, this uses the airflow to cool the vehicle.

McLaren recommend that time is allowed for your vehicle to return to normal operating temperatures before leaving the track.

 **NOTE:** When stopping the vehicle directly after performance driving, McLaren recommend that the ignition is not immediately switched off or parking brake applied. McLaren recommend that the engine is left to idle prior to the ignition being switched off.

 **NOTE:** Please refer to your Service and Warranty Guide for track and competition use implications.

Stored data

There are a number of components in your vehicle which collect data and store it temporarily or permanently. This technical data provides information relating to areas such as the condition of the vehicle, any events which have taken place and any malfunctions your vehicle may be experiencing or has experienced in the past.

These include, for example:

- operating conditions of system components, e.g. fluid levels.
- the vehicle's status messages and those of its individual components, e.g. 'Windscreen washer fluid low'.
- malfunctions and defects in important system components, e.g. 'Light switch fault'.
- vehicle reactions and operating conditions in special driving situations, e.g. air bag deployment.
- ambient conditions, e.g. outside temperature.

This data is of an exclusively technical nature and can be used to:

- assist in recognizing and rectifying faults and defects.
- analyze vehicle functions, e.g. after an accident.
- optimize vehicle functions.

The data cannot be used to trace the vehicle's movements.

When your vehicle is serviced, technical information can be read from the vehicle including:

- repair service history.
- warranty events.
- quality assurance.

This information can be read by employees of the service network (including manufacturers) using special diagnostic testers. More detailed information can be obtained from it, if required.

After a fault has been rectified, the information is deleted from the fault memory or is continually overwritten.

When operating the vehicle, situations may occur where technical data, in connection with other information, could be traced to a person.

Examples include:

Introduction

- accident reports.
- damage to the vehicle.
- witness statements.

McLaren will not access your behavior related information about a crash event or share it with others except:

- with the consent of you or, if the vehicle is leased, of the lessee.
- in response to an official request of police or similar government office.
- as part of the manufacturer's defense in case of legal proceedings.
- as required by law.

In addition, McLaren may use the collected or received diagnostic data:

- for McLaren research needs.
- to make it available for research needs where appropriate confidentiality is maintained and need is shown.
- to share summary data which is not tied to a specific vehicle with other organizations for research purposes.

Before You Drive

Opening and Closing.....	1.02
General.....	1.02
Opening a door.....	1.04
Locking a door.....	1.05
Mislock.....	1.05
Individual settings.....	1.06
Locking and unlocking from inside.....	1.06
Opening a door from inside.....	1.07
Closing a door.....	1.07
Automatic locking.....	1.08
Front service cover.....	1.08
Rear service cover.....	1.09
Anti-Theft System.....	1.10
Alarm system.....	1.10
Immobilizer.....	1.10
Tow-away protection.....	1.11
Seats.....	1.12
Safety.....	1.12
Race seats.....	1.13
Steering Wheel and Steering Column.....	1.14
Manual steering wheel adjustment.....	1.14
Horn.....	1.14
Occupant Safety.....	1.15
Seat belts.....	1.15
Supplementary restraint system (SRS).....	1.17
Child passengers.....	1.22

Mirrors.....	1.25
Safety.....	1.25
Interior mirror.....	1.25
Exterior mirrors.....	1.25
Lighting.....	1.27
Exterior lighting.....	1.27
Light switch.....	1.27
Hi beam headlamps.....	1.28
Daytime running lamps.....	1.29
Rear fog lamp.....	1.29
Turn signals.....	1.30
Hazard warning lamps.....	1.31
Parking lights.....	1.31
Washers and Wipers.....	1.33
Windscreen wipers.....	1.33
Vehicle Lift.....	1.35
Vehicle lift.....	1.35

Before You Drive

Opening and Closing

General

The vehicle can be unlocked or locked either by using the keyless entry feature, or by pressing the appropriate button on the key fob.


The keyless entry feature requires the key fob to be within 3 ft 11 in (1.2 m) of the sensors.

Provided that the engine is not running, the vehicle can be locked irrespective of the electrical status, see Vehicle electrical status, page 2.02.


Keyless entry

Keyless entry allows the user to unlock and disarm the vehicle by simply opening the door when the key fob is within 3 ft 11 in (1.2 m) of the sensors. The key fob needs only to be on the user's person or in a non-metallic container such as a bag. It does not need to be exposed or handled.

Five sensors detect where the key fob is around the vehicle.

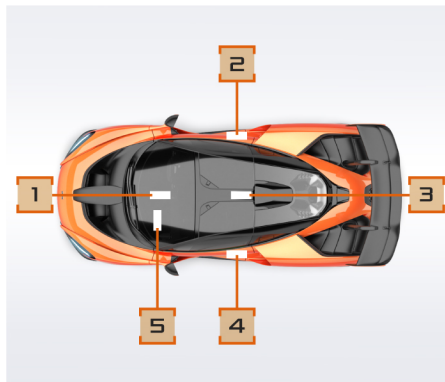

Right-hand drive models

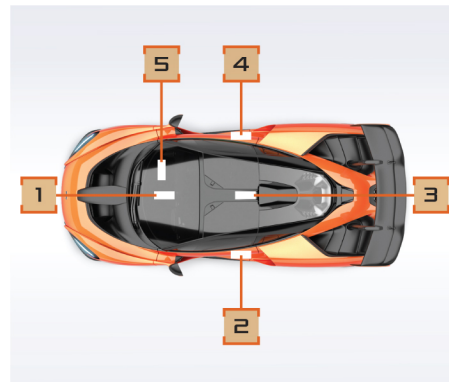

Left-hand drive models

1. Front in vehicle sensor
2. Driver's door sensor
3. Rear in vehicle sensor
4. Passenger's door sensor
5. Passenger's footwell sensor

Key fob entry

Your McLaren includes two remote control key fobs. The key fob allows you to remotely lock and unlock the vehicle.

Before You Drive

Opening and Closing

i NOTE: To prevent theft, only use the key fob in the immediate vicinity of the vehicle.

The key fob locks and unlocks the following:

- The doors
- The service covers
- The fuel filler flap
- The coolant filler flap



To unlock the vehicle, using the key fob, press the unlock button. The front, rear and side turn signals (market specific) flash twice and the anti-theft alarm system will be deactivated.

The unlock button operation changes depending whether the Driver's door or Both doors is selected in the vehicle settings, see Door unlock, page 4.16.

! **WARNING: The key fob allows the engine to be started and is also used to activate other features on the vehicle.**
Take the key fob with you, every time you leave the vehicle.

i NOTE: Do not expose the key fob to high levels of electromagnetic radiation. Doing so may cause it to function incorrectly. For example close proximity to laptops, tablets, personal media players, or cell phones.

Unlock Button	Outcome
Single Press	If Both doors is selected, a single press of the button unlocks both doors.
	If Driver's door is selected, a single press of the button unlocks the driver's door. A second press (after a pause) unlocks the passenger's door.
Double Press	If Both doors is selected, a double press of the button unlocks both doors and unlatches the driver's door.
	If Driver's door is selected, a double press of the button will unlock and unlatch the driver's door only.

Stowing the key fob

For security, it is recommended that the key fob stays on your person when you are in the vehicle. If, however, you wish to stow the key fob within the vehicle, ensure that it is not left in plain view.

Before You Drive

Opening and Closing

i NOTE: If the message 'Key not found within vehicle' appears on the Folding Driver Display, reposition the key fob until it is detected.

i NOTE: Do not stow the key fob in the center console, or on the shelf immediately behind the seats as the system may not detect its presence and the engine will not start.

Discharged battery

If you experience a fully discharged battery, the vehicle can still be opened using the mechanical key, see Unlocking - discharged battery, page 6.22.

Opening a door



1. Press the button (1) firmly to unlock and unlatch the door.

i NOTE: The keyless entry feature requires the key fob to be within 3 ft 11 in (1.2 m) of the sensors.

! **WARNING:** Always stand to the rear of the door before opening it, as the opening action may cause injury. The speed that the door opens will be affected by ambient temperature.

i NOTE: Because the door opens outwards and then upwards, ensure sufficient side and overhead clearance before opening a door, see Vehicle dimensions, page 7.06.

2. If keyless entry is used, the front, rear and side turn signals (market specific) will flash twice, and the anti-theft alarm system will be deactivated.
3. The door latch will then release, the mirrors will unfold if folded and the door will be allowed to be partially raised before it automatically swings outwards and upwards.


i NOTE: If the vehicle is unlocked using the key fob but the doors or service covers are not opened, the vehicle will relock after 30 seconds.

Before You Drive Opening and Closing

Locking a door



1. Close the door. See Closing a door, page 1.07.
2. To lock the vehicle using the key fob, press the lock button. The front, rear and side turn signals (market specific) flash in a rapid, circular sequence around the vehicle. The anti-theft alarm system is activated.

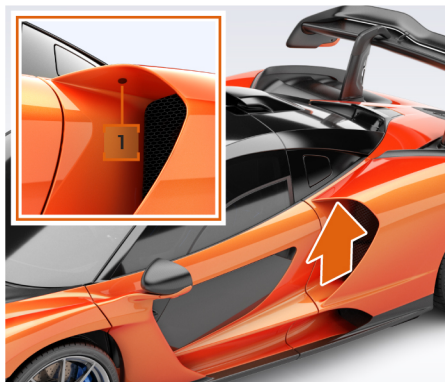

3. If using the keyless entry feature, press the touch sensitive switch (1) located within the side duct.

i **NOTE:** The keyless entry feature requires the key fob to be within 3 ft 11 in (1.2 m) of the sensors.

i **NOTE:** The lock switch will recognize a single press.

4. The turn signals flash to indicate that the anti-theft alarm system is activated.

Mislock



If either the doors or the service covers are left open, or the key fob is still inside the vehicle, the horn will sound indicating mislock when an attempt to lock the vehicle is made.

Check that all doors and the service covers are closed, then relock the vehicle.

Before You Drive Opening and Closing

i NOTE: The vehicle can be locked/alarmed with the service covers open. A long tone sounds to alert you to this condition, and differs to the short tone sounded for door open/key fob in vehicle mislock. The service covers will become alarmed as soon as they are closed. This allows you to connect the McLaren supplied battery charger to the front service area charging point whilst leaving the rest of the vehicle locked.

Individual settings

If you frequently travel without passengers, you can change the locking system so that only the driver's door is unlocked, see Automatic door locking, page 4.16.

If only the driver's door has been configured to unlock, the passenger's door can only be unlocked by either pulling the passenger's door internal handle, pressing the unlock button on the key fob again or by unlocking the vehicle from the central locking button located on the overhead console.

Locking and unlocking from inside



1. Press the central locking button to lock the vehicle, the light in the button will illuminate to indicate that the vehicle is locked. A door can be opened from inside the vehicle.
2. Press the central locking button again to unlock the vehicle and the light in the button will be extinguished.

Before You Drive Opening and Closing

Opening a door from inside

A door can be opened from inside the vehicle at any time, even if it has been locked. Open the doors only if the vehicle is stationary and road and traffic conditions permit.

- i** NOTE: Because the door opens outwards and then upwards, ensure sufficient side and overhead clearance before opening a door.



Pull the door handle downward, in the direction of the arrow, push the door outwards until the opening mechanism takes over. The door will then swing outwards and upwards automatically.

- i** NOTE: Unlocking the vehicle using the door handle while the key fob is not within the vehicle will activate the anti-theft system and may cause the alarm to sound.

Closing a door

Push/pull the door downwards and ensure that it latches securely.

- !** **WARNING:** Keep hands and other objects clear of the door edge when closing. This is particularly important for vehicles fitted with soft close latches as the door will automatically continue to the fully closed position when the first catch has engaged. There is no anti-trap feature preventing the door closing if an item or body part is trapped between the door and the door aperture, serious injury and vehicle damage may occur.

- i** NOTE: Do not force close the door, the door aperture or door seals could be damaged.

Before You Drive

Opening and Closing

Automatic locking

The doors and service covers lock automatically after the vehicle has driven away.

i NOTE: The doors unlock automatically in an accident if the force of the impact exceeds a predetermined level.

The automatic locking function is selectable in the vehicle settings section of the Central Infotainment Touchscreen, see Automatic door locking, page 4.16.

If automatic locking is ON, the interior central locking button will illuminate once the vehicle locks on drive away.

Front service cover

Opening



1. Press down on the service cover as shown, the latch will release.
2. Open the service cover, the hinge will support it in the fully open position.

Closing




1. Close the service cover and apply pressure as shown, a positive click will be heard when the latch engages.
2. Ensure the service cover is secure once closed.


Before You Drive


Opening and Closing

Rear service cover


Opening

 **WARNING:** The exhaust tail pipes can be very hot and there is a risk of severe burns. Only open the service cover from the side of the vehicle.

 **WARNING:** Engine components become very hot and there is a risk of severe burns.

 **WARNING:** If the engine is stopped due to the Eco Start-Stop system, the engine may restart without warning.

1. Remove the rear service cover opening tool from the tool kit. See Overview, page 6.08.

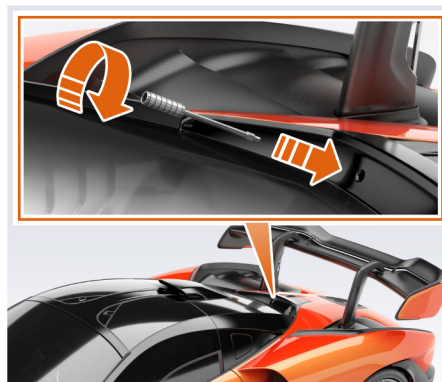


2. Insert the rear service cover release tool into the fixing hole located forward of the service cover.

Rotate the fixing 90° clockwise to release and open the service cover, the hinge will support it in the fully open position.

See Engine oil, page 6.02.

Closing

 **WARNING:** The exhaust tail pipes can be very hot and there is a risk of severe burns. Only install the service cover from the side of the vehicle.



1. Close the service cover and apply pressure as shown, a positive click will be heard when the latch engages.
2. Ensure the service cover is secure once closed.

Before You Drive Anti-Theft System

Alarm system

A visual and audible alarm is triggered if the alarm system is armed and any of the following are opened:

- A door
- A service cover

i **NOTE:** The alarm remains triggered even if you close the open aperture. To silence the alarm, unlock the vehicle.

The alarm system also incorporates the following features:

- Tow-away protection

Arming the alarm system

Lock the vehicle (using the keyless system or the key fob). The anti-theft alarm system will be armed after approximately 5 seconds.



The light in the central locking button will illuminate for approximately 60 seconds after locking the vehicle, the light will continue to flash beyond this time.

Disarming the alarm system

Unlock the vehicle (using the keyless system or the key fob), the alarm will disarm and the light in the central locking button will stop flashing.

Immobilizer

The immobilizer prevents your McLaren from being started by an unauthorized person.

The vehicle is automatically immobilized when it senses that there is no key fob present in the vehicle.

Remobilization occurs when a key fob is sensed inside the vehicle.

i **NOTE:** Immobilization will only occur if the engine is not running.

Before You Drive Anti-Theft System

Tow-away protection

Tow-away protection is designed to prevent any attempt to steal the vehicle by suspended tow or lifting onto a trailer.

The alarm is triggered if the vehicle is raised or tilted in any way.

Tow-away protection is armed approximately 30 seconds after the vehicle has been locked and is disarmed when the vehicle is unlocked.

Disabling tow-away protection



1. To disable tow-away protection, switch off the ignition, and press the button on the dashboard. The light in the switch will illuminate to indicate that tow-away protection has been disabled.

- i NOTE:** You cannot disable tow-away protection if the ignition is switched on.
2. Exit and lock the vehicle (using the keyless system or the key fob). Tow-away protection will remain disabled until the vehicle is unlocked.

Before You Drive Seats

Safety




WARNING: Adjust the driver's seat when the vehicle is stationary. You may not be able to observe road and traffic conditions and you could lose control of the vehicle as a result of the seat moving. You could therefore cause an accident.



WARNING: The seats can be moved even without a key fob in the vehicle. Do not leave children unattended in the vehicle, they could be injured if a seat is moved accidentally.



WARNING: Ensure that no one can become trapped as the seat moves. To reduce the risk of injuries in the event of an accident, observe the following:

- All vehicle occupants must select a seat position that allows the seat belt to be worn correctly, but is as far away from the front air bags as possible. The position of the driver's seat must allow the driver to drive the vehicle safely. The distance from the driver's seat to the pedals must be such that the driver can fully depress the pedals. The distance between the driver's chest and the center of the air bag cover must be more than 25 cm (10 in). The driver's arms should be slightly bent when holding the steering wheel.
 - Vehicle occupants must always wear their seat belt correctly.
 - Position the passenger's seat as far back as is comfortable.
-  **WARNING:** McLaren does not recommend the use of child seats in this vehicle, but if you choose to do so, please follow the guidelines below:
- Children under 4 ft 11 in (1.5 m) tall or younger than 12 years of age must be secured in a suitable child restraint. Please refer to current national and local laws for specific requirements.
 - If you are using a child restraint on the passenger's seat, move the seat as far back as possible.

Before You Drive Seats

Race seats

Seat forward and rearward adjustment



i NOTE: It is only possible to adjust the forward and rearward position of the seat.

To adjust the seat, lift the lever and slide the seat to the desired position, ensuring you can comfortably reach all pedals and are able to move them through their full travel.

! **WARNING:** Ensure the seat is locked in position before driving.

i NOTE: Ensure that there are no items of luggage in the footwell or adjacent to the seats as this may lead to the seats being damaged or not getting full adjustment.

Seat height and tilt adjustment

For seat height and tilt adjustment, contact your McLaren Retailer.

! **WARNING:** Seat height adjustment should only be carried out by your McLaren Retailer.

Before You Drive

Steering Wheel and Steering Column

Manual steering wheel adjustment

⚠ WARNING: Only adjust the steering wheel position when the vehicle is stationary. You may not be able to observe road and traffic conditions. This could lead to you losing control of the vehicle which may result in an accident.

The steering wheel can be adjusted for height and reach.



Push the lever (highlighted) downwards and position the steering wheel so that:

- your arms are slightly bent when you hold the wheel.
- you can move your legs freely.
- you can see all the information on the Folding Driver Display clearly.

Pull the lever up to secure the steering wheel. Ensure the lever is locked before driving.

Horn

Press the center of the steering wheel to operate the horn.


i NOTE: The horn can be operated when the ignition is switched off.

Before You Drive

Occupant Safety

Seat belts

Seat belts and child restraint systems are the most effective means of restraining vehicle occupants from impact forces, which minimizes the danger of injury from interior impacts and the effects of whiplash.

 **WARNING:** A seat belt which is not worn, worn incorrectly, or has not been engaged fully in the seat belt buckle, cannot perform its intended function. To avoid injuries, ensure that all vehicle occupants wear their seat belt correctly at all times. Ensure that the belt:

- is routed as low as possible across your pelvic area, i.e. across your hip joints and not across your abdomen.
- fits closely.
- is not twisted.
- is routed across the middle of your shoulder.
- lies flat across the mid point of the collar bone between the neck and shoulder.
- fits closely across your pelvis by pulling the shoulder belt upwards.

Do not secure any objects with a seat belt if the seat belt is being used by a vehicle occupant.


Avoid wearing bulky clothing.


Do not route the belt across sharp edged or fragile objects especially if these are on or in your clothing. The seat belt could be damaged and you could be injured.


Only one person should use each seat belt at any one time.

Never allow children to travel on the lap of another occupant.

Children under 4 ft 11 in (1.5 m) tall or younger than 12 years of age must be secured in a suitable child restraint. Follow the manufacturer's instructions when installing child restraint systems. Please refer to current national and local laws for specific requirements.

 **WARNING:** Pregnant women should wear a seat belt to ensure maximum safety of mother and unborn child. Position the lap belt across the hips, below the abdomen and position the shoulder belt between the breasts and to the side of the abdomen. Ensure the belt is not slack or twisted.

 **WARNING:** The seat belt only provides its intended degree of protection if the seat backrest is positioned close to vertical, and the occupant is sitting upright.

 **WARNING:** The seat belt cannot perform its function correctly if the seat belt or buckle becomes excessively dirty or damaged. Ensure the belt latch engages the buckle fully.

Check the seat belts regularly to ensure that they are not damaged, or routed over sharp edges and are not trapped. The belt could tear in an accident, causing injury to occupants. Have seat belts checked if the belts have been damaged or subjected to a heavy load. Work on the seat belts should only be carried out by your McLaren Retailer.

Before You Drive Occupant Safety

Wearing a seat belt





1. Ensure that you are seated comfortably and the controls are within easy reach.
2. Grasp the seat belt latch and pull across the body, ensuring that the belt lies flat across the mid point of the collar bone between the neck and shoulder, then across the chest and pelvis.
3. With the belt correctly positioned insert the latch into the buckle and press until a click is heard to confirm engagement.

Check engagement by attempting to pull the latch from the buckle.

Seat belt tensioners


The seat belts incorporate belt tensioners. Belt tensioners apply tension to the seat belts in an accident, pulling them tight against the occupant.

 **WARNING: Do not insert the belt latch into the passenger's seat belt buckle if the passenger's seat is unoccupied. The belt tensioners could be triggered in an accident.**

 **WARNING: Belt tensioners do not correct an incorrect seating position or incorrectly worn seat belts. Belt tensioners do not pull occupants back towards the backrests.**

The belt tensioner will be triggered for each seat belt, provided the belt latch is engaged in the seat belt buckle, if a head-on or rear-end collision occurs and the vehicle decelerates or accelerates rapidly.

If the belt tensioners are triggered, a bang will be heard, a small amount of dust may be released and the supplementary restraint system warning light will illuminate.

 **WARNING: Once triggered (or if you are unsure if they have triggered) you MUST not drive the vehicle. Contact your nearest McLaren Retailer immediately.**

Belt force limiters

The seat belts incorporate belt force limiters. Belt force limiters are tuned to the front air bags and gradually release the tension being applied to the belts during an impact, reducing the force exerted on occupants.

Seat belt warning light



The seat belt warning light on the Folding Driver Display and a warning tone reminds vehicle occupants to fasten their seat belts. The seat belt warning light extinguishes and the warning tone ceases when the driver and passenger have fastened their seat belt.

Before You Drive

Occupant Safety

Supplementary restraint system (SRS)

Air bag system

Your McLaren is equipped with the following air bags:

- Driver's front air bag in the steering wheel
- Passenger's front air bag in the upper area of the dashboard
- Knee air bags in the lower area of the dashboard
- Side head air bags in the doors



WARNING: Take note of all warning labels attached to the sun visors.



WARNING: Correct operation of the air bags can only occur if the steering wheel, the passenger's air bag cover, the knee air bag cover and the door trim are not covered.

WARNING: Air bags are not a substitute for correctly worn seat belts, they enhance the level of occupant protection offered by seat belts.

WARNING: To reduce the risk of injuries in the event of an accident, observe the following points:

- Ensure that the driver's chest is at least 25 cm (10 in) from the air bag cover.
- Do not lean forward over the dashboard while the vehicle is in motion.
- Do not rest your feet on the dashboard.
- Only hold the steering wheel by the outside of the rim. You could be injured if the air bag deploys and you are holding the inside of the steering wheel.
- Occupants, particularly children, must not lean on the doors from inside the vehicle.
- Ensure that there are no other objects between the vehicle occupants and the deployment area of the air bags.
- Because of the high speed at which air bags deploy, there is a risk of injuries caused by an inflating air bag.

Before You Drive Occupant Safety

Air bag replacement



WARNING: McLaren recommend that air bags are replaced every 15 years to prevent air bags from not firing due to component operating life.

Air bag system modification

If it is necessary to modify the air bag system to accommodate a person with disabilities, please contact McLaren Automotive Inc at:


McLaren Automotive Inc

750 3rd Avenue, Suite 2400

New York

NY 10017

Front air bags

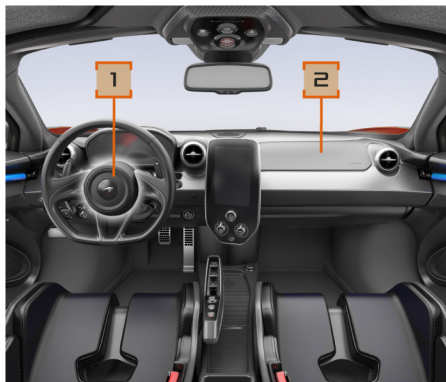

The driver's front air bag (1) deploys in front of the steering wheel and the passenger's front air bag (2) deploys in front of and above the dashboard.

The front air bags are deployed if the system determines they can offer additional protection for occupants against head and chest injuries.

NOTE: The passenger's front air bag is only deployed if the PASSENGER AIR BAG OFF warning light on the overhead console is NOT illuminated, see Occupant classification system - passenger's seat, page 1.19.

Knee air bags

WARNING: To reduce the risk of injury to occupants if knee air bag(s) are triggered, ensure that:

- there are no other objects between the vehicle occupants and the deployment area of the air bag(s)
- no heavy or sharp objects are left in the pockets in clothing

Before You Drive Occupant Safety




The knee air bags are located in the lower area of the dash board, and are deployed if the system determines they can offer additional protection for the knees and lower body of the occupant on the side of the vehicle on which the impact occurs.

Side head air bags

⚠ WARNING: To reduce the risk of injury to occupants if a side head air bag is deployed, ensure that:

- there are no other objects between the vehicle occupants and the deployment area of the air bags.

- no accessories are attached to the doors.
- no heavy or sharp objects are left in the pockets of clothing.
- occupants, particularly children, must not lean on the doors from inside the vehicle.

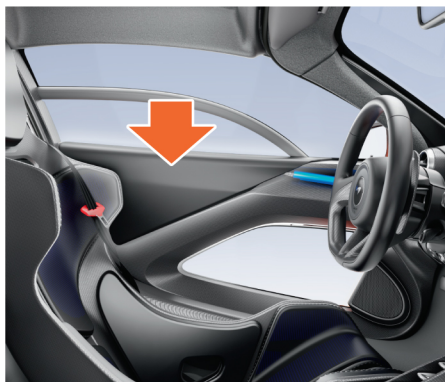

The side head air bags are located in the upper area of each door panel, and are deployed if the system determines they can offer additional protection for the head of the occupant on the side of the vehicle on which the impact occurs.

i NOTE: The passenger's side head air bag is only deployed if the passenger's seat is occupied.

Occupant classification system - passenger's seat

The system can determine if the passenger's seat is occupied using a capacitance mat fitted in the seat base, and by checking the seat belt buckle engagement on the passenger's seat belt. The system will deactivate the passenger's front air bag for children in child seats and unoccupied passenger's seat ensuring air bag deployment for adults.




Before You Drive

Occupant Safety


The status of the air bags is indicated by the PASSENGER AIR BAG OFF warning light on the overhead console.


The PASSENGER AIR BAG OFF warning light illuminates when the ignition is switched on and extinguishes after 5 seconds.


The warning light will remain illuminated if the passenger's seat is unoccupied or if a child seat is fitted.


 **NOTE:** The PASSENGER AIR BAG OFF warning light is always illuminated unless the passenger's seat is occupied by an adult.


If the PASSENGER AIR BAG OFF warning light is illuminated, the passenger's front air bag is not active. The side head air bag and the belt tensioner on the passenger's side remain active even if the PASSENGER AIR BAG OFF warning light is illuminated.

 **WARNING:** If the PASSENGER AIR BAG OFF warning light is not illuminated when the child seat is fitted, the passenger's air bag is not deactivated. The child could be seriously injured if the passenger's air bag inflates.


 **WARNING:** To ensure that the occupant classification system functions correctly, McLaren recommend that objects are not placed under a seat. McLaren also recommend that additional materials are not applied such as a blanket, cushion, or aftermarket equipment such as a seat cover, heater, or massager. These items can seriously affect how well the occupant classification system operates. McLaren recommend that aftermarket equipment such as covers, heaters, and massagers are NOT used.

 **WARNING:** Any electronic devices that are either active or connected to the 12 V accessory socket should not be placed on the passenger's seat. They can affect how the occupant classification system operates.

 **WARNING:** The occupant classification system may become affected if any form of liquid (inclusive of rain) is spilled onto the passenger's seat. If the PASSENGER AIR BAG OFF warning light is not illuminated when the seat is unoccupied, do not install a child restraint or allow anyone to occupy the seat. Please contact your nearest McLaren Retailer at your earliest convenience.

 **WARNING:** Do not place sharp objects onto the passenger's seat. These may damage the occupant classification system if they puncture the seat cushion.

Before You Drive Occupant Safety

 **WARNING:** To ensure that the occupant classification system functions correctly, never place objects (e.g. a cushion) under the child restraint system. The entire base of the child restraint system must be in contact with the seat at all times. If a child restraint system is not fitted correctly it may not provide the intended degree of protection in the event of an accident and may cause injuries.


Air bag deployment


In the event of a collision, the air bags are deployed by the supplementary restraints system to protect the vehicle occupants. The system can control the number of air bags deployed and partially or fully inflate the air bags depending on the severity of the collision to provide the best possible protection to the vehicle occupants.

The system uses sensors to rapidly evaluate the collision severity and the number of vehicle occupants. Once all these factors are known, the system will then deploy the necessary air bags and regulate the inflation pressure in the impact zone to ensure the occupant's safety.

After an accident, the air bags begin to depressurize almost immediately after the inflation process has taken place. The gas used to inflate the air bags escapes through vents in the air bag and this helps reduce the occurrence of major impact injuries to the occupants.

An air bag slows down and restricts the movement of the vehicle occupant reducing the load on the body, but is not a substitute for a correctly worn seat belt.


 **WARNING:** If the air bags are deployed, a bang will be heard and a small amount of fine powder may be released. The noise will not damage your hearing and the powder does not constitute a health hazard nor does it imply that a fire has broken out. This powder could cause short term breathing difficulties for persons suffering from asthma or other respiratory conditions. To prevent breathing difficulties, leave the vehicle as soon as possible or open a window.

 **WARNING:** After an air bag has been deployed, air bag parts are hot, do not touch them. Have the air bags replaced at your McLaren Retailer.


Out of position (OOP)

The air bag system in your McLaren has been tested for the correct small child out of position (OOP) operation. OOP can occur if a small child is incorrectly positioned in the passenger's seat in the event of a collision in which the air bags are deployed.

Supplementary restraint system (SRS) warning light

 The supplementary restraint system performs a self-test at regular intervals when the ignition is switched on and the engine is running.

The warning light on the Folding Driver Display illuminates when the ignition is switched on and extinguishes 5 seconds after the engine is started.

 **WARNING:** Contact your McLaren Retailer immediately should any of the following occur:

- The warning light does not illuminate when you switch on the ignition
- The light does not extinguish 5 seconds after the engine is running
- The light illuminates again, after the engine has started

Before You Drive

Occupant Safety

Safety features

If you are unfortunate enough to be involved in an accident, the following events will occur to assist you and any recovery personnel:

- The doors will unlock
- The hazard warning lights will switch on
- The interior lighting will switch on

In some instances, the fuel system will also be switched off.

Child passengers



WARNING: Do not leave children unsupervised in the vehicle even if they are secured in a child restraint. Children could injure themselves on parts of the vehicle, open a door and be seriously or even fatally harmed by prolonged exposure to heat or cold.

If children open a door, they could cause injury to others in doing so or get out of the vehicle and possibly injure themselves or they could be injured by a passing vehicle.

Do not expose the child restraint system to direct sunlight. The metal parts of the child restraint system could burn the child.

Do not carry heavy or hard objects inside the vehicle unless they are secured.

An unsecured or incorrectly positioned load increases the risk of injury to the child during sharp braking, a sudden change of direction or an accident.

Child restraint system

McLaren does not recommend the use of child seats in this vehicle, but if you choose to do so, please follow the guidelines below:

Secure any child under 4 ft 11 in (1.5 m) tall or younger than 12 years of age traveling in the vehicle in an appropriate category restraint according to their weight. Contact your McLaren Retailer for advice.

Please refer to current national and local laws for specific requirements.



Before You Drive Occupant Safety

⚠ WARNING: Never secure a rearward facing child restraint system on the passenger's seat if the passenger's front air bag is active. The status is indicated by the **PASSENGER AIR BAG OFF** indicator.



⚠ WARNING: If the **PASSENGER AIR BAG OFF** indicator does not illuminate, do not use a rearward facing child restraint system on the passenger seat. You may use a forward-facing child restraint system on the passenger's seat. The warning label on the passenger's side is there to remind you of this.

⚠ WARNING: If a forward facing child seat is fitted to the passenger's seat, make sure that the passenger's seat is fully rearwards and is positioned at the lowest height. A manual passenger's seat does not have height adjustment.

⚠ WARNING: If the child restraint system has not been fitted correctly, the child cannot be restrained in an accident or sudden braking and could be injured. When fitting a child restraint system, observe the manufacturer's instructions on the correct use of the child restraint.

KISI child restraint function

Your McLaren is fitted with a KISI system which is an automatic locking seat belt on the passenger's side designed to temporarily lock the seat belt to securely hold the child restraint in the passenger's seat.

1. Extend the passenger's seat belt fully. The KISI system only engages when the seat belt is fully extended.

i NOTE: If the vehicle is parked on a hill, the inertia lock may prevent the seat belt from extending. If this occurs, release the seat belt slightly and continue to extend the seat belt carefully to avoid the engagement of the inertia lock.

2. Pass the seat belt through the child restraint as described by the child restraint manufacturer and engage the belt latch in the buckle.
3. Adjust the belt so that the lower section is tight against the restraint and allow the upper section to retract. The KISI system will click as the belt retracts.
4. When the seat belt has retracted as far as possible, pull on the upper section to check that the seat belt has locked.

Before You Drive Occupant Safety

i NOTE: The KISI system will disengage when the seat belt has fully retracted and can then be worn as a normal seat belt. Once the KISI system has unlocked, it will be necessary to fully extend the seat belt to engage the KISI system the next time a child restraint is used.

Tether strap anchorages

! **WARNING:** Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.

! **WARNING:** When fitting a child restraint, always pass the upper tether strap through the central slot in the seat backrest. Always ensure that if an upper tether is provided, it is secured and tightened fully, as this provides maximum protection for a child.



An upper tether anchorage is provided on the passenger's seat.

i NOTE: When the child seat is installed ensure there are no twists in the upper tether strap.

Install the child seat and rotate the upper tether strap hook 90 degrees, pass the hook through the central slot in the seat backrest at the lowest point. Rotate the upper tether strap hook back 90 degrees, secure it to the anchorage and tighten fully.


Once the child restraint is installed, test the security of the installation, before seating a child. Attempt to twist the child seat from side to side and to pull it away from the vehicle seat, to check it is securely in place.

Before You Drive Mirrors

Safety

 **WARNING:** Before driving, adjust all mirrors to give the best possible view of road and traffic conditions.

Interior mirror

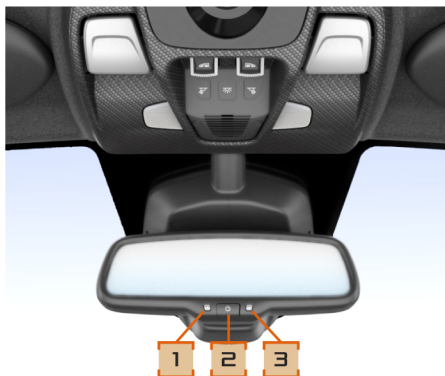


The automatic dimming function of the interior mirror is activated or deactivated by pressing the switch (2) on the bottom of the mirror. The indicator light (1) will illuminate when automatic dimming is active.

When activated, the interior mirror will automatically dim when bright light is detected by the light sensor (3).

If reverse gear is selected or if ambient light levels are high, the automatic dimming function will be deactivated.

Exterior mirrors

 **WARNING:** In some markets, the exterior mirrors have convex glass fitted. This type of mirror enlarges the field of vision, but reduces the size of the image. This means that objects are closer than they appear. To avoid misjudging the distance to vehicles traveling behind and perhaps causing an accident, check the actual distance of the vehicle, before changing direction.

The exterior mirrors control is located on the dashboard between the steering wheel and the center console.

Before You Drive Mirrors

Adjusting mirrors



1. Switch the ignition on.
2. Rotate the control to the left (1) to adjust the left-hand mirror or to the right (2) to adjust the right-hand mirror.
3. Move the control up, down, left and right to adjust the mirror to the desired position.

Exterior mirror fold

1. Switch the ignition on.
2. Rotate the control to position (3) to fold the mirrors.

3. To unfold the mirrors rotate the control away from position (3).

i NOTE: If the switch remains in position (3) the mirrors will be folded until the switch is moved.

Exterior mirror automatic fold

The exterior mirrors can be set so that they fold automatically when the vehicle is locked. Unfolding occurs as a door is opened, not when the vehicle is unlocked. See Automatic mirror folding, page 4.16.

Mirror dipping in reverse


The exterior mirrors can be set to dip when reverse is engaged. This provides a view of the ground to the rear of the vehicle. See Reverse mirror dip, page 4.15.

Heated mirrors


Exterior mirrors are heated when the heated mirror button is pressed, and the engine is running. They are also heated when the ambient temperature is below 41°F (5°C).

Before You Drive Lighting

Exterior lighting

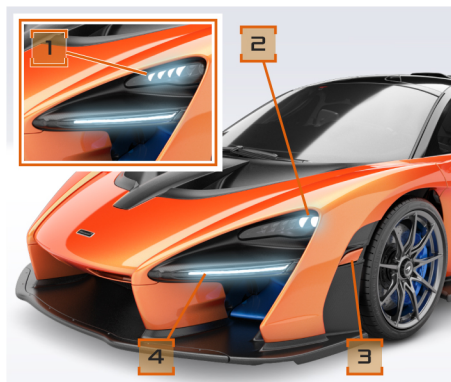

1. Headlamp hi beam
2. Headlamp lo beam
3. Side marker lamp
4. Turn signal/Daytime running lamp/Sidelamp

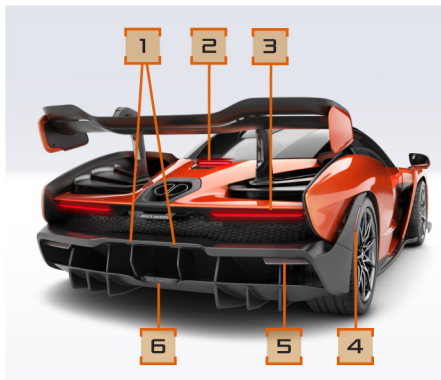

1. License plate lamp
2. Central high mounted stop lamp
3. Stop lamp/Tail lamp/Turn signal
4. Side marker lamp
5. Reflector
6. Reverse lamp and rear fog lamp

Light switch

⚠ WARNING: The lights do not switch on automatically in foggy conditions. Automatic light control is only an aid, you are responsible for the vehicle's lighting at all times.

The light switch is located between the steering wheel and the driver's door and has the following positions.



At position (0), the lights are off with the exception of daytime running lamps and tail lamps.

Before You Drive Lighting

Rotate the control to position (A) for automatic light control.

Rotate the control to position (1) for sidelamps or position (2) for headlamps. The sidelamp warning light illuminates on the Folding Driver Display.

Automatic light control

The sidelamps and lo beam headlamps are switched on automatically when ambient light falls below a predetermined level.

To switch on automatic light control, turn the light switch to position (A).

i **NOTE:** If the vehicle detects rain whilst the light switch is set to position (A) the lo beam headlamps will switch on automatically, regardless of current external light levels.

i **NOTE:** With the light switch in position (A) and the rear fog lamp switched on, the lo beam headlamps will also switch on irrespective of ambient light conditions. When the rear fog lamp is switched off, the Lo beam headlamps will also switch off dependent on ambient light conditions.

Sidelamps

The sidelamps and the daytime running lamps are a combined series of light-emitting diodes located below the headlamp. The sidelamps operate at a lower intensity than the daytime running lamps, see Daytime running lamps, page 1.29.

The sidelamps, tail lamps and license plate lamps illuminate when the light switch is turned to position (1).



The sidelamp notification light on the Folding Driver Display illuminates.

Lo beam headlamps

To switch on the headlamps, turn the light switch to (2).



The lo beam notification light on the Folding Driver Display illuminates.

i **NOTE:** On your McLaren, the same headlamp lo beam setting applies for driving on either the left-hand or right-hand side of the road.

Hi beam headlamps



To switch to hi beam, push the stalk away from you.



The hi beam headlamp notification light illuminates on the Folding Driver Display.

Pull the stalk towards you, to revert to lo beam.

Headlamp flash

Pull the stalk fully towards you.

The hi beam headlamps operate for as long as the stalk is held.

Before You Drive Lighting



The hi beam headlamp notification light illuminates on the Folding Driver Display.

Daytime running lamps

Your McLaren is fitted with daytime running lamps which, along with the tail lamps, illuminate automatically when the ignition is switched on even if all lights are switched off. The sidelamps and the daytime running lamps are a combined series of light-emitting diodes located below the headlamp. The daytime running lamps operate at a higher intensity than the sidelamps.

Rear fog lamp



WARNING: The lights do not switch on automatically in foggy conditions.



NOTE: The rear fog lamp only operates when the light switch is in position (A) or (2).



Press the rear fog lamp button in the center of the light switch.




The rear fog lamp notification light on the Folding Driver Display and the light in the switch both illuminate.

Before You Drive Lighting



NOTE: With the light switch in position (A) and the rear fog lamp switched on, the lo beam headlamps will also switch on irrespective of ambient light conditions. When the rear fog lamp is switched off, the lo beam headlamps will also switch off dependent on ambient light conditions.

Turn signals

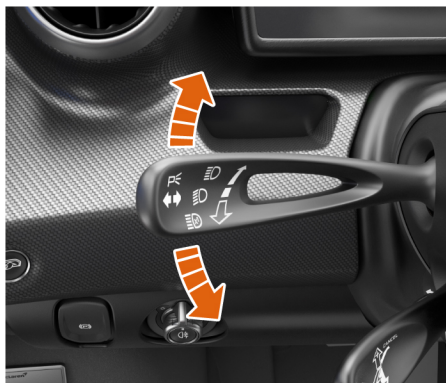

Push the turn signal/hi beam stalk downwards to switch on the left-hand turn signal.

Push the turn signal/hi beam stalk upwards to switch on the right-hand turn signal.



The corresponding notification light on the Folding Driver Display will flash.

The stalk returns to its rest position as the steering wheel returns to its central position.

Turn signals - lane change

Move the turn signal/hi beam stalk until resistance is felt when changing lanes on a motorway. The appropriate turn signal flashes three times.

For further information about the lighting see Light switch, page 1.27.

Before You Drive Lighting

Hazard warning lamps

The hazard warning lamps operate even if the ignition is switched off. As a safety feature, they switch on automatically when an air bag is deployed.

Operating the hazard warning lamps



1. Press the hazard warning lamps button.
2. All the turn signal lamps and both turn signal warning lights on the Folding Driver Display flash.
3. Press the hazard warning lamps button again to switch off.

i NOTE: If the hazard warning lamps have been switched on automatically, press the hazard warning lamps button once to switch them off.

Panic alarm

The panic alarm function is designed to attract attention by sounding the horn and flashing the turn signal lamps repeatedly.

The panic alarm can be switched on by pressing the hazard warning lamps button for a period of 3 seconds or more.

The horn will cease after the panic alarm has been active for 60 seconds, but the turn signal lamps will continue to flash. The horn can be re-initiated by pressing the hazard warning lamps button for a period of 3 seconds or more.

To switch the panic alarm off, press the hazard warning lamps button briefly.

Parking lights



i NOTE: The parking lights can only be activated when the ignition is switched off.

1. To activate the parking lights, press the turn signal/hi beam stalk down for the left-hand side or push up for the right-hand side until resistance is felt. The selected parking lights will illuminate once the vehicle has been locked.

Before You Drive

Lighting

2. To deactivate the parking lights, press the turn signal/hi beam stalk down for the left-hand side or push up for the right-hand side until resistance is felt. The selected parking lights will then be deactivated.



NOTE: To activate the parking lights on both sides, press the turn signal/hi beam stalk down then up. To deactivate, press the turn signal/hi beam stalk down then up again.

Before You Drive Washers and Wipers

Windscreen wipers



1. Windscreen wipers off
2. Automatic wipe
3. Slow wipe
4. Fast wipe

i NOTE: Switch off the windscreen wipers in dry weather, dirt can cause inadvertent wiper sweeps which could damage the wiper blades or windscreen.

Operating the windscreen wipers

1. Ensure the ignition is switched on.
2. Move the wiper stalk to the required position.

i NOTE: If the windscreen wipers are switched on and the vehicle comes to a halt, the windscreen wipers automatically switch to intermittent wipe, until the vehicle moves away.

Automatic wipe

A rain sensor, located on the windscreen behind the interior mirror, measures the quantity of water on the windscreen and operates the wipers at the most appropriate speed.

To select, move the windscreen wiper stalk to the automatic wipe position (2).

The wipers will wipe once. The wipe frequency then depends on how wet the windscreen is.

Only select the automatic wipe position in damp weather conditions or when it is raining.

To adjust the sensitivity of the rain sensor, see Wiper sensitivity, page 4.18.

Slow wipe

Move the wiper stalk to position (3), to operate the wipers at slow speed.

Return the stalk to position (1) to switch off.

Fast wipe

Move the wiper stalk to position (4), to operate the wipers at fast speed.

Return the stalk to position (1) to switch off.

Single wipe



Before You Drive

Washers and Wipers

1. For a slow single wipe, briefly push the wiper stalk down and release. The wipers will operate once at slow speed, without washers.
2. For a fast single wipe, push and hold the wiper stalk down. The windscreen wipers will perform a continuous fast wipe until the stalk is released.

Windscreen wash/wipe



Pull the wiper stalk towards you.

The windscreen washers and wipers will initially operate at a slow speed while the stalk is held. If the stalk is held for more than 2 seconds, the wiper will operate at high speed.

When the stalk is released, the wipers will complete their cycle and return to the parked position. After a period of time the wipers will operate once more to wipe any remaining washer fluid from the windscreen.

i **NOTE:** The position of the washer jets are set during vehicle manufacture and should not need adjusting. If a problem occurs, consult your McLaren Retailer.

Wiper park positions

In addition to the normal park position, there are two alternative positions.

Ensure the vehicle is in Awake mode.

Pull the wiper control stalk towards you, the wipers will move through the following park positions each time the stalk is pulled:

Winter park

The wipers are parked vertically to reduce the risk of damage to the wiper arms during periods of heavy snowfall and provide access for easier cleaning of accumulated snow.

Service park

The wipers are parked diagonally to provide access for replacing the wiper blades, see Replacing the wiper blades, page 6.28.

Normal park

The wipers are parked horizontally along the lower edge of the windscreen.

Before You Drive Vehicle Lift

Vehicle lift

- i** NOTE: If the vehicle lift icon on the Folding Driver Display is amber, or a vehicle lift fault message appears on the Folding Driver Display, the system is not available. Do not drive the vehicle at high speed and contact your McLaren Retailer as soon as possible.

The vehicle lift menu offers the following options:

- Vehicle lift - Raise, page 1.36
- Vehicle lift - Lower, page 1.37

Vehicle lift gives you the option to raise or lower the vehicle dependent on the current ride height.

Vehicle ride height can only be raised when traveling at speeds below 31 mph (50 km/h). The vehicle will automatically lower at speeds above 37 mph (60 km/h).

- i** NOTE: The suspension can be left fully raised for extended periods, but it may relax to a lower level over time.

If the vehicle is left in a raised position for a long period, a system reset may occur when the engine is next started to return the vehicle to normal ride height.

If vehicle lift is used when in motion, slight adjustments to the steering feel may be experienced, this is normal and does not affect the operation of the vehicle.

- i** NOTE: Vehicle handling modes are inhibited when vehicle lift is lowering or raising.
- i** NOTE: Vehicle lift will be unavailable if launch mode is active.
- i** NOTE: Vehicle lift will be unavailable if Race mode is active.
- i** NOTE: Vehicle lift is only available when the engine is running.
- i** NOTE: If vehicle lift is requested while the engine has been stopped by the Eco Start-Stop System, the engine will be automatically restarted.

Vehicle lift operation





Access to vehicle lift is obtained by pressing the button on the control stalk on the right of the steering column, whenever the engine is running and the doors are closed.

A confirmation tone will be heard when vehicle lift is activated.

- i** NOTE: Vehicle lift is only available when the engine is running.
- i** NOTE: If vehicle lift is requested while the engine has been stopped by the Eco Start-Stop System, the engine will be automatically restarted.


Before You Drive Vehicle Lift


 **NOTE:** Vehicle handling modes are inhibited when vehicle lift is lowering or raising.


 **NOTE:** Vehicle lift will be unavailable if launch mode is active.


The vehicle lift menu will exit after the timeout duration has been exceeded if there is no activity on the menu.

Vehicle lift - Raise

 **WARNING:** On no occasion should vehicle lift be used as a jacking system. Using vehicle lift to access below the vehicle may result in serious injury.


 **NOTE:** When the vehicle is at normal ride height, you will only have the option to raise the vehicle.


 **NOTE:** Vehicle lift will be delayed if the vehicle experiences any excessive steering wheel input.

 **NOTE:** Always check the vehicle lift icon on the display before driving your vehicle.



Before vehicle lift can be activated, the engine must be running. To raise the vehicle, activate the vehicle lift menu (see Vehicle lift operation, page 1.35) and then move the control stalk upwards.

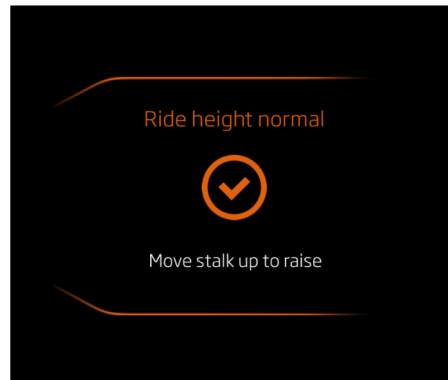

 The change in vehicle ride height is confirmed by an ascending audible tone. 'Vehicle raising' appears on the Folding Driver Display and the vehicle lift icon will flash.

If the engine is stopped while the vehicle is raising, the system will stop and continue to raise only when the engine is restarted.





To change from raise to lower, move the control stalk downwards. The vehicle will start to lower, and the information displayed on the Folding Driver Display will confirm the change.

Before You Drive Vehicle Lift

When the vehicle is fully raised, an audible confirmation tone is heard. 'Ride height raised' appears on the Folding Driver Display and the vehicle lift icon is illuminated while the vehicle remains raised.


If there is no further activity, the vehicle lift menu will exit after the timeout duration has been exceeded.

Vehicle lift - Lower

-  **NOTE:** To lower the vehicle while stationary, the engine must be running and the driver's door must be fully closed.
-  **NOTE:** When the vehicle is raised, you will only have the option to lower the vehicle.
-  **NOTE:** Do not drive at high speed whilst the vehicle is lowering. If the vehicle begins to auto lower, a descending audible tone is heard, and the vehicle lift menu will be displayed on the Folding Driver Display allowing you control of the system.
-  **NOTE:** Always check the vehicle lift icon on the Folding Driver Display before driving your vehicle.



To lower the vehicle, activate the vehicle lift menu (see Vehicle lift operation, page 1.35) and then move the menu control stalk downwards.

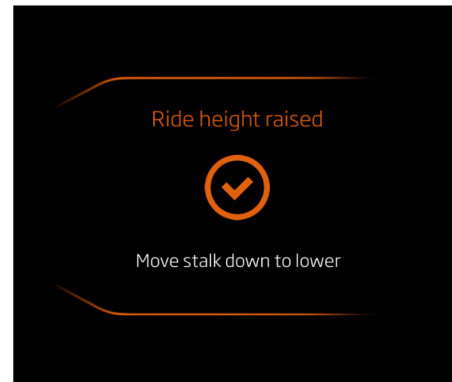

The change in vehicle ride height is confirmed by a descending audible tone. 'Vehicle lowering' appears on the Folding Driver Display and the screen vehicle lift icon will flash.

To change from lower to raise, move the control stalk upwards. The vehicle will start to raise, and the information displayed on the Folding Driver Display will confirm the change.

When the vehicle is lowered, an audible confirmation tone is heard. 'Ride height normal' appears on the Folding Driver Display and the vehicle lift icon extinguishes.

Before You Drive Vehicle Lift

If there is no further activity, the vehicle lift menu will exit after the timeout duration has been exceeded.

Driving Controls

Starting and Driving.....	2.02
Vehicle electrical status.....	2.02
Switching on the ignition.....	2.03
Instruments and warning lights.....	2.03
Dual clutch gearbox gear positions.....	2.06
Parking brake.....	2.06
Brake pedal.....	2.08
Starting/stopping the engine.....	2.08
Driving.....	2.10
Exhaust temperature monitoring.....	2.12
Parking sensors.....	2.12
Rear view camera (RVC).....	2.14
Park Assist.....	2.15
Dual Clutch Gearbox.....	2.16
Overview.....	2.16
Gear positions.....	2.16
Accelerator pedal position.....	2.17
Manual/automatic mode.....	2.17
Handling and Powertrain Controls.....	2.20
Active dynamics control.....	2.20
Active button.....	2.20
Handling control.....	2.21
Powertrain control.....	2.22
Launch control.....	2.25
Spinning wheel pull away.....	2.27
Pit lane pull away.....	2.28
Race Mode.....	2.29
Race mode overview.....	2.29

Activate Race mode.....	2.29
Deactivate Race Mode.....	2.30
Instruments.....	2.31
Vehicle settings.....	2.32
Driving Safety Systems.....	2.33
General.....	2.33
Anti-lock braking system (ABS).....	2.33
Brake assist system.....	2.34
Brake disc wiping.....	2.34
Hill hold control.....	2.35
Brake-steer.....	2.35
Electronic stability control (ESC).....	2.35
Active aero.....	2.38
Tire pressure monitoring system (TPMS).....	2.40
Cruise Control.....	2.44
Overview.....	2.44
Using cruise control.....	2.44
Canceling cruise control.....	2.45
Increasing cruise control speed.....	2.46
Reducing cruise control speed.....	2.46
Resuming a stored speed.....	2.47
Active Speed Limiter (ASL).....	2.48
Setting an upper speed limit.....	2.48
Canceling Active Speed Limiter (ASL).....	2.49
Running In.....	2.50
Running in.....	2.50
Normal/road use.....	2.50

Driving Controls

Track use.....2.51

Refueling.....2.52

 Filling with fuel.....2.52

 Recommended fuel.....2.53

Winter Driving.....2.55

 Winter driving.....2.55

Driving Controls

Starting and Driving

Vehicle electrical status

The vehicle will implement one of the following statuses according to the criteria detailed.

i NOTE: The engine can be started from any of the following states, except Locked. If the vehicle is in Sleep mode, the START/STOP button will need to be pressed for more than 2 seconds.

i NOTE: If the vehicle detects the battery charge is getting too low, it will adopt the Awake mode to conserve energy. Ignition will be prohibited, but Crank will still be available. This is to allow the engine to be started so that battery recharging can commence.

Locked

Vehicle is locked in low power mode.

Sleep

Vehicle is unlocked in low power mode.

Awake

Door is opened or START/STOP button pressed, when the vehicle is in Sleep mode or the engine is switched off.

Time, odometer reading, battery status and fuel gage are available on the Folding Driver Display.

If there is no further activity after 60 seconds, the vehicle will return to the Sleep mode.

Ignition

START/STOP button is pressed, when the vehicle is in Awake mode.

Windows and heater/air conditioning controls operate. Folding Driver Display menus and McLaren Infotainment System (MIS) are available.

i NOTE: There is no timeout with ignition on. Be aware that the battery could become discharged.

Crank

See Starting/stopping the engine, page 2.08.

Power saving mode

Under very rare circumstances, the vehicle may not be able to supply enough voltage and will activate power saving mode.

⚠ WARNING: When power saving mode is active, the climate control and steering will operate with reduced effect.

i NOTE: When power saving mode is active, the message 'Battery management active - See owner's manual' appears on the Folding Driver Display.

Parking days



When the vehicle is in Awake mode the number of "days parking" remaining will be displayed on the Folding Driver Display. This indicates how many days the vehicle can be parked, without running the engine or connecting a battery charger, before the battery will become discharged.

Driving Controls

Starting and Driving

Switching on the ignition



1. Ensure that the key fob is inside the vehicle.
2. To switch on the ignition without starting the engine, press the START/STOP button, without depressing the brake pedal.

i NOTE: If the vehicle is in Awake mode, press the START/STOP button twice with the brake pedal released.





3. The ignition will switch on, the oil temperature, water temperature and fuel gages will operate and several of the warning lights will illuminate as a self-test. The Folding Driver Display will fully illuminate.

Instruments and warning lights

Warning lights can be divided into different categories, according to the color that they illuminate.








- RED or AMBER warning light - indicates that a fault has been detected. A fault indicated by a RED light is more important than one displayed in AMBER.
- BLUE or GREEN notification light - indicates that a system or feature is switched on and operating.




Warning lights


	Tire pressure monitoring system (TPMS), page 2.40
	Seat belt warning light, page 1.16
	Rear fog lamp, page 1.29
	Supplementary restraint system (SRS) warning light, page 1.21

Driving Controls





Starting and Driving

	Electronic stability control (ESC), page 2.35
	Engine warning light, page 2.11
	Anti-lock braking system (ABS) status light, page 2.34
	Brake warning light, page 2.08 Parking brake status, page 2.06
	Low oil pressure warning light. If this illuminates, stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.
	Engine coolant hot warning light. If this illuminates, stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.
	No charge warning light. If this illuminates, stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.

	Electronic stability control system failure warning light. If this illuminates, adapt your driving style while the fault exists. Contact your McLaren Retailer.
	Low fuel level warning light. If this illuminates, refuel your vehicle at the soonest opportunity. See Filling with fuel, page 2.52
	Generic failure warning light. A message will be shown on the Folding Driver Display when this is illuminated, stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.

	Generic failure caution light. A message will be shown on the Folding Driver Display when this is illuminated, stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.
---	--

Notification lights

	Turn signals, page 1.30
	Hi beam headlamps, page 1.28
	Lo beam headlamps, page 1.28
	Sidelamps, page 1.28


Driving Controls

Starting and Driving




Turn signals, page 1.30

Folding Driver Display overview

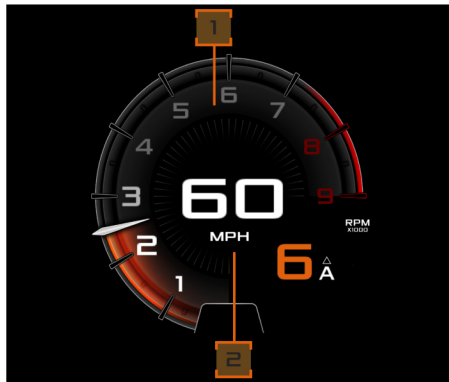

1. Tachometer, page 3.02
2. Speedometer, page 3.03

Folding Driver Display - left-hand side

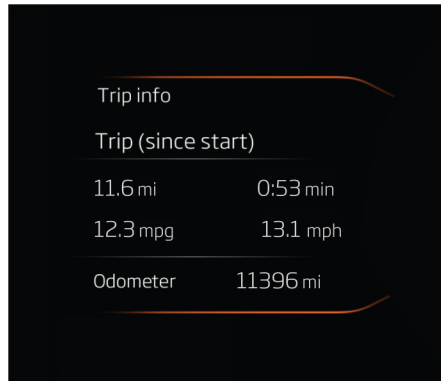

The Folding Driver Display provides important information to the driver and will vary depending on the mode and vehicle settings selected.




Use the control stalk to navigate through the menus.

Driving Controls

Starting and Driving

Folding Driver Display - right-hand side

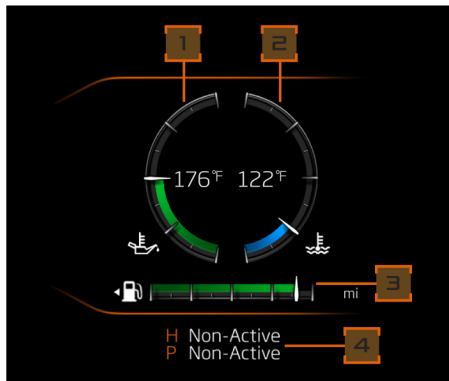

1. Oil temperature, page 3.16
2. Coolant temperature, page 3.17
3. Fuel level and range, page 3.17
4. Handling control, page 2.21
Powertrain control, page 2.22

Dual clutch gearbox gear positions

The gearbox operates in either automatic or manual mode. Automatic mode is selected unless the driver chooses manual mode, see Gear positions, page 2.16 and Manual/automatic mode, page 2.17. If manual mode is active, gear changes are made using the gearshift paddles, see Gearshift paddles, page 2.19.

Parking brake

i NOTE: When parking on steep downhill slopes, turn the front wheels towards the kerb. When parking on steep uphill slopes, turn the front wheels away from the kerb.

Parking brake status

BRAKE If the parking brake applied status light is flashing, the parking brake has failed to engage/disengage. To resolve, engage/disengage the parking brake again. See Parking brake operation, page 2.07.

Driving Controls

Starting and Driving

Parking brake operation



To engage the parking brake, pull the switch outwards, the red parking brake applied status light on the Folding Driver Display illuminates.

- i** NOTE: The parking brake on your vehicle is electronic and only a light application of the switch is required to engage or disengage the parking brake.



To disengage the parking brake, keep the brake pedal depressed and push the parking brake switch inwards, the red parking brake applied status light on the Folding Driver Display extinguishes.

! **WARNING:** If the parking brake is manually released, the vehicle may start to move.

- i** NOTE: If the parking brake is not manually released, it will automatically release as the vehicle is driven off forward, or in reverse as long as the following conditions are met:
 - Driver's door is closed

- Driver's seat belt is buckled
- i** NOTE: If the parking brake is not manually applied it will automatically apply when the engine is switched off.
- i** NOTE: It is only possible to disengage the parking brake with the ignition on. The parking brake can be applied in all ignition states, including vehicle asleep.
- i** NOTE: In the event of total footbrake failure, the parking brake can be applied when the vehicle is moving to slow the vehicle.

Driving Controls

Starting and Driving

Brake pedal

⚠ WARNING: Do not keep any objects in the driver's footwell. Ensure that floor mats or carpets are properly secured and do not obstruct the pedals.

If objects become trapped between the pedals, you may not be able to brake or accelerate, and this could lead to an accident.

⚠ WARNING: The braking system is servo assisted when the engine is running. The brakes will still function with the engine off, but more pressure will be required to operate them.

⚠ WARNING: Do not rest your foot on the brake pedal while traveling as this may overheat the brakes, reduce their efficiency and cause excessive wear.

⚠ WARNING: If the brake warning light illuminates while the vehicle is in motion, stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.

Brake discs and pads

⚠ WARNING: New brake pads require a period of bedding in. For the first 625 miles (1,000 km), avoid situations where heavy braking is required.

Brake disc and pad wear depends on the driving style and driving conditions.

Brake warning light

⚠ BRAKE The brake warning light will illuminate when the ignition is switched on as a system test. If the brake warning light illuminates at any other time, a fault is indicated. Stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.

Starting/stopping the engine

⚠ WARNING: Never run the engine when the vehicle is in an enclosed space. Exhaust fumes contain poisonous carbon monoxide. Breathing exhaust fumes could lead to unconsciousness and death.

i NOTE: Do not depress the accelerator pedal when starting the engine.

Starting the engine

1. Ensure that the key fob is in the vehicle.



Driving Controls

Starting and Driving

- Depress the brake pedal, press and release the **START/STOP** button and the engine will start.
- If the **START/STOP** button is pressed again while the engine is cranking, cranking is stopped.

Stopping the engine

- Select neutral.



- Press the **START/STOP** button. The engine stops, the vehicle enters Awake mode, see Vehicle electrical status, page 2.02. The immobilizer is activated.

i NOTE: The parking brake will apply automatically when the engine is stopped. Automatic application can be overridden by holding the parking brake switch in the off position whilst opening the driver's door.

Eco Start-Stop system

This system automatically stops the engine when conditions allow in order to reduce fuel consumption and exhaust gas emissions and restarts it again when required.

The following conditions must be met for the system to automatically stop the engine:

- Driver is detected as present
- Driving speed exceeded 6 mph (10 km/h) since previous stop
- Engine at normal operating temperature
- Vehicle battery fully charged
- Air conditioning demand not too high
- Non-Active, Comfort or Sport Powertrain mode active

System operation



At very low speeds a status icon will be shown on the Folding Driver Display.

The icon will illuminate amber if conditions have not been met and the system is not available.

If all conditions have been met and the system is available, the icon will illuminate green.

The system will automatically stop the engine when the brake pedal is depressed and the vehicle slows to a complete stop.

The message 'ENGINE STOPPED' will be shown on the Folding Driver Display.

Driving Controls

Starting and Driving

The engine will automatically restart when the brake pedal is released or any conditions that require the engine to restart are detected.

i NOTE: If the parking brake is engaged while the engine is stopped, the engine will not restart when the brake pedal is released.

Depress the brake pedal, disengage the parking brake and then release the brake pedal in order to initiate the automatic restart.

i NOTE: The engine may automatically re-start before the brake pedal is released in order to maintain electrical, air conditioning or other vehicle demand.

Deactivating



Press the Eco Start-Stop system OFF button to deactivate the system. The light in the button will illuminate and the status light on the Folding Driver Display will be extinguished.

Press the button again to activate the system.

i NOTE: If the Eco Start-Stop system OFF button is pressed when the engine has been automatically stopped, the engine will re-start.

i NOTE: The system is active by default when the ignition is switched on, even if it has been previously deactivated.

Driving

Driving away

⚠ **WARNING:** Never turn the engine off while driving, there will be no assistance for the steering or the foot brake. You will need more effort to steer and brake and could lose control of the vehicle and cause an accident.

i NOTE: Do not drive at high engine speeds until the engine has reached normal operating temperature.

i NOTE: The doors will lock when the vehicle reaches a speed of approximately 9 mph (15 km/h). Auto lock can be set on the Central Display, see Automatic door locking, page 4.16.

i NOTE: During extensive parking maneuvers the steering assistance might feel slightly stiffer. This is normal and designed to protect the steering system from overheating.

Driving Controls

Starting and Driving

i NOTE: When starting from cold, engine idle speed may be increased and gear changes may occur at higher engine speeds. The catalytic converter will reach its operating temperature quicker and reduce engine emissions.

1. With the engine running, press and hold the brake pedal.
2. Select drive or reverse gear, or initiate an upshift by operating the gearshift paddles. For more information, see Gearshift paddles, page 2.19 and Gear positions, page 2.16.
3. Keep the brake pedal depressed and release the parking brake switch. The red status light on the Folding Driver Display will be extinguished.

! **WARNING: If the parking brake is manually released, the vehicle may start to move.**

i NOTE: If the parking brake is not manually released, it will automatically release as the vehicle is driven off forward, or in reverse as long as the following conditions are met:

- All doors are closed

- Driver's seat belt is buckled

4. Carefully depress the accelerator pedal.

Engine warning light



This engine warning light illuminates when the ignition is on and extinguishes as soon as the engine is started, provided no faults exist.

If the light illuminates while driving, an engine management fault has been detected and reduced engine performance may be experienced. Stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.

Limhome mode

Limhome mode activates automatically when vehicle systems detect a fault which may cause further damage unless vehicle or system performance is restricted. Care should be taken while driving in this mode. Contact your McLaren Retailer immediately.

Economical driving

Improved fuel economy can be achieved by following this advice:

- Accelerate smoothly and gently from a standing start.
- When in manual mode, avoid high engine rpm by changing to a higher gear as soon as possible.



The gear shift indicator (GSI) will illuminate when an upshift would maintain optimum economy.

i NOTE: Not available in all markets, consult your McLaren Retailer.

- Avoid laboring or over-revving the engine.
- Switch off the air conditioning when it is not needed.
- Avoid journeys where frequent stop/start driving is involved.
- Ensure that your driving style suits the prevailing road and traffic conditions; allow time for smooth, progressive acceleration and braking.

Driving Controls

Starting and Driving

Exhaust temperature monitoring

The vehicle continuously monitors exhaust temperatures to protect the catalytic converters from damage caused by overheating.

If excessive exhaust temperatures are measured, a warning will be displayed on the Folding Driver Display.

The vehicle speed should be reduced as soon as this message is observed. Refrain from maneuvers involving high engine speed and high engine load (full throttle) to allow the exhaust to cool. The message will remain until the temperature has reduced.

If the exhaust temperature remains at an excessive level, a second warning is displayed and limphome mode is activated. The engine performance will remain limited until the vehicle is restarted.

i NOTE: Catalytic converter over temperature warnings are not likely to be observed during normal driving and are the result of extreme operating conditions. For example, high exhaust temperatures can be caused by extended track driving, maintaining high engine speed for long durations, and sudden and repeated changes in throttle demand.

i NOTE: High exhaust temperatures can cause damage to catalytic converters and should be avoided by practicing careful driving.

If the warnings persist, contact your McLaren Retailer.

Parking sensors



The parking sensors alert the driver to any obstructions while maneuvering at low speeds. The system comprises two ultrasonic sensors in the front bumper, four ultrasonic sensors in the rear bumper and two sounders. Each sounder has a different pitch to indicate whether the obstruction is at the front or the rear of the vehicle.

Driving Controls


Starting and Driving


The front parking sensors are automatically switched on when the engine is running and drive is selected. The rear parking sensors are switched on when reverse gear is selected. The light around the parking sensors button will illuminate amber to indicate that parking sensors are active.

Front parking sensors can be activated when the vehicle is in neutral and the system is manually turned on.


The sensors on the front bumper have a range of approximately 3 ft (1 m). The center sensors in the rear bumper have a range of approximately 5 ft (1.5 m).

An intermittent tone is heard when an obstruction is within range. As the vehicle moves closer to an obstruction, the frequency of the tone increases. When the distance between the sensors and the obstruction is less than approximately 2 ft (60 cm), the tone becomes continuous.

 **WARNING:** The parking sensors may not detect moving objects such as children and animals until they are dangerously close. Always maneuver with caution and always use your mirrors, turn your head and look behind you.

 **NOTE:** The parking sensors are for guidance only and are not intended to replace the driver's visual checks for obstructions when maneuvering. The parking sensors may not detect some obstructions, such as narrow posts or small obstructions close to the ground such as kerbs.

The rear parking sensors are automatically switched off when reverse gear is de-selected. The front parking sensors are automatically switched off when the vehicle speed exceeds 16 mph (26 km/h) and drive is selected. If the parking sensors have been manually activated, by pressing the center of the button, the front parking sensors will become active again when the vehicle speed reduces to 12 mph (20 km/h).

 **NOTE:** When the vehicle speed exceeds 16 mph (26 km/h), the parking sensors cannot be manually activated.

The parking sensors can be switched off manually by pressing and holding the center of the button, to remove the parking sensor proximity view from the Central Infotainment Touchscreen press center of the button when in drive or neutral. The parking sensors cannot be manually switched off if reverse gear is selected. When manually switched off, the light around the button will be extinguished.


When the system has been manually switched off, both the front and rear sensors will still switch on when reverse gear is selected and remain on until drive or neutral is selected again.

If a fault is detected the system will be disabled and message will appear in the Folding Driver Display, the parking sensor button light will flash. If the sensors are obscured by dirt, ice or snow, clean them. If the problem persists, contact your McLaren Retailer.

Driving Controls

Starting and Driving


Rear view camera (RVC)

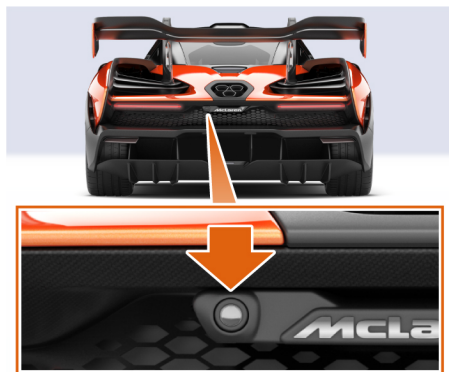

The rear view camera (RVC) is mounted in the center of the rear bumper. The live video feed is displayed on the Folding Driver Display when the function is active.

- i** NOTE: If the video feed is blurred or unclear, carefully clean the lens with water and a soft cloth.
- i** NOTE: If the Folding Driver Display is in Slim Display Mode the RVC will be displayed on the Central Infotainment Touchscreen.

- i** NOTE: Slim Display Mode will not be available whilst the RVC is active.

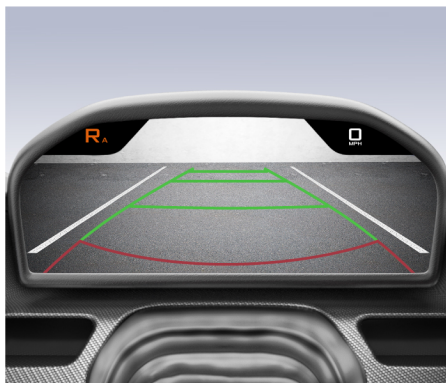

A colored grid is overlaid onto the live video feed as a guide to the proximity of visible objects to the rear of the vehicle.

Each colored box starts at the rear of the vehicle and extends 25 cm (10 in) beyond the widest point of the vehicle and extends back, away from the vehicle.

The red box extends back 1 ft 6 in (40 cm) from the rear of the vehicle.

The green box extends back 6 ft 7 in (2 m) from the rear of the vehicle, with an additional line at 3 ft 4 in (1 m).

- i** NOTE: The rear view camera is for guidance only and is not intended to replace the driver's visual checks for obstructions when maneuvering. The rear view camera may not show some obstructions in certain ambient light or weather conditions.

The RVC is automatically activated when reverse gear is selected and automatically deactivated 10 seconds after a forward gear is selected or immediately if the vehicle's forward speed exceeds 6 mph (10 km/h).

The RVC can be manually activated by selecting Rear view camera on the Central Infotainment Touchscreen Home screen.

- 📺** When the RVC has been manually activated and is displayed on the Central Infotainment Touchscreen, it can be deactivated by pressing the home button.

Driving Controls

Starting and Driving

Park Assist



Park Assist will display a live video showing rear and side views of the vehicle in the Central Infotainment Touchscreen.

Park Assist is switched on when reverse gear is selected. The light around the parking sensors button will illuminate amber to indicate that Park Assist and the parking sensors are active.

The Park Assist visual display can be manually activated or deactivated with a short press of the parking sensors button. A long press of the button will deactivate the system and the two front parking sensors. When deactivated, the light around the button will be extinguished.

- i** NOTE: Park Assist cannot be deactivated if reverse gear is selected.
- i** NOTE: If the mirrors are folded, Park Assist is not enabled and the following will be displayed on the Central Infotainment Touchscreen 'Park Assist is not available when the side mirrors are folded'.

When the Folding Driver Display is in Slim Display Mode the Park Assist view in the Central Infotainment Touchscreen will be replaced with the rear view camera (RVC) view.

- i** NOTE: Park Assist is for guidance only and is not intended to replace the driver's visual checks for obstructions when maneuvering.

When Park Assist has been manually deactivated, it will be reactivated when reverse gear is selected and remain active until drive or neutral is selected again. It can also be reactivated with a short press of the parking sensors button.

Driving Controls

Dual Clutch Gearbox

Overview

The gearbox is 7-speed, dual clutch gearbox that can be operated in automatic or manual mode.

Automatic mode is selected unless the driver chooses manual mode, see Manual/automatic mode, page 2.17.

In automatic mode, the gearbox automatically optimizes the shift points to suit your style of driving by selecting the most appropriate gear depending on:

- Powertrain control, page 2.22.
- Accelerator pedal position, page 2.17.
- vehicle speed.
- braking effort.

i **NOTE:** Allow the engine and gearbox to warm up before driving at high engine speeds and high loads. Avoid prolonged spinning of the rear wheels when driving on slippery surfaces as this could damage the drivetrain.

Gear positions



Press one of the gear position buttons.

i **NOTE:** The letter on each button will illuminate red to identify if the vehicle is in Drive, Neutral or Reverse.

Drive

□ All seven forward gears are available. Gear changes will be automatic, unless manual mode has been selected.

Neutral

N No gear is engaged. Releasing the brakes will allow the vehicle to move freely, e.g. for pushing or towing. For more information on use of neutral for towing, see Towing for recovery, page 6.41.

Neutral can be selected at any vehicle speed by pressing the N button. Pressing the D button or initiating a shift by operating the gearshift paddles will then select the appropriate gear for the vehicle speed.

Reverse

R In normal circumstances, select reverse gear when the vehicle is stationary. When carrying out parking maneuvers that require rapid changes from drive to reverse and back again, it is possible to engage reverse or drive at speeds up to 6 mph (10 km/h) whilst traveling in the opposite direction.

i **NOTE:** If reverse or drive is selected at speeds above 6 mph (10 km/h), the transmission will engage neutral, as a self protection feature. When traveling at speeds below 6 mph (10 km/h), neutral can be selected by pressing the N button.

Driving Controls

Dual Clutch Gearbox

When reverse is selected and the brakes are released, the vehicle will begin to move slowly without any throttle use, making it useful for parking maneuvers.



The gear (manual mode) or the gear position (automatic mode) selected will be shown on the Folding Driver Display.

i NOTE: The gear position will not be displayed if there is a system communication fault. A warning message will appear on the Folding Driver Display to inform you of the fault.

Accelerator pedal position

Your style of driving influences how the dual clutch gearbox changes gear.

With light accelerator pedal use, upshifts are made at lower engine speeds. With firmer accelerator pedal use, upshifts are made at higher engine speeds.

Kickdown

Kickdown is designed to achieve immediate acceleration when in automatic mode.

Depress the accelerator pedal fully beyond the pressure point, a click will be felt through the pedal. The gearbox will downshift immediately to the lowest appropriate gear, and maximum acceleration will follow. Once the pedal pressure is released, kickdown will cease and normal gear changes will resume.

i NOTE: Moderate accelerator pedal pressure may also cause the gearbox to downshift, depending on vehicle speed.

Manual/automatic mode




Press the **ACTIVE** button (2) to switch on the Active Dynamics Panel.

The halo around the **ACTIVE** button will come on. When selecting the different drive modes, their respective button will become illuminated. You can deactivate your drive mode selection at any time by pressing the **ACTIVE** button again. Press the **MANUAL** button (1) to select manual mode.

Driving Controls


Dual Clutch Gearbox

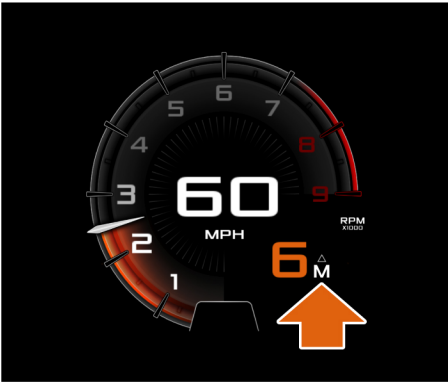

The gearbox mode indicator displays M and the currently selected gear. All forward gear changes are made by operating the gearshift paddles, see Gearshift paddles, page 2.19.

Performance shift cue (PSC) is an indicator that will sound to indicate that an upshift is required to maintain optimum performance.


For setting options see Performance Shift Cue (PSC), page 4.16.

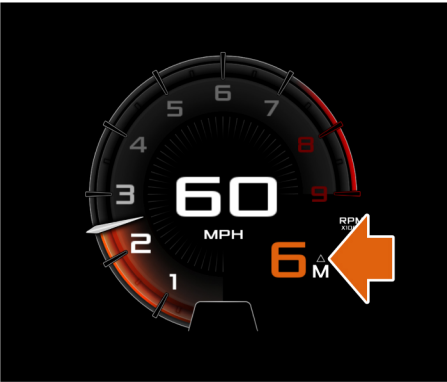

When in manual mode and driving more economically, the gear shift indicator (GSI) will illuminate when an upshift would maintain optimum economy. The GSI will not illuminate if the requested acceleration or deceleration cannot be met with a higher gear. See Economical driving, page 2.11.

i NOTE: Not available in all markets, consult your McLaren Retailer.

Press the **MANUAL** button again to revert to automatic mode.

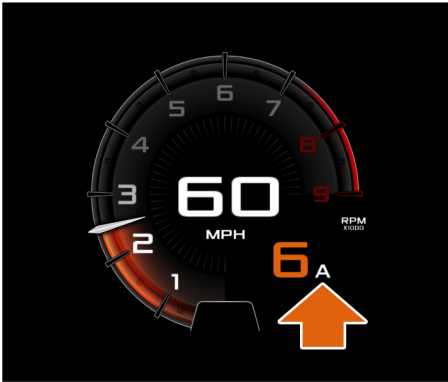

The gearbox mode indicator displays A. All gear changes occur automatically, but if a gearshift paddle is operated the gearbox will adopt a temporary manual mode. This mode will remain active for as long as the driver continues to make manual gear changes, each within an eight second period. The gearbox mode indicator displays A/M, see Gear position indicator, page 3.15.

i NOTE: As soon as an eight second period has elapsed without a manual gear change being made, the gearbox will revert to automatic mode.

Driving Controls

Dual Clutch Gearbox

Gearshift paddles



To upshift, pull the right-hand paddle towards you. To downshift pull the left-hand paddle towards you. The current gear position appears on the gear position display, see Gear position indicator, page 3.15.

i NOTE: The single-piece paddle and central pivot enables upshifts and downshifts to be made using either paddle.

As an alternative, upshifts can be made by pushing the left-hand paddle away from you and downshifts can be made by pushing the right-hand paddle away from you.

The gearshift paddles operate irrespective of the handling and powertrain mode selected, and there is no need to release the accelerator pedal to change gear.

! **WARNING:** For safety, in manual mode, the vehicle will monitor engine speed and may perform an automatic gear change if necessary.

! **WARNING:** Do not change down for additional engine braking on a slippery surface.

i NOTE: If operating the paddles in automatic mode, the gearbox will revert to automatic changes if an eight second period elapses without a gear change being made.

To immediately shift to the lowest possible gear whilst the vehicle is braking, select and hold a downshift on the paddle. The vehicle will then go down through all gears sequentially until the optimum gear is reached or you release the paddle.

When the vehicle speed is below 6 mph (10 km/h) or the vehicle is stationary with a gear selected, select a downshift and hold the paddle to select neutral.

Neutral can be selected at any vehicle speed by pressing the N button. Pressing the D button or initiating a shift by operating the gearshift paddles will then select the appropriate gear for the vehicle speed.

Pre-Cog

The gearbox will anticipate the next gear change and pre-select the required gear to ensure fast and seamless gear change.

When the vehicle is under acceleration, the gearbox will automatically pre-select the next highest gear. If a downshift is required immediately following hard acceleration, lightly pull and hold the downshift paddle to the Pre-Cog position to pre-select the next lowest gear. When ready, fully pull the paddle for an almost instantaneous downshift.

To pre-select an upshift during deceleration, lightly pull and hold the upshift paddle to the Pre-Cog position to pre-select the next highest gear. When ready, fully pull the paddle for an almost instantaneous upshift instead of the automatically pre-selected downshift.

Driving Controls

Handling and Powertrain Controls

Active dynamics control

The handling and powertrain control switches, on the Active Dynamics Panel, allow the driver to change the handling and performance characteristics of the vehicle.

The Active Dynamics Panel contains the following controls, and will only function with the engine running or the ignition switched on.



1. Handling control, page 2.21
2. Active button, page 2.20
3. Powertrain control, page 2.22
4. Eco Start-Stop system, page 2.09

5. Launch control, page 2.25
6. Engine START/STOP button, see Vehicle electrical status, page 2.02

Active button



Pressing the ACTIVE button switches on the Active Dynamics Panel. This activates the Launch, Aero, ESC off, handling and powertrain controls. The ACTIVE button and handling and powertrain switches will illuminate.

i NOTE: When the Active Dynamics Panel is on, the current handling and powertrain modes will appear in amber on the Folding Driver Display. When the panel is off, the handling and powertrain modes will appear in white.

Driving Controls

Handling and Powertrain Controls

i NOTE: When the ignition is switched off, the controls on the Active Dynamics Panel will also switch off. The handling and powertrain control modes will be remembered but it will be necessary to press the ACTIVE button again to operate the controls when the ignition is next switched on or the vehicle will revert to automatic gear changes.

Handling control

The handling control switch affects the RaceActive Chassis Control II system.

Selecting a mode



1. Press the ACTIVE button to switch on the Active Dynamics Panel.




2. Rotate the handling control to select one of the following modes.


Driving Controls

Handling and Powertrain Controls

Modes


C	Comfort	Suspension at its softest setting, offers a compliant ride while maintaining good body control through corners.
S	Sport / Non-Active	Suspension is stiffer than comfort mode, giving a firmer ride coupled with enhanced handling characteristics.
T	Track	The suspension is stiffer than Sport / Non-Active mode , suspension set for track and sporty road driving.

- 

NOTE: ESC is controlled via the ESC button in all modes.
- 

NOTE: The information displayed on the Folding Driver Display will change dependent on the handling mode selected. See Handling and powertrain mode display, page 3.15.


The mode selected will remain active, until the selection is changed, the ignition is switched off, or the Active Dynamics Panel is deactivated.

- 

NOTE: If all the following conditions are not met when the selection is made, the mode will not be implemented until they are met:
- No fault conditions existing
 - No vehicle dynamic or stability interventions activated, e.g. electronic stability control
 - Steering wheel in straight ahead position, and not being turned, if the vehicle is moving

When the Active Dynamics Panel is off, the handling display on the Folding Driver Display will show Non-Active, see Handling and powertrain mode display, page 3.15.

When the vehicle is in Non-Active mode, the handling characteristics will match those of Sport handling mode.

- 

NOTE: In Track handling mode, the electronic stability control system is still in operation. For further information, see Electronic stability control (ESC), page 2.35.

Powertrain control

Selecting a mode



1. Press the ACTIVE button to switch on the Active Dynamics Panel.

Driving Controls

Handling and Powertrain Controls



2. Rotate the powertrain control to select one of the following modes.

The shift strategy will vary, depending on the powertrain mode selected.

Active modes

Automatic mode		
C	Comfort	The shift points are configured to offer the optimum economy without sacrificing the vehicle's inherent performance.
S	Sport	Gear changes will occur at a higher engine speed and with a reduced shift duration and are further enhanced with cylinder cut. See Cylinder cut, page 7.14.
T	Track	The shift points are taken to the extreme to simulate a track driving style.

Manual mode

C	Comfort	The shift points are configured to offer optimum comfort and are enhanced with cylinder cut. See Cylinder cut, page 7.14.
S	Sport	Gear changes occur with a reduced shift duration and are further enhanced with ignition cut. See Ignition cut, page 7.15.
T	Track	Gear change strategy is at its sharpest. Changes occur instantly and are further enhanced with inertia push. See Inertia push, page 7.15.

i NOTE: The information displayed on the Folding Driver Display will change dependent on the powertrain mode selected. See Handling and powertrain mode display, page 3.15.

i NOTE: The use of Track mode on the public road is not recommended. Track mode is strictly intended for high performance track/off road use only.

Driving Controls

Handling and Powertrain Controls


The mode selected will remain active, until the selection is changed, the ignition is switched off, or the Active Dynamics Panel is deactivated.

When the Active Dynamics Panel is off, the powertrain display on the Folding Driver Display will show Non-Active, see Handling and powertrain mode display, page 3.15.

Non-Active mode

In both automatic and manual modes, gear changes occur with a reduced shift duration and are further enhanced with inertia push. See Inertia push, page 7.15.

Economy mode

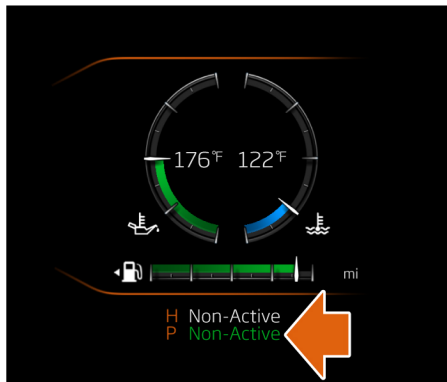

When the vehicle is operating in any powertrain mode with automatic gear shifts selected, the transmission adapts to an economical shift strategy during periods of gentle driving. This is determined by the vehicle speed, acceleration, braking and road gradient.

Depending on the current active shift strategy, the word 'Non-Active', 'Comfort', 'Sport' or 'Track' changes color to green when economy mode is active. For information on other ways to save fuel, see Economical driving, page 2.11.

NOTE: When the Active Dynamics Panel is on, the current handling and powertrain modes will appear in amber on the Folding Driver Display. When the panel is off, the handling and powertrain mode 'Non-Active' will appear in white.

Driving Controls

Handling and Powertrain Controls

Launch control

Launch control is designed to offer the maximum acceleration from a standing start.

WARNING: Do not initiate launch control unless on a track. Before initiating launch control, ensure that all doors and service covers are closed, and the prevailing conditions are suitable for performing maximum acceleration maneuvers.

i NOTE: Launch control can be operated in either automatic or manual modes and any handling or powertrain mode, but only when the Active Dynamics Panel is activated.

i NOTE: The launch sequence can be aborted at any point by carrying out any of the following actions:

- Applying the parking brake
- Pressing the **ACTIVE** button to switch off the vehicle dynamics panel
- Pressing the **LAUNCH** button to switch off launch control

i NOTE: If there is a fault or the launch procedure has not been followed correctly, a warning message 'Launch Mode unavailable - See owner's manual' will be shown on the Folding Driver Display. Repeat the launch procedure, ensuring that it is followed correctly. If the warning message remains, contact your McLaren Retailer.

i NOTE: Launch mode is only available if the following conditions are met:

- Both doors are closed
- Vehicle lift function inactive
- Atmospheric altitude has no detrimental effect with respect to engine performance
- Engine coolant at normal operating temperature

Launch control process

1. Ensure the steering wheel is in a straight ahead position.
2. Depress the brake pedal firmly with your left foot and select first gear.



3. Press the **ACTIVE** button to switch on the Active Dynamics Panel.

Driving Controls

Handling and Powertrain Controls



4. Press the LAUNCH button.

i NOTE: L will flash in the gearbox mode indicator, see Manual/automatic mode, page 2.17 and 'Launch Mode active - Awaiting full throttle' will be shown on the Folding Driver Display.

5. With your left foot remaining on the brake pedal, press and hold the accelerator pedal down fully with your right foot, the engine speed will increase to 3,200 rpm.

i NOTE: To abort launch control release the brake pedal before pressing the accelerator pedal or wait for approximately 100 seconds until launch control is deactivated. The message 'Launch Mode aborted - See owner's manual' will be shown on the Folding Driver Display.

i NOTE: The message 'Launch Mode active - Boost building' will be shown on the Folding Driver Display. Once sufficient boost has been achieved, the message 'Launch Mode active - Boost ready' will be shown on the Folding Driver Display.

6. Release the brake pedal with your left foot and the launch control system will perform a launch start to give maximum acceleration.

i NOTE: To abort launch control release the accelerator pedal or wait for approximately 5-10 seconds until launch control is deactivated. If the launch is aborted, release the accelerator pedal and then press again to drive away. The message 'Launch Mode aborted - See owner's manual' will be shown on the Folding Driver Display.

7. Launch control will operate if the procedure has been followed correctly until aborted.


i NOTE: Whilst in launch control, the vehicle will carry out automatic gear shifts, and optimize traction. It will continue to do so until launch control is aborted. To abort launch control, release the accelerator pedal, apply the brake, or operate one of the gearshift paddles.


Driving Controls


Handling and Powertrain Controls


Spinning wheel pull away

For the driver who wishes to demonstrate maximum drama on pull away.


 **WARNING: Do not initiate spinning wheel pull away unless on a track. Before initiating spinning wheel pull away, ensure that all doors and service covers are closed, and the prevailing conditions are suitable for performing dramatic acceleration maneuvers.**

 **WARNING: During spinning wheel pull away the electronic stability control will be deactivated, resulting in loss of traction and spinning of the rear wheels.**


 **NOTE:** Spinning wheel pull away can be operated in either automatic or manual mode and any powertrain mode, but only Sport or Track chassis modes.

 **NOTE:** Spinning wheel pull away can be aborted at any point by carrying out any of the following actions:

- Applying the brakes
- Releasing the accelerator pedal


 **NOTE:** Spinning wheel pull away is only available if the following conditions are met:


- Engine coolant at normal operating temperature
- Atmospheric pressure is sufficient for normal engine performance
- Vehicle is stationary and on level ground
- Electronic Stability Control is switched off
See Electronic stability control (ESC), page 2.35
- Variable Drift Control is switched off
See Variable Drift Control, page 2.37
- Launch control is inactive
- First gear is selected
- Parking brake is disengaged
- Steering wheel should be in a straight ahead position to ensure greater control during pull away

 **WARNING: If the steering wheel is not in a straight ahead position, extreme caution must be taken during pull away as there is an increased chance of spinning the vehicle.**

Spinning wheel pull away process

1. Depress the brake pedal to hold the vehicle stationary.
2. Release the brake pedal and then rapidly depress the accelerator pedal past the kickdown position. The vehicle will accelerate dramatically, spinning the rear wheels.

 **NOTE:** To abort spinning wheel pull away, release the accelerator pedal or depress the brake pedal.


 **NOTE:** During spinning wheel pull away in automatic mode, the vehicle will carry out automatic gear shifts, and continue spinning the rear wheels until the process is aborted or grip levels become too high to allow for wheel spin. If manual gear shifts are made, the wheels will continue to spin if optimum engine speed is maintained and grip levels allow.


Driving Controls


Handling and Powertrain Controls

Pit lane pull away

Pit lane pull away is designed to offer close to maximum acceleration from a standing start.

 **WARNING: Do not initiate pit lane pull away unless on a track. Before initiating pit lane pull away, ensure that all doors and service covers are closed, and the prevailing conditions are suitable for performing dramatic acceleration maneuvers.**

 **NOTE:** Pit lane pull away can be operated in either automatic or manual mode and any powertrain or chassis mode.


 **NOTE:** Pit lane pull away can be aborted at any point by carrying out any of the following actions:

- Applying the brakes
- Releasing the accelerator pedal

 **NOTE:** Pit lane pull away is only available if the following conditions are met:

- Engine coolant at normal operating temperature
- Atmospheric pressure is sufficient for normal engine performance

- Vehicle is stationary and on level ground
- Launch control is inactive
- First gear is selected
- Parking brake is disengaged
- Steering wheel should be in a straight ahead position to ensure greater control during pull away

 **WARNING: If the steering wheel is not in a straight ahead position, extreme caution must be taken during pull away as there is an increased chance of spinning the vehicle.**

Pit lane pull away process

1. Ensure the steering wheel is in a straight ahead position.
2. Depress the brake pedal firmly with your left foot and select first gear.
3. With your left foot remaining on the brake pedal, press and hold the accelerator pedal down with your right foot until desired engine speed is reached.

The vehicle will build engine torque and preload the driveline.

4. Release the brake pedal with your left foot and the vehicle will pull away at maximum acceleration for the chosen accelerator pedal position.

 **NOTE:** To abort pit lane pull away, release the accelerator pedal or depress the brake pedal.

Driving Controls

Race Mode

Race mode overview

Race mode is available to make the most of your vehicle in a race or track environment.

WARNING: Ensure you are aware of the full performance potential that can be expected from your McLaren Senna at all times and in particular when using Race mode, where ESC interventions are reduced.

WARNING: Do not initiate Race mode unless on a track. Race mode must not be used on any public road under any circumstances. Before initiating Race mode, ensure all doors and service covers are closed. Also ensure that the prevailing track conditions are suitable for Race mode.

WARNING: When Race mode is activated, the risk of the vehicle skidding or the drive wheels spinning is increased. Adapt your driving style to account for this and also to suit track conditions.

WARNING: Take great care when driving over ramps, protruding features, uneven or rough ground when in Race mode as severe damage to the underside of your vehicle may occur.

Activate Race mode

Before Race mode can be activated the following preconditions must be met:

- Vehicle stationary with parking brake applied
- Engine running
- Neutral gear selected
- Driver's doors closed




Press and hold the RACE button for 2 seconds.

An audible warning will sound and a disclaimer will appear on the Folding Driver Display.

Driving Controls

Race Mode

Press the RACE button to accept the disclaimer.

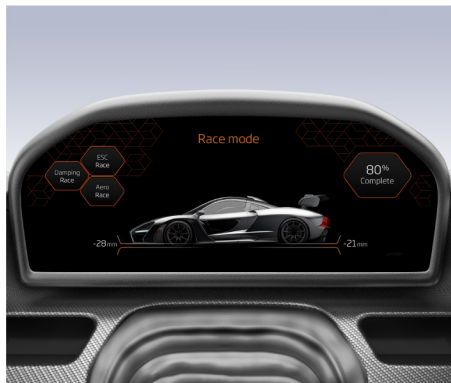

The Race mode transition screen will be displayed on the Folding Driver Display for approximately 60 seconds. During this time the vehicle will automatically check and adjust various settings, to optimize the vehicle for race use, including:

- Vehicle ride height
- Active aero calibration
- Electronic stability control intervention reduced

WARNING: If the driver's door is opened during the transition to Race mode the process will continue for all settings apart from vehicle ride height. The vehicle ride height will remain at the same position as it was before the driver's door was opened and therefore may not have fully lowered to the optimum race setting.

- i** NOTE: The vehicle will be immobilized and cannot be driven during the transition to Race mode.
- i** NOTE: If the ignition is switched off while the vehicle is in Race mode, the disclaimer must be accepted again the next time the ignition is switched on. Press the RACE button before the vehicle can be driven.
- i** NOTE: During an ignition off-on cycle when in Race mode, the Race mode can be canceled by pressing the Active button.
- i** NOTE: Manual ride height adjustments using vehicle lift is not possible when in Race mode.

Deactivate Race Mode


Before Race mode can be deactivated, the following preconditions must be met:

- Vehicle stationary with parking brake applied
- Engine running
- Neutral gear selected
- Driver's doors closed



Press and hold the RACE button for 2 seconds.

Driving Controls Race Mode

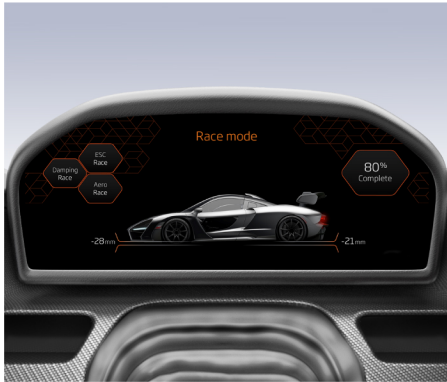

The Race mode transition screen will be displayed on the Folding Driver Display for approximately 60 seconds. During this time the vehicle will automatically check and adjust various settings, to return the vehicle to road use, including:


- Vehicle ride height
- Active aero calibration



NOTE: The vehicle will be immobilized and cannot be driven during the transition from Race mode.

Instruments

When Race mode is activated, the Folding Driver Display changes to a view similar to that of a race car.

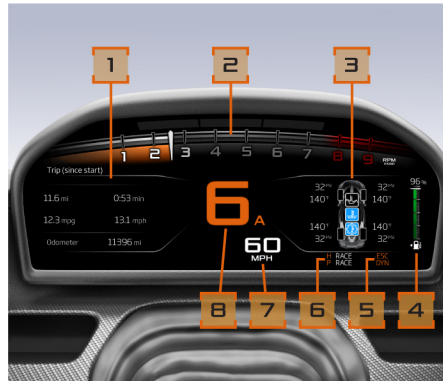

1. Home screen display
2. Tachometer
3. Vehicle warning status
4. Fuel level
5. Electronic stability control (ESC) mode display
6. Handling and powertrain mode display
7. Speedometer
8. Gear selected

Driving Controls

Race Mode

Vehicle settings

Active Aero settings are linked to the vehicle mode and are automatic. These settings cannot be manually adjusted.


Driving Controls


Driving Safety Systems

General

This section contains information about the following safety systems:

- Anti-lock braking system (ABS)
- Brake assist system
- Brake disc wiping
- Hill hold
- Brake-steer
- Electronic stability control (ESC)
- Active rear wing
- Active front aero blades


 **WARNING:** The risk of an accident increases when driving quickly, especially when cornering, on wet and icy roads. Always maintain a safe distance to the vehicle in front. Always adapt your driving style to suit the road and weather conditions and maintain a sufficient distance from other road users and objects on the road.

 **NOTE:** In winter conditions, the maximum effect of the anti-lock braking system, brake assist system and electronic stability control can only be achieved if you use winter tires, with snow socks where they are necessary.

Anti-lock braking system (ABS)


The anti-lock braking system prevents the wheels from locking when you brake. This allows the vehicle to be steered during braking maneuvers.

The anti-lock braking system works from a speed of approximately 5 mph (8 km/h) upwards, regardless of road surface conditions. It works on slippery surfaces, even when you brake gently.

 **WARNING:** Do not depress the brake pedal repeatedly in quick succession (pumping). Depress the brake pedal firmly and evenly. Pumping the brake pedal reduces the braking effect.

If the anti-lock braking system operates during braking, the warning light flashes, and the brake pedal pulses as this happens.

When the anti-lock braking system is activated, maintain the force on the brake pedal until the braking situation is over.

 **WARNING:** Always adapt your driving style to suit the prevailing road and weather conditions and maintain sufficient distance from other road users and objects on the road.

Driving Controls

Driving Safety Systems

Anti-lock braking system (ABS) status light



If there is a malfunction with the system, the status light will illuminate. Do not drive your vehicle, contact your McLaren Retailer as soon as possible.



WARNING: If the anti-lock braking system malfunctions, brake assist system and electronic stability control are also deactivated. If the anti-lock braking system malfunctions, the wheels could lock when you brake. This may increase the stopping distance and impair your ability to steer.

Brake assist system

Brake assist system operates in emergency braking situations. If you depress the brake pedal quickly, the brake assist system automatically increases the force applied to the brakes and thus shortens the stopping distance.

Continue to depress the brake pedal firmly until the emergency situation is over, the anti-lock braking system prevents the wheels from locking.

When you release the brake pedal, the brakes will work as normal. The brake assist system is deactivated.



WARNING: If the brake assist system malfunctions, the brakes will still operate. However, the braking force is not automatically boosted and this may increase the stopping distance.

Brake disc wiping

Brake disc wiping operates automatically when the windscreen wipers are switched on. It prevents moisture build up on the brake discs during periods of heavy rain, improving braking performance.

Driving Controls

Driving Safety Systems

Hill hold control

If the brake pedal is applied to hold the vehicle on a hill, this function will continue to apply the brakes for 2 seconds after the pedal is released to assist a smooth start.

Brake-steer

Brake steer offers the benefits of a torque vectoring differential, but is integrated into the braking system reducing weight and providing excellent speed of response.

Torque vectoring gives the differential the ability to change the amount of power that is sent to each of the rear wheels to provide optimum stability and traction.

If the system detects that the vehicle is starting to understeer through a corner, the inside rear brake is gently applied. This helps to increase the yaw rate of the vehicle, making the vehicle feel more resistant to understeer. The lateral 'g' force is also increased giving better handling characteristics.

If the driver uses too much throttle exiting a corner, the inside rear wheel increases speed, which without brake steer could cause the vehicle to become unstable. In this situation, brake steer will again gently apply the brake on the inside rear wheel, thereby restoring traction and stability.

Electronic stability control (ESC)

Electronic stability control (ESC) monitors driving stability and traction between the tires and the road surface.

Electronic stability control detects when a wheel starts to spin or the vehicle starts to skid and stabilizes the vehicle by braking individual wheels, and/or limiting the engine power output. This also assists when pulling away on wet or slippery road surfaces and stabilizes the vehicle when braking.



NOTE: Electronic stability control only functions properly if wheels with the recommended specification tires are used.

Electronic stability control is activated automatically as soon as the engine is started.



WARNING: If the electronic stability control warning illuminates, do not deactivate electronic stability control. Adapt your driving style to suit road and traffic conditions.

Traction control system

The traction control system is an integral part of electronic stability control.

Driving Controls

Driving Safety Systems

The traction control system reduces engine torque to prevent the wheels from spinning. If additional intervention is required to stop the wheels from spinning, the vehicle will apply the rear brakes individually. The traction control system brakes individual drive wheels to prevent them from spinning. This means that the vehicle can accelerate on slippery surfaces.

⚠ WARNING: The traction control system cannot reduce the risk of an accident if you drive too fast.

Deactivating electronic stability control (ESC)

⚠ WARNING: When electronic stability control is deactivated, the risk of the vehicle skidding is increased. Adapt your driving style to suit road and traffic conditions.

⚠ WARNING: Do not deactivate electronic stability control unless on a track and prevailing conditions are suitable.

i NOTE: When you deactivate electronic stability control, the following conditions result:

- The 'ESC OFF' warning light illuminates
- The light on the 'ESC OFF' button illuminates

- Electronic stability control no longer improves driving stability
- The engine's torque is no longer limited and the drive wheels could spin
- The anti-lock braking system remains activated

Electronic stability control (ESC) Dynamic modes

The level of electronic stability control can be adjusted to various dynamic modes to suit the driver's requirements and is dependent on the handling mode currently active.

Electronic stability control Dynamic modes can be selected at any vehicle speed.



Electronic stability control - On

The electronic stability control is ON by default.

Electronic stability control - Dynamic mode

1. Select Comfort, Sport or Track handling mode.
The electronic stability control is ON by default.
2. Press the ESCOFF button briefly to activate Dynamic mode.

ESC DYN will be displayed on the Folding Driver Display.

Driving Controls


Driving Safety Systems

ESC Off

1. Select Comfort, Sport or Track handling mode.
2. If not already in a ESC Dynamic mode, press the **ESC OFF** button briefly to activate an ESC Dynamic mode.
3. Press and hold the ESC OFF button for 2 seconds, followed by a confirmation press again within 5 seconds to deactivate the electronic stability control.

ESC OFF will be displayed on the Folding Driver Display and the light on the ESC OFF button will illuminate.

Variable Drift Control

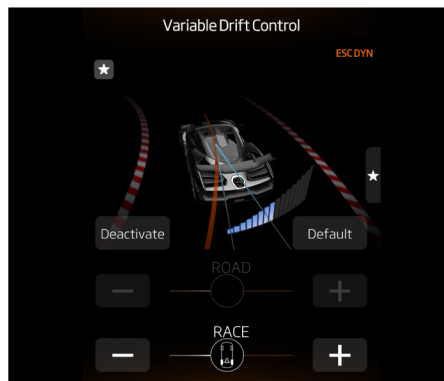

The amount of drift permitted by the ESC in Dynamic modes can be adjusted.

When in Dynamic mode or ESC off, Variable Drift Control can be accessed on the Central Display. This allows the driver to select the precise level of electronic stability control support that they would like.

Select Traction control from the Home menu to access the traction control settings.

Select + or - to increase or decrease the amount of drift to suit your preference.

Select ★ to save and manage favorite settings.

To reset to factory settings, select **Default**.

Reactivating electronic stability control (ESC)

When electronic stability control is reactivated, the electronic stability control OFF warning light on the Folding Driver Display extinguishes.

i **NOTE:** Electronic stability control is automatically reactivated when the ignition is next switched off and on again.

Reactivation procedure



Perform any of the following to reactivate electronic stability control:

Driving Controls

Driving Safety Systems

- Press the **ESC OFF** button briefly, the light on the button will be extinguished.
- Change the mode on the handling control to Non-Active.
- Switch the ignition off and then switch on again.

Active aero



Press the **ACTIVE** button to enable the active dynamics panel.

Active aero requires a minimum operating temperature of 36°F (2°C) and minimum speed of 15 kph (10 mph) to actuate. If these conditions are not met an error message may be shown on the Folding Driver Display to state active aero is not available.

At speeds above 93 mph (150 km/h) the active rear wing and active front aero blades adjust dynamically dependent on the vehicle's requirements. This enhances vehicle's high speed stability with increased aerodynamic drag. The active rear wing and active front aero blades may actively operate at speeds below 93 mph (150 km/h) during sudden braking or when high vertical or longitudinal G forces are measured.

Self-test

After each full ignition cycle, the first time the engine is started and the vehicle has driven away, the active rear wing and active front aero blades self-test, adjusting and then returning slowly to their initial position.



WARNING: If the active aero fails the self-test, a message will appear in the Folding Driver Display. Contact your McLaren Retailer.

Active rear wing



WARNING: The driver is responsible for ensuring that no persons, or any part of their body can be trapped during active rear wing movement.

Driving Controls

Driving Safety Systems

The active rear wing is located at the rear of your McLaren and adjusts dynamically, dependent on the vehicle's requirements. A self-test facility that initiates after every full ignition on/off cycle.

i NOTE: The active rear wing uses hydraulic pressure and will only operate with the engine running.

i NOTE: The active rear wing system is automatically deactivated at low transmission oil temperatures. A warning message will appear on the Folding Driver Display if operation of the active rear wing is selected. The active rear wing system will become active when the transmission oil temperature rises.



The active rear wing adjusts dynamically, dependent on the vehicle's requirements. This enhances vehicle stability with increased aerodynamic drag. The active rear wing will operate at any vehicle speed.

i NOTE: The active rear wing may automatically adjust to reduce aerodynamic drag in favor of straight line speed if the vehicle is traveling in a straight line at full throttle.

Active rear wing operation

During hard braking at high speed, the active rear wing automatically adjusts its position to provide maximum braking assistance.

Once the pressure on the brake pedal is released, the active rear wing will return to its previous position.

The active rear wing may actively operate, even if the brake pedal is not depressed, to maintain vehicle stability under the following conditions:

- When high longitudinal G forces are measured, for example, when the accelerator pedal is suddenly released.
- When high vertical G forces are measured, for example, when traveling over the crest of a hill.

! **WARNING:** When activated, the active rear wing will temporarily block the view through the interior mirror. In this case, monitor the traffic behind you through the exterior mirrors.

Drag reduction system (DRS)

! **WARNING:** If a DRS fault occurs reduce speed to below 62 mph (100 km/h) and the DRS system self-tests.

Driving Controls

Driving Safety Systems

⚠ WARNING: If the DRS system fails the self-test, a message will appear in the Folding Driver Display. Contact your McLaren Retailer.


DRS is a system which minimizes aerodynamic drag when the vehicle is not grip limited, while correcting aerodynamic balance for straight-line driving. This is an automated system which only operates when the driver is at full throttle, the steering wheel is in the straight ahead position and no braking pressure being applied. As soon as the vehicle detects a corner approaching (brake pressure, reduced throttle or steering angle change) the vehicle will automatically cancel DRS mode. If the driver would like to cancel DRS then lifting from the throttle, braking or steering will cancel DRS mode.

ECO mode

When cruise control is activated in Non-Active, Comfort or Sport mode the active rear wing will enter Eco mode to decrease aerodynamic drag.

Active front aero blades

There is a pair of active front aero blades, one located in each of the front air ducts.

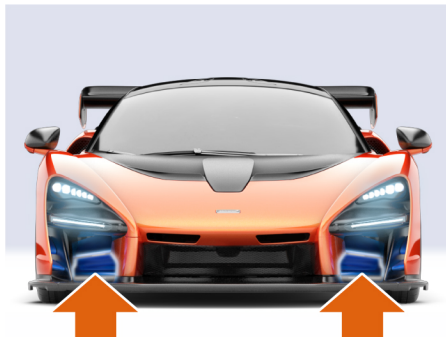

The angle of the active front aero blades is automatically adjusted up to 40°, altering the airflow below the vehicle, increasing downforce when required to enhance stability and handling. The active front aero blades will not deploy until the vehicle has driven away.

If an Active Aero error is reported on the Folding Driver Display, check for debris which may have collected, restricting the movement of the active front aero blades, before contacting your McLaren Retailer.

Tire pressure monitoring system (TPMS)

Prior to every time the vehicle is to be driven, each tire should be checked when cold and inflated/deflated to the inflation pressure recommended on the tire pressure label. (If your vehicle has tires of a different size than the size indicated on the tire pressure label, you should determine the proper inflation pressure for those tires).

In certain circumstances it is possible that the tire pressure monitoring system (TPMS) pressure warning will display without the loss of air from the tire. This may be due to temperature variations between the locations where the tire pressure was set and where the vehicle is driven. For example setting pressures in an air conditioned or heated garage and then driving the vehicle outside may induce a tire pressure warning after a short period of driving. The warning may also display when extreme ambient temperature variations occur or during seasonal temperature changes.

Driving Controls

Driving Safety Systems

⚠ WARNING: Never ignore a tire pressure warning. Check tire pressures immediately and if necessary contact your McLaren Retailer.

Tire pressure monitoring system (TPMS) overview



The tire pressure monitoring system warns you when the pressure drops or the temperature increases above an acceptable level in one or more of the tires.

The system monitors the tire pressures and temperatures in each tire using sensors located in each tire valve and a receiver located within the vehicle. Communication between the sensors and the receiver is via radio frequency (RF) signals.

i NOTE: The tire pressure monitoring system can suffer interference if you are operating radio transmitting equipment (e.g. radio headphones, two-way radios) in or near the vehicle.

Tire pressure monitoring system (TPMS) operation



If a low or high tire pressure or high tire temperature is detected, the tire pressure monitoring system warning light will illuminate along with an associated error message on the Folding Driver Display.

Stop the vehicle as soon as possible, check all your tires and inflate them to the recommended pressure, see Tire pressures, page 6.33. The warning light will be extinguished once the tires have been inflated to the correct pressure.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

⚠ WARNING: TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure warning light. Over-inflation can also have an adverse effect on tire tread wear and vehicle handling.

Each tire should be checked weekly when cold and inflated/deflated to the inflation pressure recommended on the tire pressure label.

Navigate through the 'Vehicle Info' screen on the Folding Driver Display to view the current tire pressures, see Vehicle info, page 3.06.

Driving Controls

Driving Safety Systems



The display shows the pressures of each of the four tires. If the pressure figure appears in green, no action is required. If it appears as red text, inflate the associated tire to the correct pressure as soon as possible.

Inspect the tire(s) for any possible causes of reduced tire pressure.

WARNING: The tire pressures indicated on the Folding Driver Display will be more accurate with a pressure gauge. The tire pressure monitoring system is not a substitute for manually checking tire pressures or checking for wear and damage. The system only provides a low tire pressure warning and does not re-inflate the tires.

The tire pressure monitoring system cannot alert you to damage to a tire. Regularly check the condition of your tires.

WARNING: If low pressure warnings occur frequently, have the tires checked at your McLaren Retailer. Driving on an under-inflated tire will cause the tire to overheat and can lead to tire failure.


i ENVIRONMENTAL: Under-inflated tires reduce fuel efficiency and tire tread life, and may affect the vehicle's handling and braking characteristics.

i ENVIRONMENTAL: Check tire pressures at least every 7 days.

Tire Temperature Monitoring System operation

If a high tire temperature is detected, the Tire Temperature Monitoring System will display an error message on the Folding Driver Display.

Navigate through the 'Vehicle Info' screen on the Folding Driver Display to view the current tire temperatures, see Vehicle info, page 3.06.

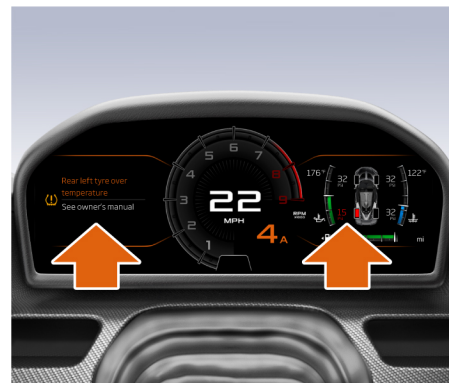

Driving Controls

Driving Safety Systems

This shows the current temperature of each of the four tires. If the temperature appears in blue, the tires have not yet warmed up to optimum operating temperature. If the temperature appears in green, no action is required. If it appears in red, the safe operating temperature of the tires has been exceeded. Reduce speed or stop the vehicle until the temperatures are at a safe level, i.e. temperatures are displayed in green.

Inspect the tire(s) for any possible causes of increased tire temperature.

Driving Controls

Cruise Control

Overview


⚠ WARNING: Pay particular attention to road and traffic conditions, when cruise control is activated, and always travel at a speed which is safe for the current conditions.
Never use cruise control on winding or slippery roads or when visibility is poor, e.g. in fog, heavy rain or snow.

Cruise control allows the driver to maintain a constant speed without using the accelerator pedal. This is useful on motorway journeys where a constant speed can be maintained for long periods.



All cruise control functions are operated by the cruise control stalk, positioned on the right of the steering column.

Using cruise control

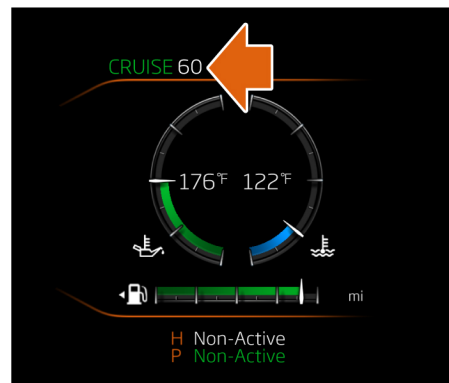


Accelerate to the desired speed and push the stalk up briefly, to activate cruise control. The set speed will appear on the Folding Driver Display.

i NOTE: Cruise control will only operate at speeds in excess of 20 mph (30 km/h), in third or higher gear.

Speed can be increased at any time by pressing the accelerator pedal. Once the accelerator pedal is released the vehicle will return to the cruise control speed.

Driving Controls

Cruise Control


 **WARNING:** Always be aware that cruise control is engaged and do not override cruise control for extended periods. Releasing the accelerator in these circumstances could lead to the vehicle not decelerating at the rate you expect.

Canceling cruise control




Briefly press the cruise control stalk away from you.

Cruise control is canceled. The indicator on the Folding Driver Display extinguishes but the last speed set remains stored.

 **NOTE:** The last speed stored is cleared when you switch off the engine.

Cruise control is also canceled if the foot brake is pressed, if neutral is selected or if active speed limiter is selected.

 **NOTE:** Cruise control is canceled automatically if electronic stability control detects wheel spin, vehicle skid or if electronic stability control is switched off.

Driving Controls

Cruise Control

Increasing cruise control speed



- A brief press of the stalk upwards will increase the vehicle speed in 1 mph (1 km/h) increments (depending on the units selected, see Distance & Speed unit, page 4.09);
- or press and hold the stalk upwards until the desired speed is reached, then release the stalk;
- or accelerate to the new desired speed and push the stalk up.

Reducing cruise control speed




- A brief press of the stalk downwards will decrease the vehicle speed in 1 mph (1 km/h) decrements (depending on the units selected, see Distance & Speed unit, page 4.09);
- or press and hold the stalk downwards, the vehicle will decelerate, release the stalk when the desired speed has been reached.

i NOTE: If you decelerate using the cruise control stalk, the gearbox may shift down to increase the rate of deceleration. Downshifting manually using the gear change paddles will not disengage cruise control.

Driving Controls

Cruise Control

Resuming a stored speed

 **WARNING:** Only resume the stored speed if it is appropriate for the current road and traffic conditions. Sudden acceleration could endanger yourself and others.





Pull the cruise control stalk briefly towards you. Cruise control will adjust the vehicle's speed to the last speed stored.


Driving Controls

Active Speed Limiter (ASL)

Setting an upper speed limit

 **WARNING:** It is the driver's responsibility to keep within proper speed limits.

 **WARNING:** The active speed limiter (ASL) feature may allow the vehicle to exceed the upper speed limit in certain situations, for example when descending steep gradients.


 **NOTE:** ASL can be activated when the vehicle is stationary. The upper speed limit will be set to a default speed of 20 mph (30 km/h).

The ASL control allows the driver to set an upper speed limit.


Selecting a speed



1. Accelerate or decelerate to the maximum permitted speed and push the stalk down briefly, to activate Active Speed Limiter (ASL).

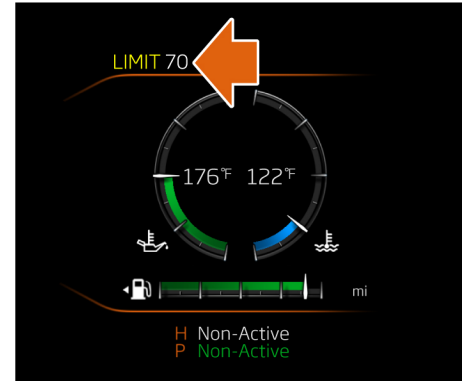

2. The upper speed limit will appear on the Folding Driver Display.

 **NOTE:** The ASL can be overridden by depressing the throttle pedal fully beyond the pressure point.

Driving Controls

Active Speed Limiter (ASL)

Canceling Active Speed Limiter (ASL)



To cancel Active Speed Limiter (ASL) briefly press the stalk away from you. The indicator on the Folding Driver Display will extinguish.

Driving Controls

Running In

Running in

Observe the following running in instructions when the vehicle is new or if any of these components have been replaced.


Engine and gearbox


For the first 625 miles (1,000 km):


- drive at varying road and engine speeds.
- do not drive faster than the maximum speed limit of the road, or 150 mph (240 km/h).
- do not use your vehicle on a track.
- avoid heavy loads on the engine (driving at full throttle).
- avoid driving at engine speeds less than 2,000 rpm.
- avoid running at constant speed and load for long periods.
- avoid using kickdown.
- do not downshift for additional engine braking.
- avoid stopping the engine within 2 minutes of high speed and high load running.

- avoid idling the engine for more than 10 minutes.

After the 625 miles (1,000 km) running in period, you may gradually use the vehicle's full performance.

 **NOTE:** Failure to observe the engine and gearbox operating limits during the running in period may lead to premature wear or damage.

 **NOTE:** These running in instructions also apply for the first 625 miles (1,000 km) after the engine or transmission has been replaced.

 **ENVIRONMENTAL:** This advice will assist in improving fuel economy and should be adopted as normal driving practice even after the running in period.

Brakes

New brakes require an initial bedding in period. Avoid heavy braking situations for the first 625 miles (1,000 km).


Normal/road use

- Allow the engine to warm up before driving at high engine speeds and high loads. Limit engine speed to 5,000 rpm until the engine reaches full operating temperature.
- Avoid stopping the engine within 2 minutes of high speed/high load running.
- Avoid idling the engine for more than 10 minutes.

Driving Controls

Running In

Track use


 NOTE: Do not use the vehicle on a track during the running in period.


Before you use your vehicle on the track, consult your McLaren Retailer. McLaren recommend that your vehicle is inspected before and after track use.

Driving Controls


Refueling


Filling with fuel

 **WARNING:** Fuel is highly flammable. Fire, naked flames, smoking and using a cell phone are prohibited when handling fuels. Switch off the engine before refueling.

 **WARNING:** Fuel and fuel vapors can damage your health. Do not inhale fuel vapors or allow fuel to come into contact with skin or clothing.

The fuel filler flap is located at the rear on the left-hand side. It is locked or unlocked automatically when the vehicle is locked or unlocked.

 **NOTE:** Do not attempt to force the filler flap open if the vehicle is locked. You may damage the flap and its locking mechanism.

 **NOTE:** The fuel filler flap will remain locked if the engine is running.

Filling at the gas station

1. Switch off the engine.



2. Press the rear edge of the fuel filler flap, the latch will release.
3. Open the flap.

 **NOTE:** Your vehicle is not fitted with a fuel filler cap.

4. Insert the nozzle into the fuel filler and dispense fuel. For fuel recommendations, see Recommended fuel, page 2.53.
5. Do not continue to fill the tank after the pump nozzle switches off.
6. Remove the nozzle.


7. Close the fuel filler flap, you will hear the latch engage.

Filling with the fuel funnel

1. Switch off the engine.



2. Press the rear edge of the fuel filler flap, the latch will release.
3. Open the flap.


 **NOTE:** Your vehicle is not fitted with a fuel filler cap.

Driving Controls

Refueling




4. Collect the fuel funnel from the tool kit, see Fuel funnel, page 6.10.
5. Insert the fuel funnel fully into the filler neck.
6. Insert the nozzle into the fuel funnel and dispense fuel. For fuel recommendations, see Recommended fuel, page 2.53.
7. Do not overfill.

 **WARNING: Take care to avoid spillages and overfilling. Ensure any spillages are cleaned immediately.**

8. Remove the nozzle.


9. Remove the fuel funnel, clean thoroughly and store in the tool kit.
10. Close the fuel filler flap, you will hear the latch engage.


Recommended fuel

 **NOTE:** Federal law requires that gasoline octane ratings can be posted on the pumps. The octane rating shown is an average of Research Octane Number (RON) and Motor Octane Number (MON) rating.

For maximum engine performance the use of 94 AKI rated fuel is recommended.

In areas where 94 AKI rated fuel is unavailable, use unleaded premium grade gasoline with a minimum octane rating octane rating of 92 AKI.

 **NOTE:** Information relating to the quality of fuel being dispensed is displayed on the filling pump.

 **NOTE:** The likelihood of engine wear or damage is increased if fuel does not meet the requirements of EN 228 for unleaded gasoline or if fuel additives are used.

Damage caused by use of incorrect fuel is not covered by the vehicle warranty. Do not use leaded fuel, doing so may damage the catalytic converter.

Driving Controls

Refueling

No use of methanol is allowed. In areas where 94 AKI rated fuel is unavailable, use unleaded premium grade gasoline with a minimum octane rating of 92 AKI. Fuel with an ethanol content up to E10 maximum is permitted.



NOTE: This vehicle is not suitable for use with fuels containing more than 10% Ethanol.

Do not use E85 fuels (85% Ethanol content). This vehicle is not fitted with the equipment necessary for the use of fuels containing more than 10% Ethanol. If E85 fuels are used, serious damage will occur to the engine and fuel system.



NOTE: If the fuel tank is accidentally filled with the incorrect type of fuel, do not start the engine, and seek qualified assistance.

Driving Controls

Winter Driving

Winter driving

It is recommended that you have your vehicle inspected at your McLaren Retailer at the onset of winter. This service includes the following:


- Checking the antifreeze/anti-corrosion concentration
- Adding concentrated cleaning agent to the windscreen washer system
- Checking the battery
- Changing the tires


Winter tires


Use winter tires below 45°F (7°C) and on snow or ice-covered roads. The maximum effect of the anti-lock braking system and electronic stability control systems is only achieved with these tires.

Use winter tires of the same make and tread on all wheels to maintain safe handling characteristics. Change the tire type in 'Vehicle settings' on the Central Infotainment Touchscreen, see Tire type, page 4.17.

Winter tires are directional, not asymmetrical, and so must be fitted in accordance with the directional markings on the sides of the tires.

 **NOTE:** Only winter tires specified by McLaren should be used.

 **WARNING:** Replace winter tires with a tread depth of less than 4 mm immediately. They are not suitable for winter use because they do not provide sufficient grip, and could cause an accident.

 **NOTE:** A wheel change must be carried out at your McLaren Retailer. The vehicle could be damaged if it is jacked up incorrectly.

Consult your McLaren Retailer for advice and information regarding the maximum speed specified for the winter tires fitted. Restrict the maximum speed of the vehicle using the ASL system, see Setting an upper speed limit, page 2.48.

Snow socks

McLaren recommend that you only use snow socks which have been approved for McLaren vehicles. If you are intending to fit snow socks, bear the following points in mind:

- Only ever fit snow socks to both rear wheels.

- Comply with the manufacturer's installation instructions.

Do not exceed the maximum permissible speed as indicated on the snow sock packaging. Remove the snow socks as soon as possible if you are no longer driving on snow-covered roads.

Instruments

Overview.....3.02

Overview.....	3.02
Tachometer.....	3.02
Speedometer.....	3.03

Folding Driver Display.....3.04

Overview.....	3.04
Trip info.....	3.05
Vehicle info.....	3.06
Phone.....	3.08
Media.....	3.09
Navigation.....	3.10
Messages.....	3.10
Display window.....	3.14
Gear position indicator.....	3.15
Handling and powertrain mode display.....	3.15
Electronic stability control (ESC) mode display.....	3.16
Oil temperature.....	3.16
Coolant temperature.....	3.17
Fuel level and range.....	3.17

Instruments Overview

Overview

The Folding Driver Display is activated when the ignition is switched on, see Switching on the ignition, page 2.03.

WARNING: No messages will appear on the Folding Driver Display if there is a fault with the screen or vehicle electrics. Contact your McLaren Retailer immediately. Use of the vehicle in these circumstances can be dangerous.

Tachometer



The tachometer display appears in the center of the Folding Driver Display whenever it is open in Full Display Mode. See Driver Display deployment mode, page 4.15 for available options.

The red number on the display indicates the engine's maximum RPM.

When Sport or Track powertrain or handling modes are selected, the tachometer style will change to suit the selected mode. See Display window, page 3.14.

NOTE: The maximum RPM is dynamic and will be reduced under certain conditions, for example, if the engine oil is below normal operating temperature or if neutral gear is selected.

NOTE: Do not operate the engine at or near its maximum speed for a significant length of time. The fuel supply is cut off to protect the engine when the maximum RPM is reached.

Shift lights

When Track powertrain or handling mode is selected, shift lights will be displayed under hard acceleration. The shift lights are arranged in three blocks; a green block, red block and blue block. Each block illuminates as engine RPM increases. Accelerating the engine speed beyond the point that the blue block is illuminated is not conducive to rapid acceleration.

Instruments Overview

Speedometer



The speedometer is situated centrally on the Folding Driver Display whenever it is open in Full Display Mode. See Driver Display deployment mode, page 4.15 for available options.

When Sport or Track powertrain or handling modes are selected, the speedometer style will change to suit the selected mode. See Display window, page 3.14.

i NOTE: The speedometer changes from mph to km/h when the units are changed from miles to kilometers, see Distance & Speed unit, page 4.09.

i NOTE: The vehicle speed will constantly display '0' if there is a system communication fault. A warning message will appear on the Folding Driver Display to inform you of the fault. Adapt your driving style while this fault exists, you are responsible for the vehicle's speed at all times. Contact your McLaren Retailer.

Instruments

Folding Driver Display

Overview

Warnings appear in a pop-up window on the Folding Driver Display.

The stored messages can be viewed at any time when the ignition is on, see Messages, page 3.10.

⚠ WARNING: Operating and browsing menus whilst the vehicle is in motion could make you unable to observe road and traffic conditions and could cause an accident.

⚠ WARNING: Do not ignore warning messages, failure to take appropriate action may result in personal injury or damage to the vehicle.

Clock

The clock displays the current time. For more details see Regional settings, page 4.07.

Temperature

⚠ WARNING: Even if the temperature displayed is above freezing point, the road surface may still be icy. You should always adapt your driving style and speed to suit the weather conditions.

Temperature is the current outside temperature. There is a short delay before a change in outside temperature is displayed.

When the outside air temperature falls below 37°F (3°C), the frost warning message will be displayed and the temperature reading will change color after the message has been displayed.

When the outside temperature falls below 32°F (0°C), the ice warning will be displayed.

Menu



Navigation through the menu structure is achieved using the control stalk mounted on the left of the steering column.

The following categories are available:

- Trip info, page 3.05
- Vehicle info, page 3.06
- Phone, page 3.08
- Media, page 3.09
- Navigation, page 3.10

Navigate the menu

1. Move the control stalk up or down (**SCROLL + or -**) to highlight your choice.
2. Pull the stalk towards you (**FORWARD**) to enter your selection.
3. Then select the topic of interest from the list, move the control stalk up or down (**SCROLL + or -**) to highlight your choice.
4. Pull the stalk towards you (**FORWARD**) to move through to the next menu in the structure.
5. At the end of each structure there will be a display of information or a screen where a setting can be changed or information viewed.

Instruments

Folding Driver Display



6. When the function required is selected or a setting is made, pull the stalk towards you (FORWARD) to confirm.

Trip info




The Folding Driver Display can display the following trip data:

- Trip (since start), page 3.05
- Trip (long term), page 3.06

In order to reset the trip data to zero, select the required option from the menu and pull the stalk towards you (FORWARD) to confirm.

Trip (since start)

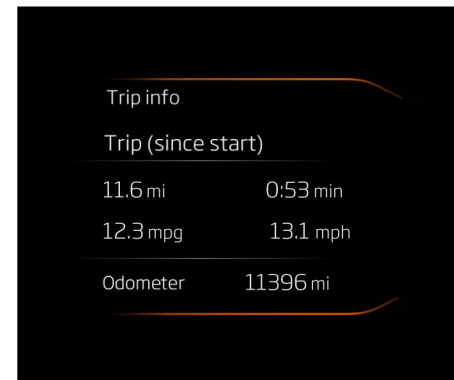

Displays distance, time, average fuel consumption and average speed for the current journey.

The information will also reset to zero when the engine is switched off for approximately 2 hours.

Instruments

Folding Driver Display

Trip (long term)




Displays distance, time, average fuel consumption and average speed since the last trip reset.

Odometer

The odometer is shown on each trip screen and displays the total distance the vehicle has traveled.

Vehicle info

Overview

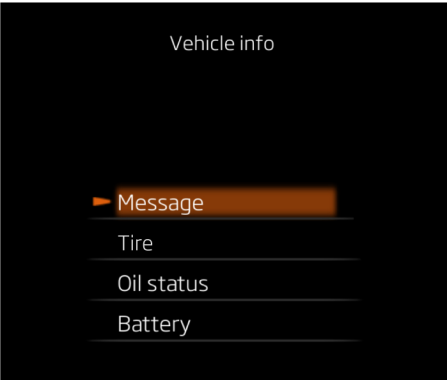

The following choices can be made from the Vehicle info screen.

- Message, page 3.06
- Tire, page 3.07
- Oil status, page 3.07
- Battery, page 3.07
- Servicing, page 3.08
- Vehicle identification, page 3.08

Message



If no error messages have been logged, the display will confirm this.


If any errors have been logged, the screen will display error messages with arrows to scroll through the messages.

See Messages, page 3.10 for details of possible messages and their meaning.

Instruments

Folding Driver Display


Tire

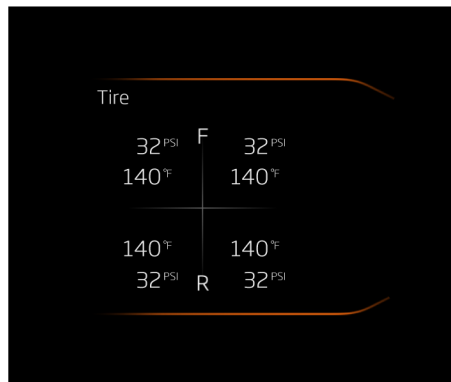

This shows the pressures and temperatures of each of the 4 tires. If the figures appear in white, no action is required. If they appear as amber or red text, have the tires inspected and pressures rectified as soon as possible.

Inspect the tire(s) for any possible causes of reduced pressure or increased temperature.


Oil status

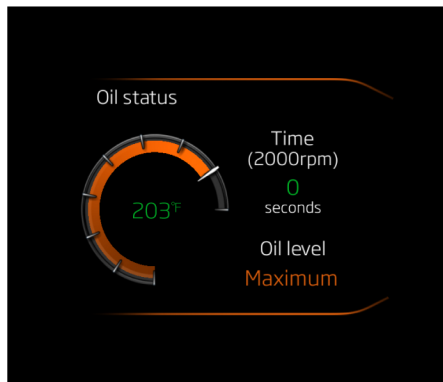

Displays a gage showing the level of oil, together with the oil temperature.

To check the engine oil level, see [Checking the engine oil](#), page 6.02.

Battery

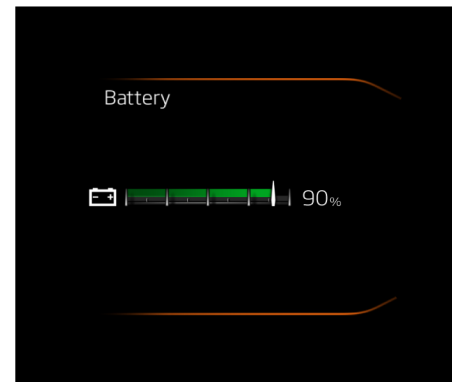

Displays a gage showing the battery charge status.


To charge the battery, see [Charging the battery](#), page 6.13.

To see how long the vehicle can be parked without the engine running or charging the battery, see [Parking days](#), page 2.02.

Instruments

Folding Driver Display

Servicing

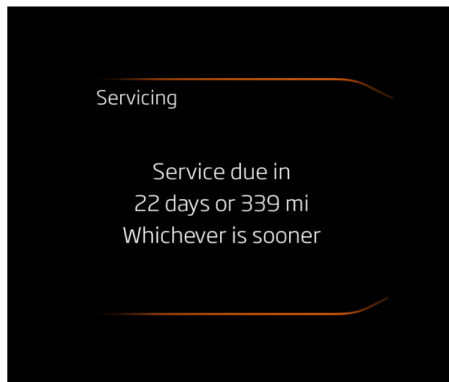


At approximately 30 days or 625 miles (1,000 km) before a service is due, the above display appears.

The message will then appear every time the ignition is switched on, with the time/distance figures reducing. Once the service has been carried out, the display will be reset by your McLaren Retailer.


If a service becomes overdue, the display will show the distance by which it is overdue.

Vehicle identification

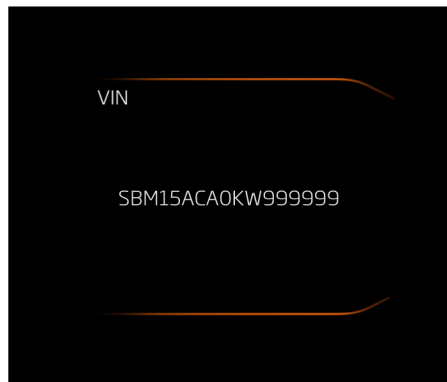

Displays the vehicle identification number (VIN).

Phone

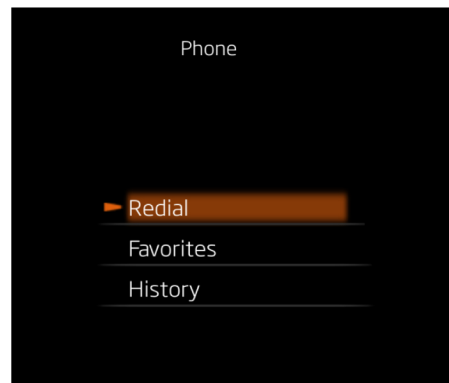

Pull the stalk towards you (**FORWARD**) to access further options.

The following options are available:

- Redial
- Favorites
- History


For more information on pairing and setting up a phone, see Phone, page 4.22.

Instruments

Folding Driver Display

i NOTE: The available options within the phone menu may depend on your model of phone and previous calls made or received while connected to your McLaren.

Media

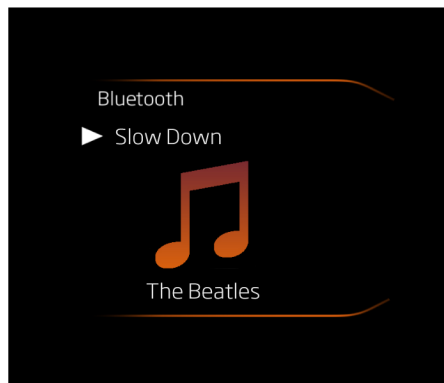

Details of the track or radio station currently playing will be displayed.

Pull the stalk towards you (**FORWARD**) to access further options.

The following options are available:

- Play
- Pause
- Next
- Previous


For more information on accessing media from different sources, see Media, page 4.28.

i NOTE: The available options within the media menu may depend on source which is currently playing.

Instruments

Folding Driver Display

Navigation

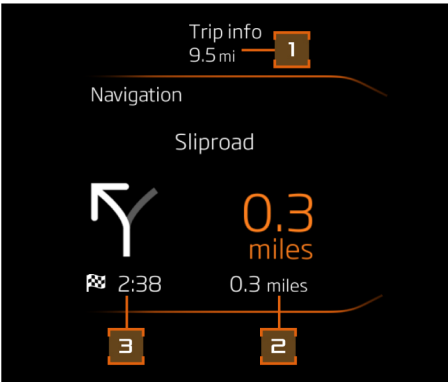

The current navigation turn-by-turn guidance will be displayed on the Folding Driver Display if route guidance has been started using the Central Infotainment Touchscreen.


For more information on setting a route and using the navigation feature, see Navigation, page 4.33.

The turn-by-turn display provides the following information:

1. Next turn direction and distance
2. Total distance to destination remaining

3. Total time to destination remaining

i NOTE: If no destination has been set using the Central Infotainment Touchscreen, only the compass and current road name will be displayed.

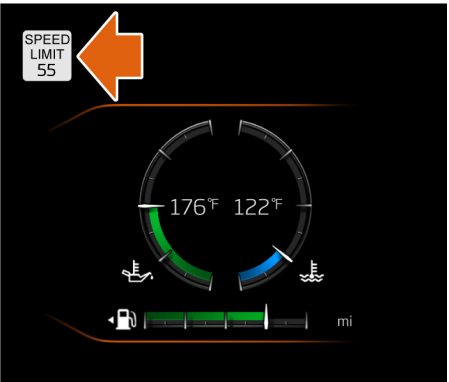

If available, the speed limit for the current road will be displayed on the Folding Driver Display.

i NOTE: The speed limit is for guidance only, always observe local speed limit information as there may be temporary or new speed restrictions in place.

Messages

The Folding Driver Display may show messages that refer you to the Owner's Handbook.

The icon displayed with the message indicates the severity.

i Information that does not require action to be taken.

i Information that requires action to be taken.

! Low risk fault information.

! High risk fault information.

i NOTE: Some messages may have different icons indicating that they are a fault with a specific function.

Some messages advise you to consult the Owner's Handbook. The table below indicates what you should do when one of these messages is displayed.

! **WARNING: Do not ignore warning messages, failure to take appropriate action may result in injury or damage to the vehicle.**

Instruments

Folding Driver Display

Message	Action
Brake fluid level low	Top up brake fluid, see Brake fluid, page 6.06.
Steering fluid level low	Top up the power steering fluid, see Power steering fluid, page 6.05.
Front left tire pressure low	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Front right tire pressure low	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Rear left tire pressure low	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Rear right tire pressure low	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Clutch over temperature	The vehicle has been subject to extreme operating conditions. This may be caused by excessive hill starts, repeated hard acceleration, driving slowly up steep hills for extended periods. As a result, the gearbox may limit engine torque. Stop the vehicle and allow the engine to idle in neutral for a few minutes.
Clutch temperature high	The vehicle has been subject to extreme operating conditions. This may be caused by excessive hill starts, repeated hard acceleration, driving slowly up steep hills for extended periods. As a result, the gearbox may limit engine torque. Stop the vehicle and allow the engine to idle in neutral for a few minutes.
ESC OFF not possible	The ESC deactivation conditions have not been met, see Electronic stability control (ESC), page 2.35.
Front left tire over inflated	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Front right tire over inflated	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.

Instruments

Folding Driver Display

Message	Action
Rear left tire over inflated	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Rear right tire over inflated	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
ESC Reduced not possible	The ESC reduction conditions have not been met. See Electronic stability control (ESC), page 2.35.
Launch Mode unavailable	The conditions to enable a Launch have not been met, see Launch control, page 2.25.
Launch Mode aborted	See Launch control, page 2.25.
Cruise control unavailable at current vehicle speed	See Using cruise control, page 2.44.
Front left tire over temperature	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Front right tire over temperature	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Rear left tire over temperature	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Rear right tire over temperature	Stop the vehicle and inspect wheels and tires, see Inspecting wheels and tires, page 6.32.
Battery management active	The vehicle is not be able to supply enough voltage and has activate power saving mode. The climate control and steering will operate with reduced effect. See Power saving mode, page 2.02.
Key battery critically low	See Replacing key fob battery, page 6.24.
Key battery low	See Replacing key fob battery, page 6.24.

Instruments

Folding Driver Display

Message	Action
Windscreen washer fluid low	Top up windscreen washer fluid, see Windscreen washers, page 6.07.
Airbrake system temporarily unavailable	See Active rear wing, page 2.38.
Airbrake temporarily inhibited	See Active rear wing, page 2.38.

Instruments

Folding Driver Display

Display window

The information displayed on the center section of the Folding Driver Display will change dependent on the mode selected. See:

- Non-Active/Comfort mode, page 3.14
- Sport mode, page 3.14
- Track mode, page 3.14
- Race mode, page 3.15

Non-Active/Comfort mode



The display window provides the driver with visual access to the control settings and current performance values of the vehicle. The Folding Driver Display, as indicated above, is displayed when the vehicle is in Non-Active/Comfort mode.

Sport mode



The display window provides the driver with visual access to the control settings and current performance values of the vehicle. The Folding Driver Display, as indicated above, is displayed when the vehicle is in Sport mode.

Track mode



The display window provides the driver with visual access to the control settings and current performance values of the vehicle. The Folding Driver Display, as indicated above, is displayed when the vehicle is in Track mode.

For more information regarding shift lights see Shift lights, page 3.02.

Instruments

Folding Driver Display


Race mode



The display window provides the driver with visual access to the control settings and current performance values of the vehicle. The Folding Driver Display, as indicated above, is displayed when the vehicle is in Race mode.

For more information regarding shift lights see Shift lights, page 3.02.

Gear position indicator

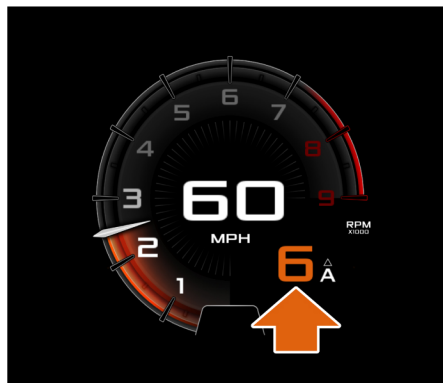


The gear indicator shows the current gear position selected: Neutral, Gear 1-7, or Reverse. The indicator will also show **A** or **M** depending on whether automatic or manual mode is selected.

The gear position indicator moves to the center of the Folding Driver Display, swapping position with the speedometer, when the vehicle is in Sport or Track mode. See Sport mode, page 3.14 and Track mode, page 3.14.

For more information, see Manual/automatic mode, page 2.17.

Handling and powertrain mode display

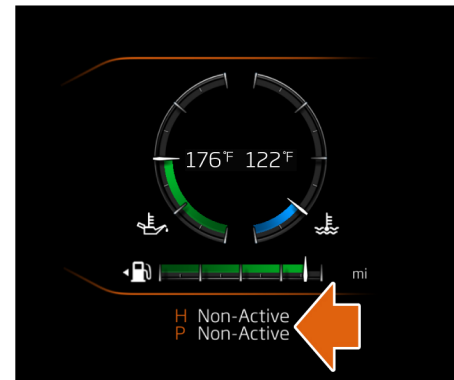


Confirmation that the **ACTIVE** button has not been pressed (Active Dynamics Panel is off), the handling and powertrain displays will both show Non-Active and will be displayed in white. The mode will not be implemented if all pre-conditions are not met, if the handling and powertrain mode selected is displayed. For more information on the different settings that are available, see Active dynamics control, page 2.20.

Instruments


Folding Driver Display

Electronic stability control (ESC) mode display

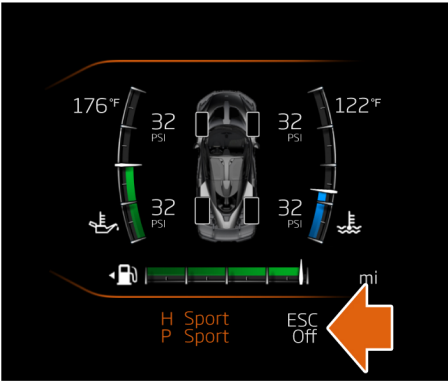

Confirmation of the electronic stability control mode selected is displayed. For more information on the different settings that are available, see Active dynamics control, page 2.20.

Oil temperature

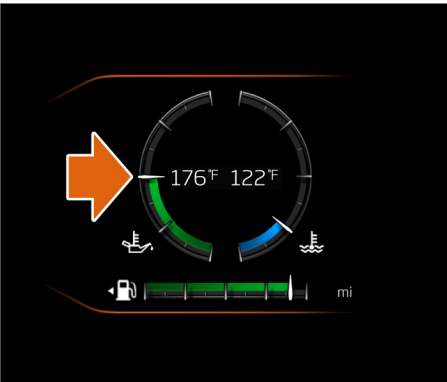

The oil temperature is displayed in the form of a colored gage on the right-hand side of the Folding Driver Display.

When the engine is first started the gage will be BLUE. As the engine warms up, the color will change to GREEN, indicating normal temperature.

High temperature is indicated if the gage turns AMBER and excessive temperature is indicated by the gage turning RED.


If the gage shows high temperature, AMBER, slow down until the temperature drops to normal. If the temperature continues to rise and the gage turns RED, a warning message will appear on the Folding Driver Display.

Stop the vehicle as soon as safety permits and contact your McLaren Retailer immediately.

Instruments

Folding Driver Display

Coolant temperature

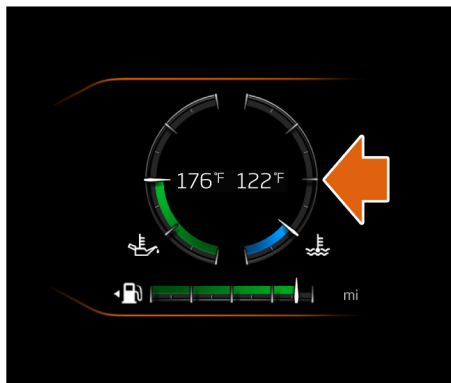

The coolant temperature is displayed in the form of a colored gage on the right-hand side of the Folding Driver Display.


When the engine is first started the gage will be BLUE. As the engine warms up, the color will change to GREEN, indicating normal temperature.

High temperature is indicated if the gage turns AMBER and excessive temperature is indicated by the gage turning RED.

If the gage shows high temperature, AMBER, slow down until the temperature drops to normal. If the temperature continues to rise and the gage turns RED, a warning message will appear on the Folding Driver Display.

Stop the vehicle as soon as safety permits and contact your McLaren Retailer.

Fuel level and range

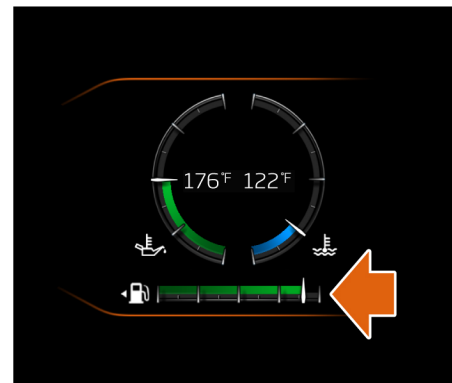

Fuel level

The fuel level is displayed in the form of a gage on the right-hand side of the Folding Driver Display.

Fuel range

Range is the estimated distance until the vehicle requires refueling.

Central Display

Introduction.....	4.02
Copyright.....	4.02
Other information.....	4.02
System controls.....	4.02
Overview.....	4.04
Settings.....	4.05
Overview.....	4.05
General settings.....	4.05
Regional settings.....	4.07
Connection settings.....	4.10
Sound settings.....	4.11
Radio & media settings.....	4.12
Bluetooth phone settings.....	4.13
Light settings.....	4.13
Vehicle.....	4.14
Navigation.....	4.18
Cameras.....	4.20
Phone.....	4.22
Overview.....	4.22
Device pairing.....	4.23
Making a call.....	4.24
Receiving a call.....	4.26
In-call options.....	4.26
Ending a call.....	4.26
Contacts.....	4.27
Media.....	4.28
Overview.....	4.28
Media controls.....	4.29

Connecting an external device.....	4.30
USB and iPod.....	4.30
Storage.....	4.31
Bluetooth audio.....	4.32
AUX.....	4.32
Navigation.....	4.33
Overview.....	4.33
Safety.....	4.33
Using Navigation.....	4.34
Using the menus.....	4.35
Radio.....	4.36
Overview.....	4.36
Radio controls.....	4.36
Radio data system (RDS).....	4.37
McLaren Track Telemetry.....	4.38
Overview.....	4.38
Opening the application.....	4.38
Setup.....	4.39
Drive.....	4.39
Ending your session.....	4.41
Reviewing your data.....	4.41
Importing telemetry data.....	4.42
Exporting telemetry data.....	4.42
Editing a track.....	4.43
Voice Recognition.....	4.44
Overview.....	4.44

Central Display Introduction

Copyright

McLaren Automotive is constantly updating the systems covered within this document, and therefore reserves the right to change the specification without notice at any time.

Every attempt is made to ensure that this information is totally accurate, however no liabilities for inaccuracies or the resulting consequences are accepted by McLaren Automotive or its Retailers, except in the case of personal injury caused by the negligence of these parties.

Other information

The Wi-Fi trademark is owned by the “Wi-Fi Alliance” trade association. A manufacturer may use the “Wi-Fi” trademark to indicate that their certified product belongs to a class of wireless local area network (WLAN) devices based on the IEEE 802.11 standards.

The Bluetooth® word mark and logos are owned by the Bluetooth® SIG Inc., and any use of such marks by McLaren Automotive Ltd. is under license. Bluetooth QDID: B019632; B017641; B017642.

Other trademarks and trade names are those of their respective owners.

System controls

When the ignition is switched on, the McLaren Infotainment System (MIS) will start up and resume the previously used audio source if available. If the previously used source is not available, the MIS will display the home screen. If it was previously in standby mode, it will resume in standby mode.



Press the  to fully start the MIS and show the home screen.

Central Display Introduction



1. Home, on/standby
2. Volume
3. Home menu
4. Climate control

Home, on/standby



To switch the MIS on, press the home button (1).

When the MIS is on, a brief press of the button will return you to the home screen from anywhere in the system.

Press and hold the home button for three seconds to switch the MIS into standby mode. To switch from standby mode to on, simply press the home button.

Volume

Rotate the control (2) clockwise to increase volume or counter-clockwise to reduce the volume.

A horizontal bar representing the volume setting will appear briefly on the screen.

Use the volume control to set the volume of the system that is currently active. An icon indicating the currently active system/source will be displayed alongside the volume bar.



NOTE: You can adjust any volume source by rotating the volume control dial. For temporary sources of audio (phone calls), this can be adjusted using the dial when the source is active.

Home menu

See Overview, page 4.04 for details of the features which can be accessed from the Home menu (3).

Back



Press the on-screen back button to return to the previous screen. The function of this button is contextual and will change according to the currently selected system and the active feature.

Status Bar

A number of icons will appear at the top of the screen, when certain systems are in operation or features are active.



Phone signal strength indicator.



The Bluetooth® icon will be displayed in white when a device is connected. If no Bluetooth® device is connected the icon will not be displayed.

The following icons will be displayed in combination with the connected media device and integrated media system icons to indicate their status:



Media playing




Media paused

Central Display Introduction



Media muted

Overview

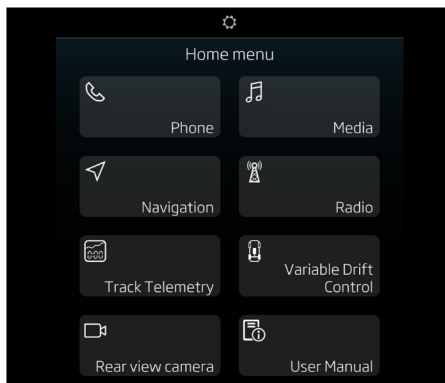

Touch the icon representing the feature that you wish to access.

- Settings, page 4.05
- Phone, page 4.22
- Media, page 4.28
- Navigation, page 4.33
- Radio, page 4.36
- McLaren Track Telemetry, page 4.38
- Electronic stability control (ESC), page 2.35


- Rear view camera (RVC), page 2.14
- Electronic user manual, page .3




NOTE: The features available may vary depending on the vehicle specification.

Central Display Settings

Overview


From the Home menu, press the  icon to display the Settings menu.

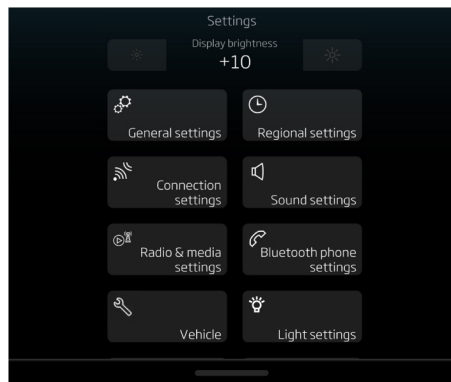


The following choices can be made from the Settings screen:

- General settings, page 4.05
- Regional settings, page 4.07
- Connection settings, page 4.10
- Sound settings, page 4.11
- Radio & media settings, page 4.12
- Bluetooth phone settings, page 4.13

- Vehicle, page 4.14
- Light settings, page 4.13
- Navigation, page 4.18
- Cameras, page 4.20

 **NOTE:** The settings available may vary depending on the vehicle specification.

General settings

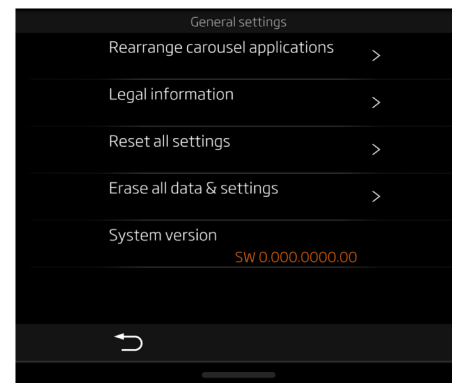


The following general settings are available:

- Rearrange carousel applications, page 4.06
- Legal information, page 4.06
- Reset all settings, page 4.06
- Erase all data & settings, page 4.06
- System version, page 4.06

Central Display Settings

Rearrange carousel applications

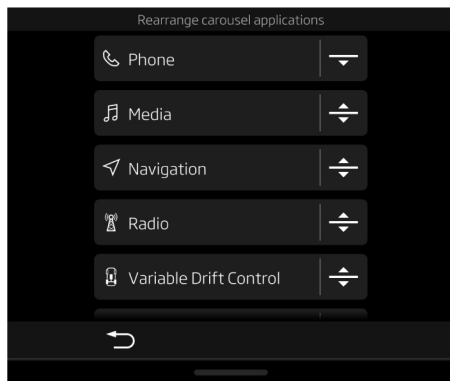


The order in which the applications are shown on the home screen can be rearranged to suit your preference.

Touch an application you wish to move and drag it to another position in the list.

Legal information


Select this option to view the available legal information relating to your vehicle and the McLaren Infotainment System (MIS).

Reset all settings

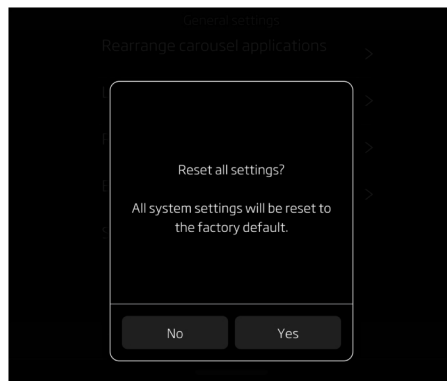

Select **Yes** to reset all vehicle and the MIS settings to the factory default.

Erase all data & settings

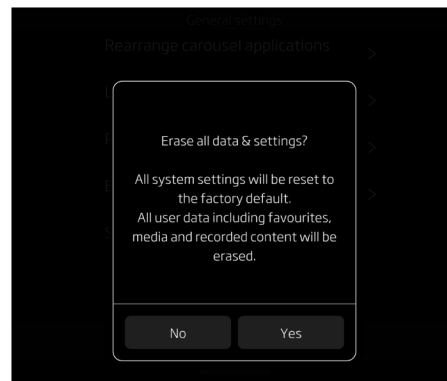


Select **Yes** to erase all data and reset all vehicle and the MIS settings to the factory default.

System version

Displays the software version installed on the MIS.

Central Display Settings


Regional settings

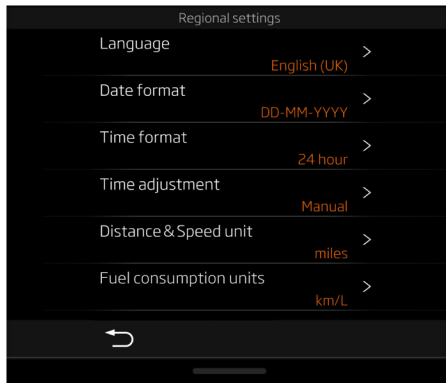

The following regional settings are available:

- Language, page 4.07
- Date format, page 4.08
- Time format, page 4.08
- Time adjustment, page 4.08
- Distance & Speed unit, page 4.09
- Fuel consumption units, page 4.09
- Temperature units, page 4.09
- Pressure units, page 4.10

Language

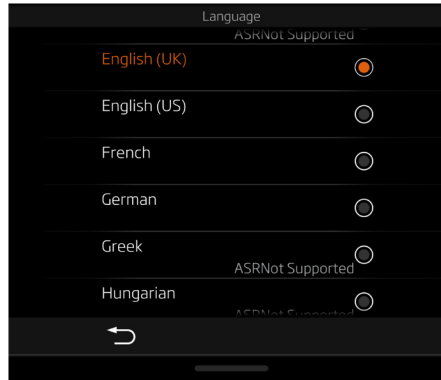

Use this screen to set your preferred language.


The following choices are available:

- Arabic (Saudi)
- Chinese (Cantonese)
- Chinese (Mandarin)
- Czech
- Dutch
- English (Australia)
- English (UK)
- English (US)

- French
- German
- Greek
- Hungarian
- Italian
- Polish
- Portuguese (Brazil)
- Russian
- Spanish
- Thai
- Turkish

Central Display Settings


Date format

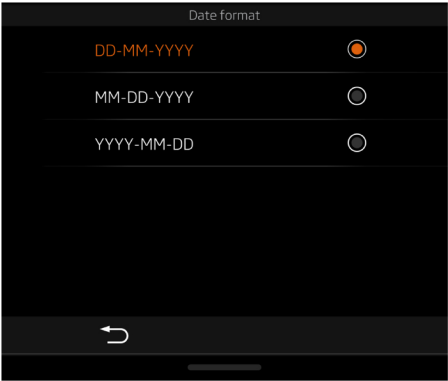

Select from the following date formats:


- DD-MM-YYYY
- MM-DD-YYYY
- YYYY-MM-DD

Time format

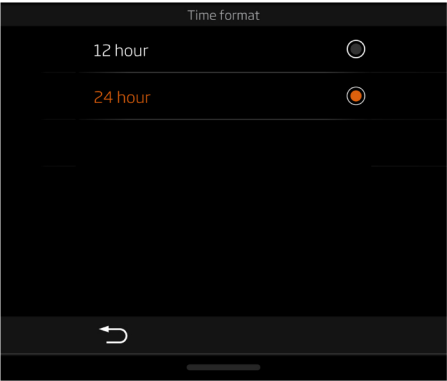

Select 12 hour or 24 hour format.

Time adjustment

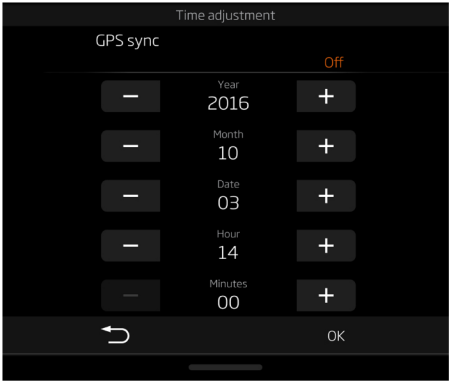

Select **GPS sync** to automatically adjust the time using the GPS signal. **On** will be highlighted when **GPS sync** is activated.

GPS sync must be set to **Off** before the time can be manually adjusted.

Central Display Settings

Distance & Speed unit

Distance & Speed unit

km ☐

miles ☒

↩

Select km or miles.

Fuel consumption units

Fuel consumption units

L/100km ☐

km/L ☒

mpg(UK) ☐

mpg(US) ☐

↩

Select L/100km, km/L, mpg (UK) or mpg (US).

Temperature units

Temperature units

Fahrenheit ☐


Celsius ☒

↩

Select Fahrenheit or Celsius.


Central Display Settings

Pressure units

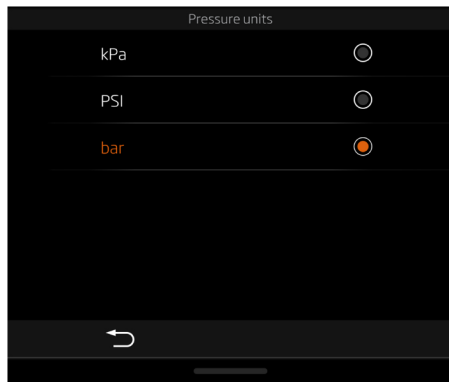

Select kPa, PSI or bar.

Connection settings

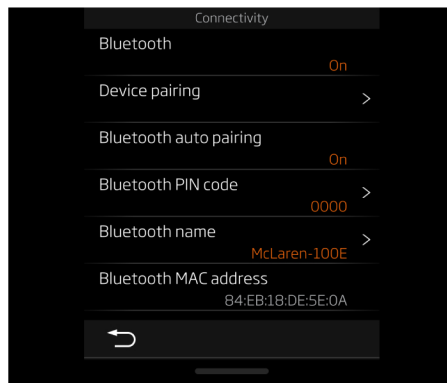

The following connection settings are available:

- Bluetooth, page 4.10
- Device pairing, page 4.23
- Bluetooth auto pairing, page 4.10
- Bluetooth PIN code, page 4.10
- Bluetooth name, page 4.10
- Bluetooth MAC address, page 4.10

Bluetooth

Touch Bluetooth to toggle the function On and Off.

Bluetooth auto pairing

If Bluetooth® auto pairing is On the system will allow the user to automatically pair Bluetooth® enabled devices (not yet paired to the system) when connected via USB.

This feature will only work if supported by the device (iOS devices only).

Bluetooth PIN code

Select this option to view or change the Bluetooth® PIN code using the on-screen keyboard. By default, the code is set to 0000.

Bluetooth name


Select this option to view or change the Bluetooth® name using the on-screen keyboard.

Bluetooth MAC address

Select this option to view the Bluetooth® MAC address.

Central Display Settings

Sound settings

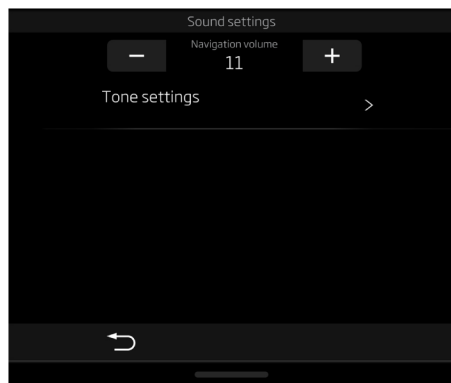


The following sound settings are available:

- Navigation volume, page 4.11
- Tone settings, page 4.11


Navigation volume

Adjust the navigation volume to the desired level using the + or - icons adjacent to Navigation volume. The range is 0 to +15 in increments of 1.

Tone settings

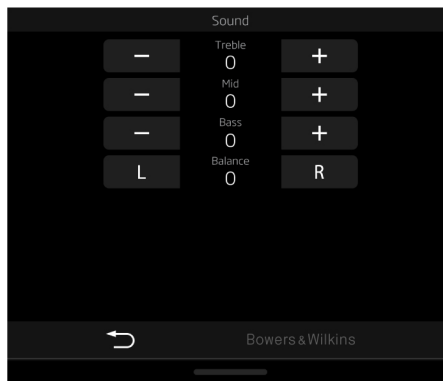

The sound settings apply to all functions of the McLaren Infotainment System (MIS).

i NOTE: Tone settings can also be accessed from Radio and each system within Media by pressing the  icon.

Treble

Touch the + or - icons adjacent to treble to achieve the desired sound reproduction quality. The range is 0 to +9 or 0 to -9 in increments of 1.

Mid

Touch the + or - icons adjacent to mid to achieve the desired sound reproduction quality. The range is 0 to +9 or 0 to -9 in increments of 1.

Bass

Touch the + or - icons adjacent to bass to achieve the desired sound reproduction quality. The range is 0 to +9 or 0 to -9 in increments of 1.


Balance

Touch the + or - icons adjacent to balance to achieve the desired sound from the speakers. The range is 0 to L9 or 0 to R9 in increments of 1.

Central Display Settings

Radio & media settings

The following radio and media settings are available:

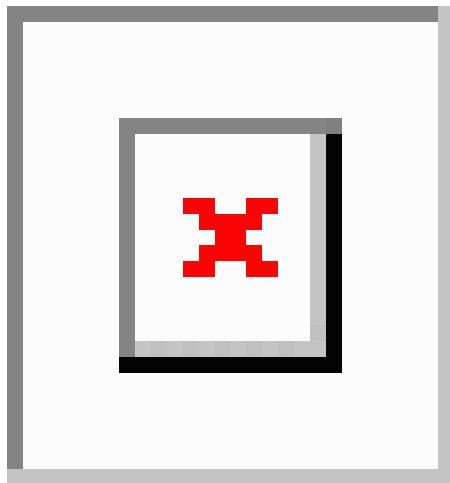

- SiriusXM, page 4.12
- FM (RDS), page 4.12
- AUX, page 4.12
- Bluetooth phone settings, page 4.13
- Storage, page 4.12

- USB, page 4.12

SiriusXM

Set Tune Start to **On**, the track being played on the selected channel will start from the beginning.

Set Tune Mix/Tune Start to **On**, tracks in the now playing list of your favorite music channels will be shuffled, these tracks will start from the beginning.

To set up Traffic and Weather City, select your city from the list. Press the traffic and weather icon, SiriusXM will tune to the traffic and weather for the city you have selected.

To set up flash team, select your flash league from the list followed by your flash team. Alerts for team(s) selected will appear on Central Infotainment Touchscreen.

Parental lock allows the you to restrict access to content or user selected channels.

FM (RDS)

Radio Data System (RDS) is a system which allows digital data to be sent to radio receivers at the same time as the FM signal.

The AF feature automatically selects the strongest signal for radio reception. As your vehicle moves away from one transmitter and nearer to another, AF will switch transmitters to maintain the best reception possible. Set AF Search to **On** to enable this feature. Select **AF Reg** to limit the alternative frequency searching to regional transmissions. Select **Off** to deactivate.

Traffic Program (TP) interrupts radio and media playback to inform the driver of traffic conditions. Touch Auto TP seek to toggle between **On** and **Off** to activate or deactivate this feature.

AUX

Select this option to adjust the input gain from the analogue audio signal.

Storage


Select this option to view available storage space, manage files and erase files stored on the McLaren Infotainment System (MIS).

USB

Select this option to view and manage files stored on any connected USB device.

Central Display Settings

Bluetooth phone settings

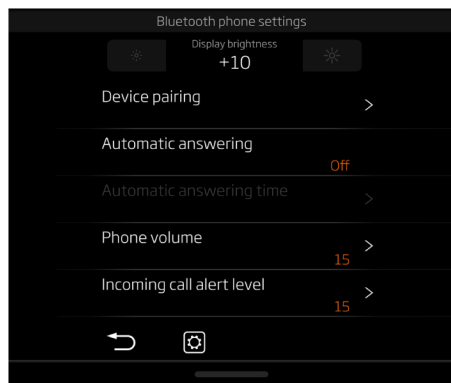

The following Bluetooth® phone settings are available:

- Device pairing, page 4.23
- Automatic answering, page 4.13
- Phone volume, page 4.13
- Incoming call alert level, page 4.13
- Microphone level, page 4.13
- Sort by, page 4.13

Automatic answering

Select this feature to enable the McLaren Infotainment System (MIS) to automatically answer an incoming call. Adjust the time delay before automatic answering occurs using the + or - icons. The range is 1 to 30 seconds, in increments of 1.

Phone volume

Adjust the phone volume to the desired level using the + or - icons. The range is 0 to +38 in increments of 1.

Incoming call alert level

Adjust the incoming call alert volume to the desired level using the + or - icons. The range is 0 to +38 in increments of 1.


Microphone level

Adjust the microphone level using the + or - icons. The range is -10 to +10 in increments of 1.

Sort by

Select whether your contacts are sorted by first name or last name.

Light settings

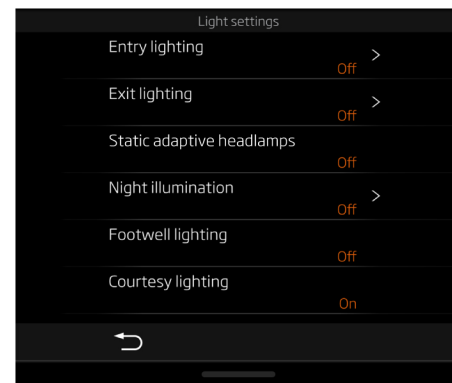

Entry and exit lighting illuminates the exterior lights when the vehicle is unlocked and locked. To activate these features, set the duration of each to **15 seconds**, **30 seconds**, **45 seconds** or **60 seconds**. To deactivate, select **Off**.


Night illumination provides low level interior lighting when the headlamps are on. To activate, select the desired level from the range of 1 to 7. To deactivate, select **Off**.

Footwell and courtesy lighting can be set to **On** or **Off** as desired.

Central Display Settings

Select ambient lighting, select On to activate this feature, then adjust the color and intensity as required.

Vehicle

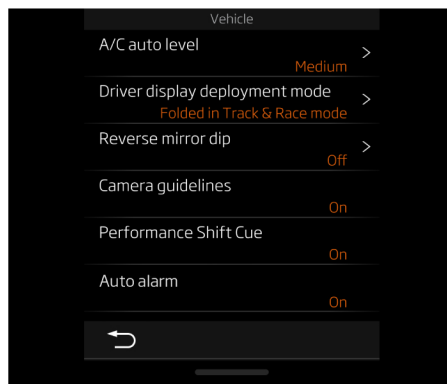


The following vehicle settings are available:

- A/C auto level, page 4.14
- Driver Display deployment mode, page 4.15
- Reverse mirror dip, page 4.15
- Camera guidelines, page 4.16
- Performance Shift Cue (PSC), page 4.16
- Auto alarm, page 4.16
- Automatic door locking, page 4.16
- Automatic mirror folding, page 4.16

- Door unlock, page 4.16
- Silent door lock, page 4.16
- Tire type, page 4.17
- Valet mode, page 4.17
- Wiper mode, page 4.18
- Wiper sensitivity, page 4.18
- Speed limit display, page 4.18

A/C auto level

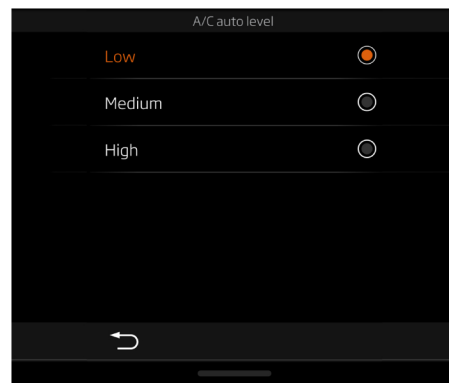


The A/C auto level selected will have an effect on the fan speed used by the climate control system, when in AUTO mode.

Central Display Settings

Select **Low**, **Medium** or **High** to suit your preference.

Driver Display deployment mode

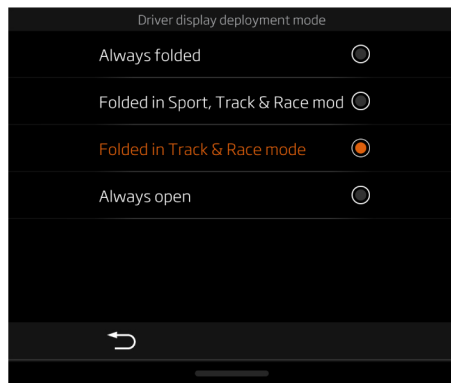

The Folding Driver Display can be set to automatically fold down to Slim Display Mode in certain powertrain or handling modes, remain in Slim Display Mode or to remain in Full Display Mode at all times.


When **Always folded** is selected, the Folding Driver Display will stay in Slim Display Mode.

When **Folded in Sport and Track mode** is selected, the Folding Driver Display will fold down to Slim Display Mode in either Sport or Track powertrain or handling modes.

When **Folded in Track mode and Race mode** is selected, the Folding Driver Display will fold down to Slim Display Mode in either Track or Race powertrain or handling modes.

When **Always open** is selected, the Slim Display Mode will stay in Full Display Mode.

Reverse mirror dip

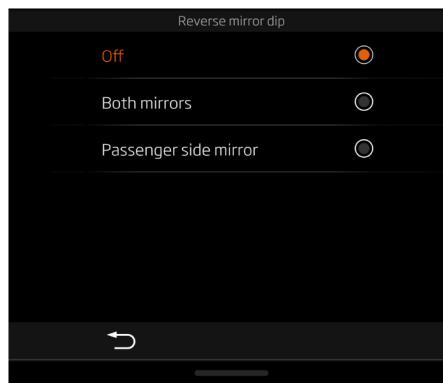

Select **Off**, **Both mirrors** or **Passenger side mirror**.

Off - no mirror dip will occur when reverse is engaged.

Both mirrors - both mirrors will dip when reverse is engaged.

Passenger side mirror - passenger's side mirror will dip when reverse is engaged.

To set the amount the mirrors will dip when reverse is selected:

1. Switch the ignition on.
2. Select **Both mirrors** or **Passenger side mirror** in the mirror dip section of the cluster.
3. Depress the brake pedal and select reverse gear.
4. Adjust mirror(s) to desired position, see [Adjusting mirrors](#), page 1.26.
5. Take vehicle out of reverse.

The next time reverse is selected, the vehicle will automatically move the mirror(s) to the previously set offset from the normal position.

Central Display Settings

Camera guidelines

With camera guidelines set to **On**, colored grid lines will be overlaid onto the live video feed as a guide to the proximity of visible objects to the rear bumper of the vehicle. Select **Off** to deactivate this feature.

Performance Shift Cue (PSC)

Performance Shift Cue (PSC) is an audible shift indicator. When **On** is selected, PSC will sound during full throttle acceleration in manual gearbox mode, to indicate that an upshift is required to maintain optimum performance.

When **Off** is selected, the PSC function will be disabled.

Auto alarm

When auto alarm is set to **On**, the vehicle will automatically lock and the alarm set if unlocked and left for 30 seconds with all doors and service covers left fully closed. Select **Off** to deactivate this feature.

Automatic door locking

When you receive the vehicle, automatic door locking will be set to **On**.


The vehicle doors will automatically lock as the vehicle moves off.

Select **Off** to deactivate this feature. The doors remain unlocked after moving off, unless they are locked manually.

Automatic mirror folding

When **On** is selected, the exterior mirrors will fold as the vehicle is locked and unfold when the door is opened. If **Off** is selected, the mirrors will remain in their driving position.

Door unlock

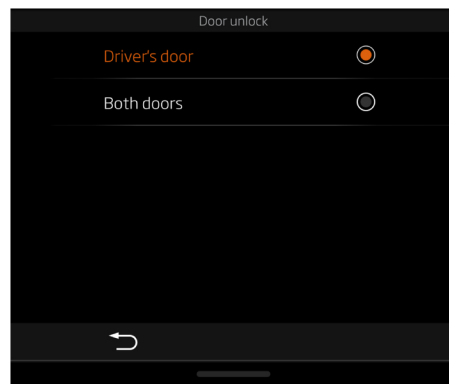

When **Driver's door** is selected, only the driver's door will unlock when the vehicle is unlocked with either the key fob or door button.

When **Both doors** is selected, both doors will unlock when the vehicle is unlocked using either the key fob or door button.

All closures will lock with either **Driver's door** or **Both doors** selected.

Silent door lock


When **On** is selected, the turn signals are disabled when locking or unlocking using the keyless entry system.

If **Off** is selected, the turn signals always flash when the vehicle is locked or unlocked, irrespective of the method used.

All other lock and unlock features remain active.


Central Display Settings

Tire type

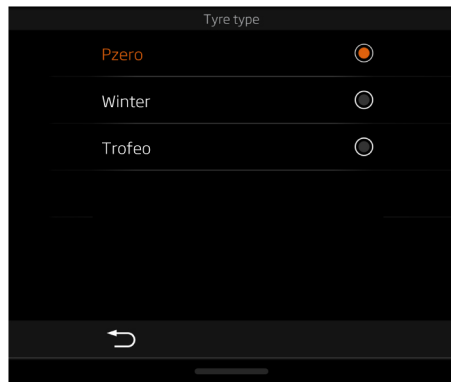


The display will show all the possible tire types available. Select the tires fitted to your vehicle.

Valet mode

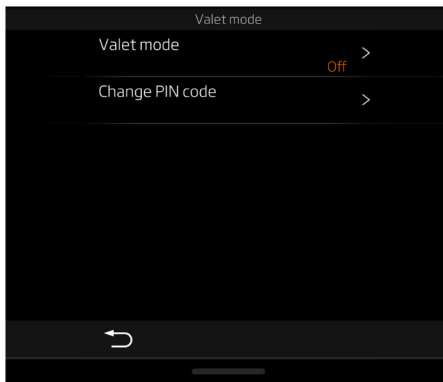

With valet mode on, the speed of the vehicle is limited to 35 mph (55 km/h), the Active Dynamics Panel is disabled, the service covers remain locked, and a confirmation message appears on the Folding Driver Display.


To switch on valet mode you must input a PIN code after selecting **Valet mode**.

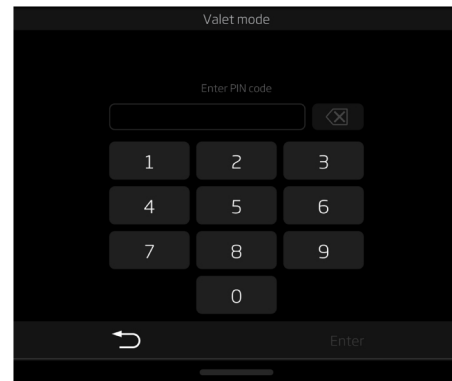

Enter the four digit PIN code using on-screen key pad, then touch **Enter** to confirm. An asterisk replaces each number as it is entered.

The factory set PIN code is 0000. Use this PIN code the first time to switch on valet mode. You should change this PIN code at the earliest opportunity.

Central Display Settings

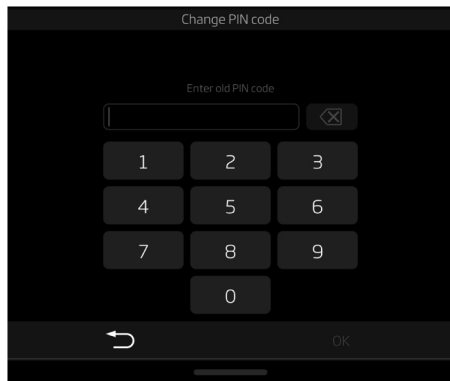

Select **Change PIN code**, then enter the old PIN code, followed by a new PIN code using on-screen key pad, then touch **Enter** to confirm.

When valet mode is **On**, enter the PIN code to switch valet mode off.


Wiper mode

Select either **Automatic** or **Timed**.

With **Automatic** selected, wiper operation in the auto position will be controlled by the rain sensor. To set the sensitivity of the rain sensor, see **Wiper sensitivity**, page 4.18.

With **Timed** selected, wiper operation in the auto position will be an intermittent wipe.

Wiper sensitivity

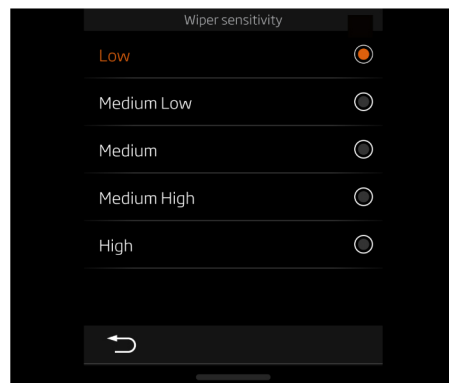


Select the sensitivity level to suit your preference for wiper operation. This setting will apply for the rain sensor sensitivity level only and will not affect the intermittent wipe time delay.

Speed limit display

When **On** is selected, the speed limit for the current road will be displayed on the Folding Driver Display if available.

Navigation

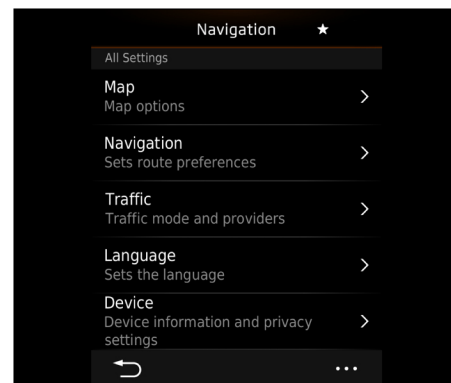

The following navigation settings are available:

- Map, page 4.18
- Navigation, page 4.19
- Traffic, page 4.19
- Language, page 4.20
- Device, page 4.20

Map

The following settings can be used to adjust the view and level of detail displayed on the map.

Central Display Settings

Driving Map View

Select **Track Up** to show a 2D view where the icon representing the vehicle will always travel up the screen and the orientation of the map will change when the car changes direction.

Select **North Up** to show a 2D view where North is always at the top of the screen. The icon which represents the vehicle will travel around the screen, according to the actual direction of travel: for example, downwards if traveling south.

Select **3D** to show a view where the map is shown in a 3D perspective view with the vehicle icon traveling up the screen. The orientation of the map will change as the car changes direction.

Select your preferred view, then touch **Save** to confirm or **Cancel** to return to the previous menu.

Map Detail

Select your preferred level of detail to be displayed on the map, then touch **Save** to confirm or **Cancel** to return to the previous menu.

Map Theme

Select your preferred map theme, then touch **Save** to confirm or **Cancel** to return to the previous menu.

Map Buttons

Select additional buttons to be shown on the map, then touch **Save** to confirm or **Cancel** to return to the previous menu.

Map Layers

Select additional layers to be shown on the map which may enhance the view with additional 3D features or Points of Interest (POI) along your route. Touch the option to toggle it on or off, then touch **Save** to confirm or **Cancel** to return to the previous menu.

Auto Zoom

The screen can zoom in or out automatically to predefined levels depending on vehicle speed. Touch the option to toggle it on or off.

Audible Speed Alerts

The McLaren Infotainment System (MIS) can provide an audible alert when approaching known fixed speed camera locations. Touch the option to toggle it on or off.

myMaps

This will show the details of the maps installed on the MIS.

Navigation

The navigation route can be calculated by prioritizing a **Faster Time** or **Shorter Distance**. Touch your preferred option to select it, then touch **Save** to confirm or **Cancel** to return to the previous menu.

Select **Avoidances** to view the options available to avoid parts of the journey, such as motorways. Touch any options you wish to avoid to toggle it on or off, then touch **Save** to confirm or **Cancel** to return to the previous menu.

Select **Custom Avoidances** and follow the on-screen prompts to select a specific road or area of the map to avoid.

Touch **Voice Prompts** to enable the voice guidance of your planned route. Touch again to disable the feature.

Traffic

Touch **Traffic** to toggle the feature on or off.

Select **Subscriptions** to view and manage your current traffic subscription services.

Central Display Settings

The trafficTrends™ feature will collect and make use of historical traffic data to calculate more efficient routes. Different routes may be calculated for the same journey, depending on the day of the week or the time. Touch **trafficTrends™** to toggle this feature on or off.

Touch **Traffic Voice Prompts** to enable the MIS to announce any known traffic issues near your route. Touch again to disable the feature.

Language

Select your preferred navigation voice language and gender from the available options.



NOTE: Some voices may announce additional information, such as street names. Confirmation of this will be displayed below the voice name.


Device

Select **About** to view full details of maps currently installed on the MIS.

The myTrends™ feature monitors where you travel to regularly and once it has collected enough data, can predict where you are traveling to. This feature can offer useful information about your route, such as traffic conditions and offer alternative routes without the need to manually set the destination.

Touch **myTrends™** to toggle the feature on or off or **Delete myTrends™ History** to erase all collected data.

Cameras

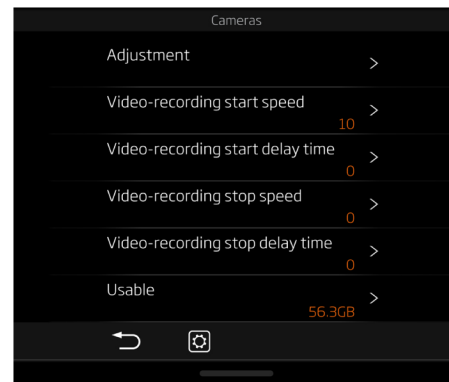


Select **Adjustment** to alter the video settings. The following effects can be adjusted:

- Brightness
- Contrast
- Color depth
- Tint
- Gamma

Central Display Settings

Video recording can be set to start and stop automatically. Adjust the video recording start speed, stop speed, start time delay and stop time delay as required.

Usable shows the amount of storage space available for recording video.

 **NOTE:** The storage space is shared by all features of the McLaren Infotainment System (MIS), including media.

Central Display Phone

Overview



The McLaren Infotainment System (MIS) provides the facility to make and receive calls safely and hands-free, by connecting to your mobile phone using Bluetooth®.

The connection provides you with access to the contacts and call history stored on your phone.

The MIS can deal with conference calls, if supported by the connected phone, but cannot initiate them.



WARNING: Do not allow yourself to become distracted by the phone while driving. You could cause an accident.

Safety precautions



WARNING: Never attempt to operate the phone while the vehicle is moving. You could become distracted and cause an accident.



WARNING: Always store your phone securely. Unsecured objects can become dangerous missiles in the event of an accident.



WARNING: Always switch off the phone in areas with a high risk of explosion. These areas include filling stations, fuel storage areas or chemical factories, as well as places where the air contains fuel vapor, chemicals or metal dust. The operation of cardiac pacemakers or hearing aids may be impaired when the phone is in use. Check with your doctor or the manufacturer of the equipment to establish if anyone who is using such devices, is sufficiently protected against high frequency energy.

McLaren recommend that, to avoid potential interference, a minimum distance of 15 cm (6 in) is maintained between a wireless phone antenna and a cardiac pacemaker.

Bluetooth®

Bluetooth® is the short-range radio frequency (RF) technology which allows electronic devices to communicate with each other wirelessly.

Compatible Bluetooth® phones can be used in conjunction with the MIS.

The MIS system supports Bluetooth® Hands-Free Profile 1.6 (HFP 1.6). If the mobile phone connected to the system also supports this profile, features such as battery meter and signal strength may be displayed on the screen.

Your mobile phone must be paired and connected with the MIS before it can be operated, see Device pairing, page 4.23 and Connecting a phone, page 4.23.


Central Display Phone

Device pairing

1. By default, Bluetooth® will be switched on and the McLaren Infotainment System (MIS) will be in discoverable mode. If Bluetooth® is not on, switch on manually, see Connection settings, page 4.10.
2. Using your mobile phone, select the search for Bluetooth® devices function.

i NOTE: On some phones, this is referred to as a new paired device. Refer to your phone's operating instructions for the exact description.

3. Select "MIS" from the list of available devices.
4. The MIS will display a passkey.

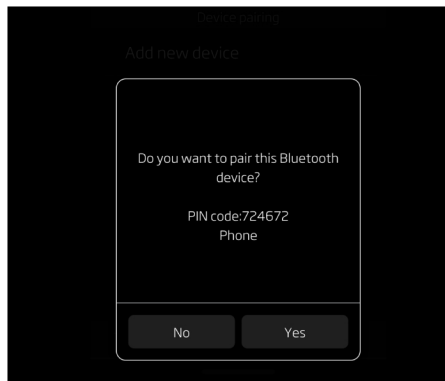

5. Select **Yes** to confirm that the passkey displayed on the MIS is the same as the passkey displayed on your phone.
6. Select **Pair** on your phone.
7. Once your phone has been paired and connected to the MIS, it will connect automatically whenever it comes within range.
8. If it does not automatically connect, it will be necessary to connect manually to the MIS, using the mobile phone controls.

i NOTE: Some phones must be manually connected.

Some phones require the connection to be authorized each time. Set MIS as authorized in the phone's known device list, to prevent this.

See Bluetooth phone settings, page 4.13 for detail of all options available.

Pairing additional devices

The procedure for connecting additional devices is the same as when pairing the first phone, see Device pairing, page 4.23.

A maximum of 12 devices can be paired with the MIS, but only two can be connected at a time.

i NOTE: If the maximum number of devices are already connected to the MIS, an additional device can be paired, but will not be connected. The original devices will remain connected to the MIS.

Connecting a phone

If you have already paired a phone, the MIS will automatically reconnect to it when the phone comes within range unless other devices are connected.


i NOTE: Some phones must be manually connected.

Central Display Phone

Some phones require the connection to be authorized each time. Set MIS as authorized in the phone's known device list, to prevent this.

Your phone will be disconnected when the MIS or the vehicle is switched off. Automatic reconnection may take several seconds when the vehicle or the MIS is switched on again.


Making a call

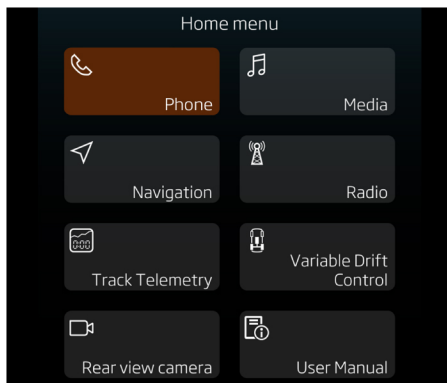



There are a number of ways of making a call, these are explained in the following pages.


To switch to the phone application, touch the Phone icon from the McLaren Infotainment System (MIS) Home screen or press the Phone button.

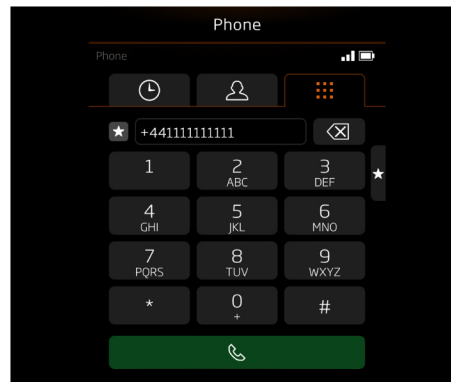
Using the keypad




1. From the Phone screen, touch the keypad tab.
2. Phone numbers can be entered using the on-screen keypad.
If you enter an incorrect number or digit, touch the  icon to delete the last digit.
3. Touch the  icon when the complete number is displayed on the screen to begin the call.

Central Display Phone


4. A call can be canceled, while the system is dialing, by touching the  icon or phone button.


 **NOTE:** Any media or radio play will be muted while a call is in progress.

Using contacts

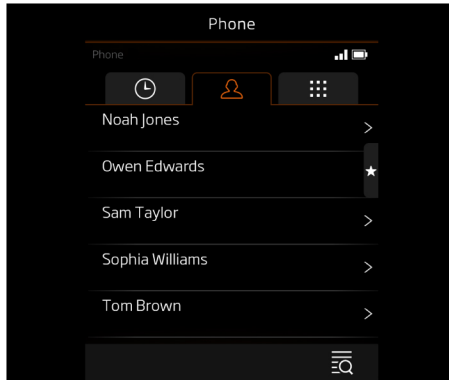


1. From the Phone screen, touch the contact tab.
2. Once your contacts are displayed, a specific person can be found by scrolling through the list.


3. Select a contact to view all available phone numbers for that contact. Touch the required number to begin the call.
4. A call can be canceled, while the system is dialing, by touching the  icon or phone button.


 **NOTE:** Any media or radio play will be muted while a call is in progress.

Using call history

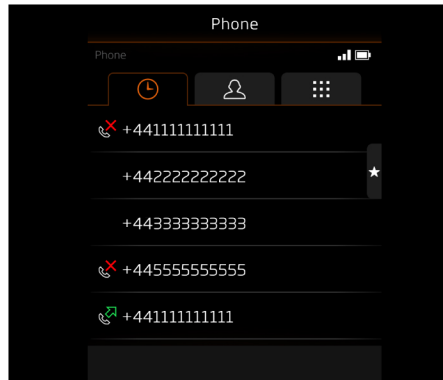




1. From the Phone screen, touch the call history tab.

2. A list of dialed, missed and received calls will be displayed in chronological order with most recent on top.
3. Touch the required contact to begin the call.
4. A call can be canceled, while the system is dialing, by touching the  icon or phone button.

 **NOTE:** Any media or radio play will be muted while a call is in progress.


Favorites

1. Press the  icon to display a list of your favorite contacts.

 **NOTE:** The contacts must be tagged as favorite by selecting  before they will appear in this list.


Central Display Phone

Receiving a call

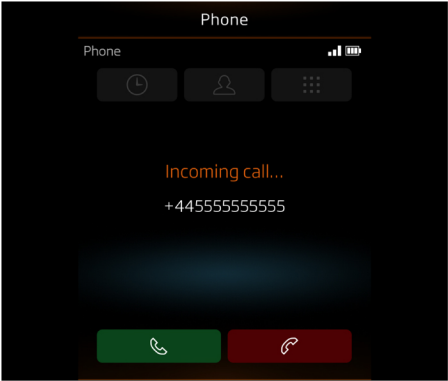




When you receive an incoming call, the McLaren Infotainment System (MIS) will display any caller details which are stored on your phone and synchronized with the MIS.

To accept the call, touch the green  icon.

 **NOTE:** The MIS can automatically answer an incoming call, see Bluetooth phone settings, page 4.13.


To decline the call, touch the red  icon.


In-call options

-  Touch the mute icon to disable the microphone, touch again to enable it.
-  Touch the keypad icon to launch the on-screen keypad, touch again to hide it.
-  Touch the switch to phone icon to transfer the call to your phone handset, touch switch to speakers to transfer back.

Ending a call


To end a call from the call in progress screen, touch the red end call icon.

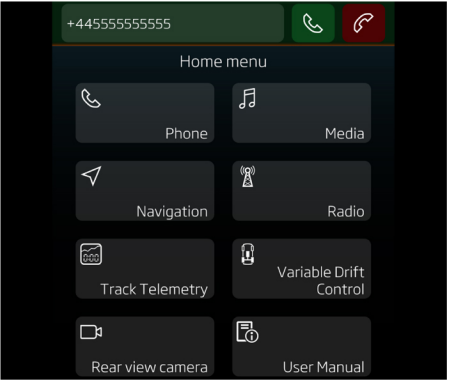

To end a call while viewing a different system screen, touch the  icon adjacent to the call in progress display at the top of the screen.

Central Display Phone

Contacts

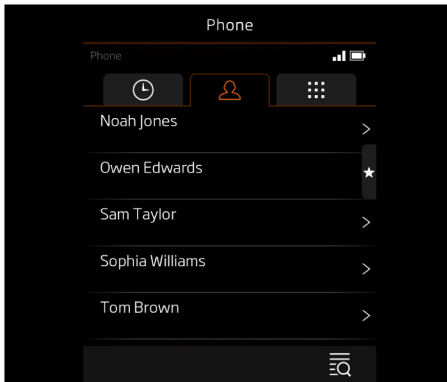

1. From the Phone screen, touch the contact tab.

- i** NOTE: Dependent on phone model, pictures of contacts stored on your phone, will be displayed on the screen alongside the contact name.
- 2. If your contact list extends beyond the depth of a single screen, scroll up and down the list by swiping your finger upwards or downwards on the screen.

- i** NOTE: Contacts can be sorted by either first name or last name, see Bluetooth phone settings, page 4.13 for more information.

3. Alternatively, you can search for a contact using the on-screen keyboard, see Search, page 4.27.
4. Select a contact to view all available phone numbers for that contact. Touch the required number to begin the call.

- i** NOTE: Dependent on phone model, if pictures of contacts are stored on your phone, these will be displayed on the screen during a call if contacts have been synchronized with the MIS.

5. A call can be canceled, while the system is dialing, by touching the icon or phone button.

- i** NOTE: Any media or radio play will be muted while a call is in progress.

- i** NOTE: To tag a contact as a favorite touch . Touch again to remove them from your favorites.

Search

1. Press the icon from the contacts tab.
2. Using the on-screen keyboard, enter at least one character to filter the displayed contacts.

If you enter an incorrect number or digit, touch the icon to delete the last digit.

- i** NOTE: Contacts can be sorted by either first name or last name, see Bluetooth phone settings, page 4.13 for more information.

3. Select a contact to view all available phone numbers for that contact. Touch the required number to begin the call.


- i** NOTE: Dependent on phone model, if pictures of contacts are stored on your phone, these will be displayed on the screen during a call if contacts have been synchronized with the MIS.

4. A call can be canceled, while the system is dialing, by touching the icon or phone button.

- i** NOTE: Any media or radio play will be muted while a call is in progress.

Central Display Media


Overview

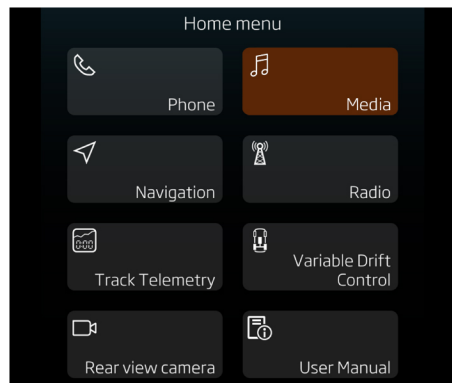

The functions of the media player can be accessed by touching the Media icon from the McLaren Infotainment System (MIS) Home screen or press the Media button.

Selecting Media will present the available audio sources.

Audio sources

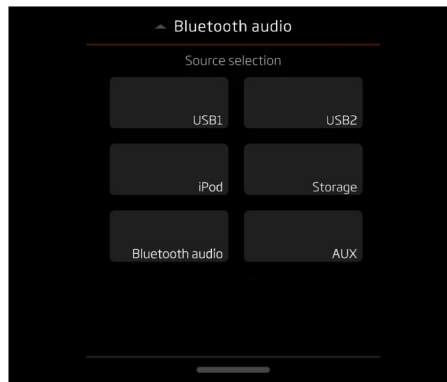

If music devices are connected to the USB port, the auxiliary socket and Bluetooth®, all sources will appear on the screen, with their respective symbols at the top of the screen.

i NOTE: If a device is not available, it will be greyed out in the list.

Supported media devices

For a list of current compatible media devices, please contact your McLaren Retailer.

Supported media files

The media system can play files of the following format/encoding combinations.

Audio:


- MP3
- AAC
- WMA
- OGG Vorbis
- AC3
- AMR
- FLAC
- WAV
- AIFF

Video:

- MPEG1
- MPEG2
- H.264/MPEG-4 AVC
- MPEG-4 Video
- DivX 4/5
- XviD HT
- VC-1



Central Display Media

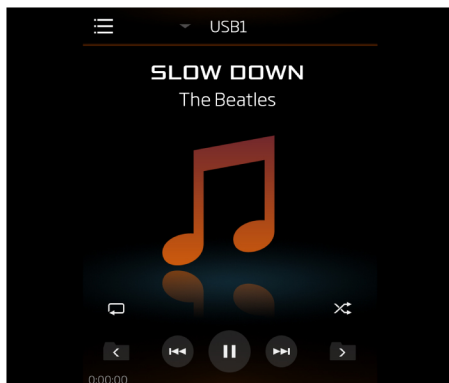

Media controls



Music played from the internal storage or connected device can be controlled using the McLaren Infotainment System (MIS) touch screen.



Once music has started playing, the artist's name, the album title and the song title will appear on the screen. If there is any artwork associated with the song, that will also be displayed, if no artwork is available, a representation of a musical note will be shown.


Move forward or backward through the current track by touching and holding the  or  icons. Alternatively, you can touch and drag the progress bar to move through the track.

A single touch of  will skip to the next track. A single touch of  icons will skip to the start of the current track, a second touch will skip to the previous track.


Swipe gestures can also be used to skip tracks. Swipe the screen from left to right in order to skip to the next track. Swipe the screen from right to left in order to skip to the start of a track, swipe again to skip to the previous track.

Touch the  or  icon to skip to the next or previous folder.

To pause a track, touch the  icon. To resume play, touch the  icon. A track can also be paused or played by tapping the screen.

To randomly play through the current selection, press the  icon. The icon will turn amber when random is active.

 **NOTE:** This function is not available for Bluetooth® devices.

To activate the repeat feature, press the  icon. The icon will turn amber when repeat is active.

 **NOTE:** This function is not available for Bluetooth® devices.

Touch the  icon to browse for another track, playlist or folder.

 **NOTE:** This function is not available for Bluetooth® devices.

Central Display Media

Connecting an external device



USB ports are located in the center console, connect devices as required.

Ensure that the center console is closed before driving.

1. USB1 or iPod
2. USB2
3. 3.5 mm auxiliary line in

See Device pairing, page 4.23 for details on connecting a Bluetooth® device.


- i** NOTE: Any internal batteries fitted to your device will be charged through either USB port.
- i** NOTE: The USB1 port has a high power output suitable for charging mobile devices.

USB and iPod

Connect a USB device, see Connecting an external device, page 4.30.

From the Media screen, select USB1, USB2 or iPod.

- i** NOTE: Any internal batteries fitted to your device will be charged through the USB port.
- i** NOTE: The USB1 port has a high power output suitable for charging mobile devices.

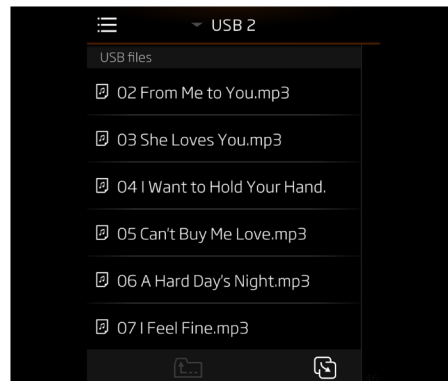


Central Display Media


Browse to the folder or playlist you wish to listen to, select a track to begin playing.

If multiple folders exist, touch the  to navigate up the folder levels.

Copy to storage

Browse to the files you wish to copy and touch the  icon.

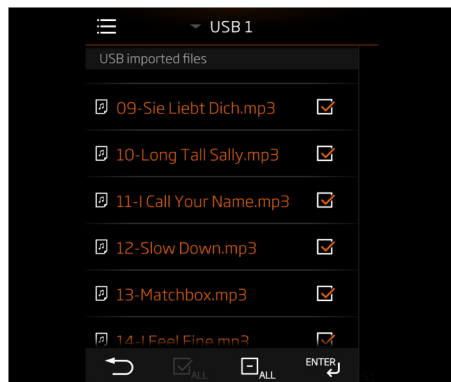


Select the files to be copied, then touch the  to confirm the selection. Once a destination folder has been selected, the McLaren Infotainment System (MIS) will display the progress while files are copied.


Storage

From the Media screen, select Storage.

Browse to the folder or playlist you wish to listen to, select a track to begin playing.

Manage files

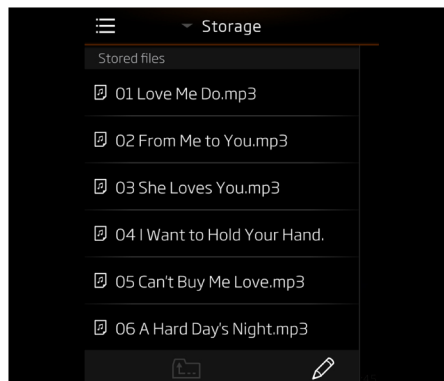


Touch the  icon in to access the Manage files menu. Use this menu in order to create folders, or move or delete selected files stored on the McLaren Infotainment System (MIS).

Import files

Files can be imported from a connected USB device. See Copy to storage, page 4.31.

Erase storage

Select  to access the storage settings. Select Storage erased in order to remove all media imported onto the MIS.

Central Display Media

Bluetooth audio

Connect a Bluetooth® device, see Device pairing, page 4.23.

From the Media screen, select the Bluetooth audio source.

Music may begin playing automatically, depending on the Bluetooth® device connected.

If music does not start playing automatically, select play on the device itself.

The Bluetooth® symbol  will appear at the top of the screen while music is playing.

The volume can be adjusted using the McLaren Infotainment System (MIS), see System controls, page 4.02.


Audio volume is dependent on the output volume of the device attached, and the MIS volume.

AUX


Connect a device to the auxiliary socket, see Connecting an external device, page 4.30.

From the Media screen, select the AUX audio source.

Play from any device connected through the auxiliary socket must be controlled from the device itself.

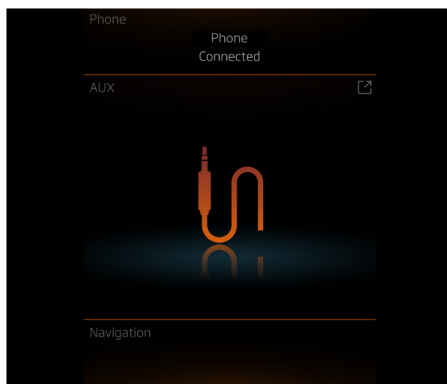


The screen will show a graphic representing a jack plug, when media is played from a device connected to the auxiliary socket.

 **NOTE:** Any internal battery fitted to the device will not be charged by the auxiliary socket while it is connected.


The volume can be adjusted using the McLaren Infotainment System (MIS), see System controls, page 4.02.

Audio volume is dependent on the output volume of the device attached, and the MIS volume.

 **NOTE:** If a static or hiss sound is heard, adjust the volume of the device and/or MIS to compensate.

Central Display Navigation

Overview

 The navigation system uses signals from Global Positioning System (GPS) satellites together with information from vehicle sensors and map data stored on the McLaren Infotainment System (MIS) to determine the precise location of the vehicle.

Using this data, the system is able to create the optimum route to your destination, taking into account any journey preferences you may have set.

To set your preferences, see Navigation, page 4.18.

Creation of a specific route is achieved by using the on-screen menus and the MIS controls, to make your selections. This results in your route being highlighted on the map.

Once you have started a journey, turn information is displayed on the Central Infotainment Touchscreen, supplemented by voice guidance if required, at appropriate points during the journey.

When a significant diversion is made from a planned route, the system will automatically recalculate an alternative route to the destination.

Safety



WARNING: For your safety, ensure that you do not become distracted from the task of driving, through use of the navigation system. Read and adhere to the safety message which appears the first time you enter the navigation system after switching on the ignition.

National road traffic laws and traffic signals must always be obeyed.

Always remember that the purpose of the navigation system is to help in determining the optimum route, it must never be considered as an aid when visibility is reduced.

GPS signals may be interrupted when traveling through tunnels or other situations where GPS signal could be blocked. Navigation will continue on the route until GPS signal is regained.




The GPS signal strength is indicated by the icon in the status bar.

Errors in vehicle position are also possible under the conditions described, and if any of the following have occurred:

- driving inside a building e.g. a multi-story car park
- traveling on a road with a second parallel road very close
- a turntable has been used to rotate the vehicle
- the vehicle has been transported to a different location

Central Display Navigation


Using Navigation

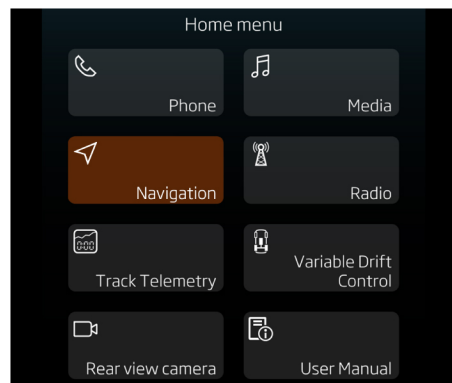


Touch the Navigation icon from the McLaren Infotainment System (MIS) Home screen or press the Navigation button.

The first time you access navigation after the ignition is switched on, the MIS displays safety warning messages. Please read these messages.

The caution message will automatically disappear once the navigation system has finished loading.

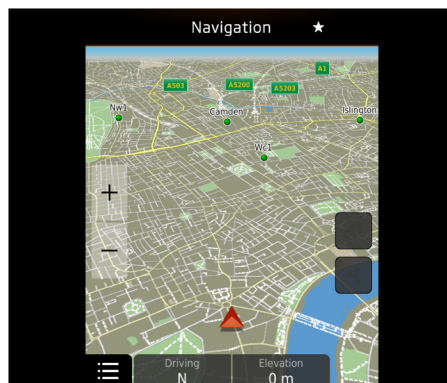


A map showing your current location will appear on the Central Infotainment Touchscreen screen.

 The location and direction of travel of your car is shown as an arrow head on the screen.

To manipulate the area of the map which is displayed, touch the screen and gently move your finger in any direction to move around the map.

To setup the navigation system to your preference, see Navigation, page 4.18.

 Touch the icon from the map screen in order access the options for setting a destination, see Using the menus, page 4.35.

The MIS has a multi-touch screen, allowing easy zooming in and out using pinch gestures. Touch the screen with thumb and forefinger and move them closer together to zoom out, move them further apart in order to zoom in again.

The + and - icons can also be used to zoom in and out.


Details on the screen will change depending on the zoom setting. For example, road names and some Points of Interest (POIs) will be shown when zoomed in close, but not when zoomed further out.

The screen will also zoom in or out automatically to predefined levels depending on vehicle speed. This function can be turned on or off in the settings menu. See Navigation, page 4.18 for more details.

The screen color will automatically change between day and night mode for easier viewing based on the time.

Central Display Navigation

Using the menus

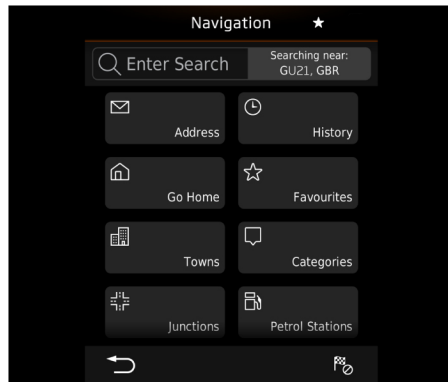

The following options are available:

Search

Use the search feature to find a destination using the name, address or postcode of a location.

History

Select a destination from a list of previous locations.

Go Home

Select **Go Home** to navigate directly to your home address.

i **NOTE:** If you have not already saved your home address, you can follow the on-screen prompts to do so before navigation begins.

Favorites

Select a destination from your saved favorite locations. Addresses and locations can be saved as favorites by selecting the **★** icon.

Towns

Select **Towns** to set a destination within a specific town or city.

Categories

Select a destination from the Points of Interest (POI) within the available categories.

Junctions

Select a junction on specific road.

Gasoline Stations

Select a gasoline station in your area or along your route.

Coordinates

Enter latitude and longitude coordinates to set a specific destination.

Trip Planner

Use the **Trip Planner** to plan a route. Use the available options to set a start location, end location and any specific waypoints you wish to pass through or stop at along your route.

Using the screen

Manually move around the map, until the map is displayed at the most effective scale for locating the general area of your destination.

Touch the map to mark the position of your desired destination.


Route Overview

Once your destination has been selected, an overview will be displayed, with your route highlighted. Your start position, current position, any waypoint(s) and your destination will be shown along the highlighted route.

Select **★** to save the destination as a favorite or **Go!** to begin navigation.

Central Display Radio

Overview

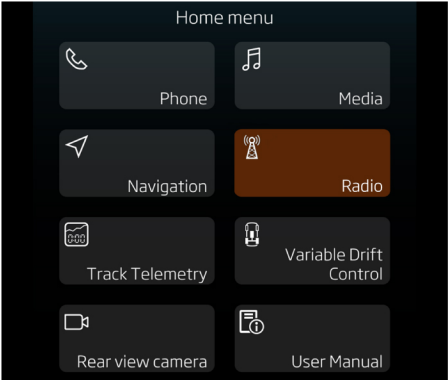


When Radio is selected from the McLaren Infotainment System (MIS) Home screen, or using the Radio button, the radio will launch and tune to the previously selected station.


Wavebands

The radio can receive and tune AM, FM and SiriusXM stations.


The waveband currently selected is displayed at the top of the screen.



 To change the waveband, briefly touch the icon. AM, FM or SiriusXM will be displayed at the top of the screen to indicate the change in the selected waveband.

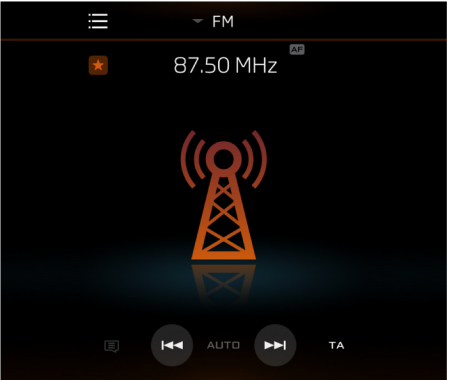

Radio controls



A station can be selected by either manually tuning or selecting a favorite. The frequency will be displayed on the screen along with the station name if available.

 **NOTE:** If the station frequency changes, the favorite preset will have to be set again.

To automatically tune to the previous or next available station, touching the  or  icons.

When tuning manually, touch the  or  icon to incrementally move through the frequency.

Central Display Radio

Swipe gestures can also be used to tune the radio in both manual and auto tuning modes.

Touch the  icon to save a station as a favorite.

Radio data system (RDS)

RDS is a system which allows digital data to be sent to radio receivers at the same time as the FM signal.

Two types of digital data can be received and their status shown on the screen: Alternative Frequencies and Traffic Alerts.

Alternative frequencies (AF)

The AF feature automatically selects the strongest signal for radio reception.

As your vehicle moves away from one transmitter and nearer to another, AF will switch transmitters to maintain the best reception possible.

AF can be toggled **On** or **Off** in the Settings menu, see Radio & media settings, page 4.12.

Traffic alert (TA)

Traffic alerts interrupt radio and media playback to inform the driver of traffic conditions.

TA can be toggled **On** or **Off** in the Settings menu, see Radio & media settings, page 4.12.

Central Display

McLaren Track Telemetry

Overview

WARNING: For your safety, ensure that you do not become distracted from the task of driving, through use of any of these systems.

WARNING: McLaren Track Telemetry is intended for track use only. The driver is responsible for safety and compliance at all times.

McLaren Track Telemetry provides timing data recording and graphical visualization for track use, e.g. circuits and hill-climbs.


During a session or track recording, graphical displays are provided for timing data, performance delta, track maps and vehicle speed.

Track performance can be analyzed in a data viewer, and navigated via the lap number, track position or track distance.


Custom track maps are created automatically and can be manually edited. Multiple track layouts or configurations are supported for each venue.

Different drivers can be associated with each recording.

Opening the application

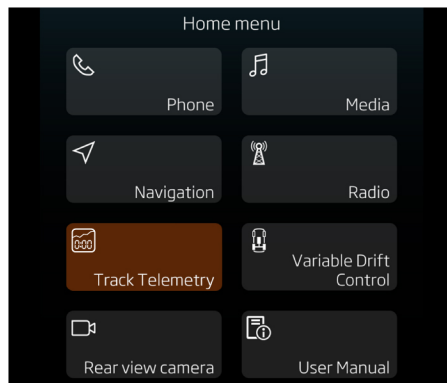

1. Select Track Telemetry from the Home menu, or scroll to the McLaren Track Telemetry application in the Central Infotainment Touchscreen carousel.

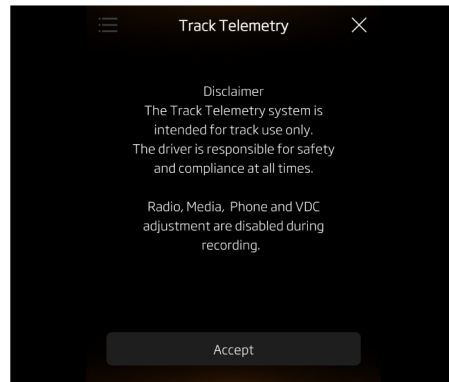

2. Read and accept the disclaimer.

McLaren Track Telemetry is intended for track use only. The driver is responsible for safety and compliance at all times.

NOTE: When McLaren Track Telemetry is in use, other applications will not be available (including Navigation, Media, Phone, Radio and Variable Drift Control).


Central Display

McLaren Track Telemetry

Setup


Open McLaren Track Telemetry and define your session:

- Driver's name
- Weather
- Track name
- Compare with
- Number of laps


Before you start your session, adjust the camera layout for the video recording by pressing .

If the required track has not yet been saved, it will need to be created in the system. Press **Add new track** and follow the on-screen instructions.

 **NOTE:** It is possible to record both a closed circuit and a hill-climb.

 **NOTE:** The McLaren Track Telemetry application will automatically recognize whether the track is open or closed.

If the required track has been saved, the session can be started immediately by pressing **Start** and driving onto the track.

 **NOTE:** Once a closed track has been recorded, a session will be automatically started. The McLaren Track Telemetry application will change from track recording to session recording.

Drive

Once your session is underway, you can see your key data on both the Folding Driver Display and the Central Infotainment Touchscreen.

With the Folding Driver Display in Full Display Mode, use the left stalk to change the content of the display.

Lap times (current, previous, reference)



Central Display

McLaren Track Telemetry


Top speed (Real speed, Max speed, etc.)



Track map (2D/3D view of the track ahead)



Table of lap times

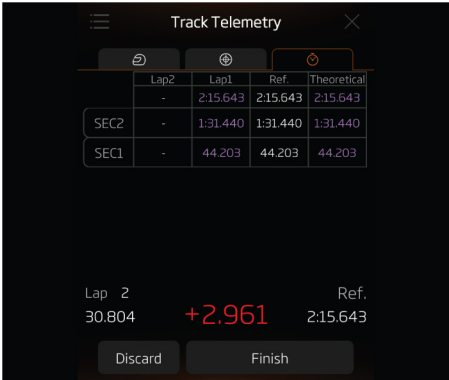


With the Folding Driver Display in Slim Display Mode, timing splits and delta will be displayed at the completion of each sector and lap.

On the Central Infotainment Touchscreen, use the tabs to change view between:

Central Display

McLaren Track Telemetry

G-Map and pedal position

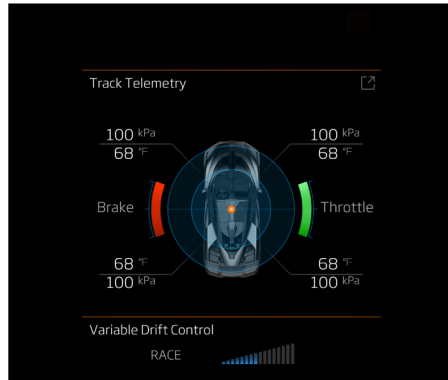


Ending your session

Press Finish to end your session.


i NOTE: The session will automatically end if the number of laps defined during setup are completed.

Reviewing your data

i NOTE: McLaren Track Telemetry has some powerful analysis tools. For more powerful and flexible tools, use the off-board application (available for Mac, PC and iPad).

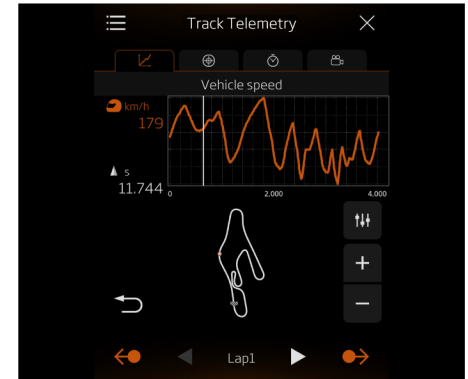



To open a session for analysis:

1. Press  to open the analysis.
2. Choose a track and a session.
3. Use the tabs and controls to review your data and video footage.


Central Display

McLaren Track Telemetry

To navigate within a session:


1. To choose a specific lap, press on the lap number and select a new one.
2. To scroll within a lap, press on the relevant part of the track or press  or  to move forwards or backwards through the lap.



Importing telemetry data

 **NOTE:** Tracks and sessions can be shared across vehicles.

1. Insert a USB storage device into one of the vehicle USB ports.
2. Press  to open the analysis.
3. Press  to import data from the USB storage device.

Exporting telemetry data


 **NOTE:** Tracks and sessions can be shared across vehicles.

1. Insert a USB storage device into one of the vehicle USB ports.
2. Press  to open the analysis.
3. Select the session to export and press .

Central Display


McLaren Track Telemetry

Editing a track

Stored tracks can be edited using the Central Infotainment Touchscreen, press  and select the required track.

The following items are editable:

- Track name
- Start/finish position (closed track only)
- Track direction
- Sectors (number and position)

 **NOTE:** A maximum of 15 sectors can be stored.

Central Display


Voice Recognition

Overview



A mobile phone must be paired and connected with the MIS before the voice recognition feature can be used, see Device pairing, page 4.23 and Connecting a phone, page 4.23.

Press the button on the end of the left hand control stalk to activate the voice recognition function of a connected device.

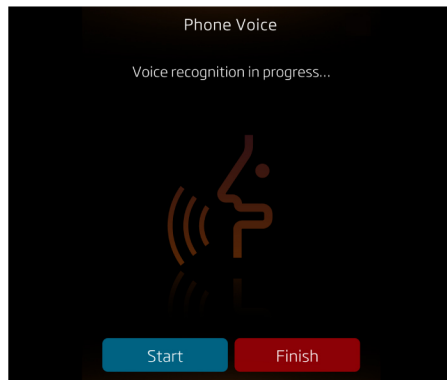

i NOTE: The level of functionality provided by the voice recognition feature will depend on the device connected via Bluetooth®.

Comfort and Convenience

Windows.....	5.02
Safety.....	5.02
Opening and closing.....	5.02
Climate Control.....	5.04
Overview.....	5.04
Controls.....	5.04
Modes of operation.....	5.05
A/C (screen) button.....	5.06
Demisting/Defrosting.....	5.06
Temperature control.....	5.07
Air recirculation mode.....	5.08
Blower speed control.....	5.08
Air distribution settings.....	5.09
Heated mirrors.....	5.10
Lo-Jack Stolen Vehicle Recovery System.....	5.11
Overview.....	5.11
In the event of a theft.....	5.11
Interior Features.....	5.12
Interior lighting.....	5.12
Entry lighting.....	5.13
Exit lighting.....	5.13
Owner documentation.....	5.13
Sun visors.....	5.14
Accessory power sockets.....	5.14
USB sockets.....	5.15
MSO Push-to-Drink System.....	5.15

Comfort and Convenience Windows

Safety

⚠ WARNING: Ensure that no one can be trapped as you open or close the windows. Do not rest any part of your body against the window. There is a risk of becoming trapped by the movement of the window. If there is a risk of entrapment, stop movement of the window.

Opening and closing

⚠ WARNING: The key fob allows the engine to be started and is also used to activate other features on the vehicle.
Take the key fob with you, every time you leave the vehicle to prevent unsupervised operation of the windows, which may result in injury.

Switches for both windows are located on the overhead console.



1. Left-hand window switch.

2. Right-hand window switch.

Press switch (1) or (2). The window will open for as long as the switch is pressed.

Pull switch (1) or (2). The window will close for as long as the switch is pressed.

i NOTE: If the vehicle is in awake mode, window control will not be available.

Resetting the windows

The windows may need to be reset if the battery has been discharged or disconnected.

Ensure that both doors are closed and the ignition is switched on.



Comfort and Convenience Windows

Push switches (1) and (2) until the windows are open and hold them in this position for 5 seconds.

Pull both switches until the windows are closed and hold them in this position for 5 seconds.

The windows are now reset.

If this does not resolve the issue, please contact your McLaren Retailer immediately.

Comfort and Convenience

Climate Control

Overview

The system can be operated in automatic mode or settings can be adjusted manually.

The combination filter reduces the quantity of dust and pollutants entering the vehicle.

WARNING: Follow the recommended settings given for heating or cooling. If the windows mist up, you may no longer be able to observe road and traffic conditions and could cause an accident.

NOTE: The climate control system operates more effectively with the doors and windows closed. However, if the vehicle has been standing in a hot environment for a long time, ventilate by opening the windows briefly.

NOTE: The interior air temperature sensor is located between the steering wheel and the center console. Do not obstruct airflow to this sensor or the performance of the climate control system will be reduced.


NOTE: The vehicle will retain the current climate control settings when the ignition is switched off.

Controls



The climate control system is operated using the Central Infotainment Touchscreen. Press the button to switch on the climate control screen.

Climate Controls

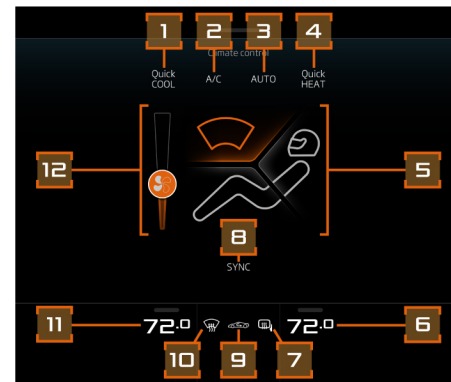

1. Quick COOL button
2. Air conditioning (A/C) button
3. AUTO button
4. Quick HEAT button
5. Air distribution buttons
6. Temperature control - Right-hand side
7. Heated mirrors
8. SYNC button
9. Air recirculation button
10. Demist button

Comfort and Convenience

Climate Control

11. Temperature control - Left-hand side
12. Blower speed control

Modes of operation

Automatic Mode

In automatic mode, the climate control system maintains the set interior temperature using a combination of differing blower speeds, air recirculation and air distribution.

The control panel uses different colors to indicate operational states:

- Amber indicates ON.
- White indicates OFF but available for use.
- Grey indicates not available for use.

To switch on automatic mode, touch the AUTO button.

The button illuminates and the air distribution, temperature and blower speed are adjusted automatically on both sides of the vehicle.

In AUTO mode, there is no need to adjust the blower speed or air distribution, the system will operate whichever controls it needs to maintain the set temperature.

If you do wish to change the air distribution of the climate control system, touch the preferred button. This will then put the system into AUTO fan mode.

This is denoted by the color of the blower speed slider. The bar is grey and the slider moves by itself when the blower is under automatic control. Here, the system is continuing to control the blower speed to maintain the set temperature.

If the blower speed is adjusted while AUTO is active, manual mode will be selected by default. If the AUTO button is then pressed, AUTO mode will be activated again.

If necessary, the system settings can be manually adjusted, see Manual Mode, page 5.05.

Manual Mode

To adjust the air temperature, see Temperature control, page 5.07.

To adjust the blower speed manually, see Blower speed control, page 5.08.

SYNC Mode

SYNC mode allows any changes the driver makes to their air temperature settings to be mirrored automatically for the passenger's temperature setting.

Comfort and Convenience Climate Control

Touching the on-screen SYNC button will cause it to illuminate and automatically implement the driver's air temperature settings to the passenger's side.


The driver can exit SYNC mode at any time by a single touch of the SYNC button. The SYNC button on the screen will then extinguish.

A/C (screen) button

The A/C enhances the cooling and dehumidifying of air. It is used by max-cooling and defrosting modes.

Use the A/C screen button as an ON/OFF switch.

Demisting/Defrosting

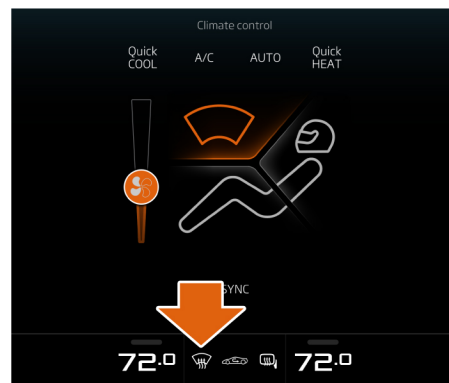

Touch the demist button to activate the screen demist function. The button will illuminate and an icon will be displayed at the top of the screen to indicate the function is active. The air conditioning switches on if previously off and the blower will operate at full speed with the air temperature set to 'HI'.

i NOTE: It is possible to manually reduce the blower speed, see Blower speed control, page 5.08.


i NOTE: Air recirculation is inhibited when demist mode is selected.




Comfort and Convenience


Climate Control


Touch the demist button again to exit the demist mode. The icon on the button extinguishes, and the air temperature and blower speed return to their original settings.

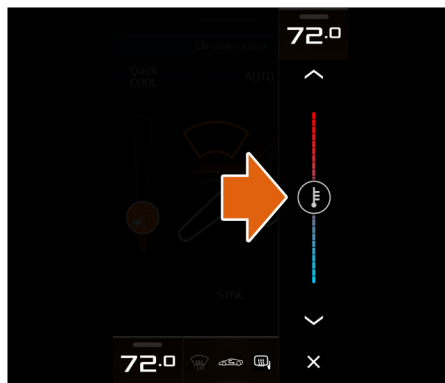
Temperature control




Touch the  button to increase the temperature, or touch the  button to decrease. Alternatively, touch the temperature control slider and drag it to the desired setting. To close the temperature control slider touch the  button.

 **NOTE:** The temperature can be adjusted in 1°F (0.5°C) increments from 61°F to 83°F (16°C to 28°C). McLaren recommend the temperature is set to 72°F (22°C).

To set the temperature to maximum, touch the  button until 'HI' is displayed. In AUTO mode, the climate control system adjusts the air temperature to the highest setting, the blower speed is set to maximum and air is directed to the footwells.


To set the temperature to minimum, touch the  button until 'LO' is displayed. In AUTO mode, the climate control system sets the air temperature to the lowest setting, the blower speed is set to maximum and air is directed to the center air vents.

The temperature set will appear on the Central Infotainment Touchscreen.

 **NOTE:** With 'LO' selected, it is not possible to switch off the air conditioning.

Comfort and Convenience Climate Control

Air recirculation mode

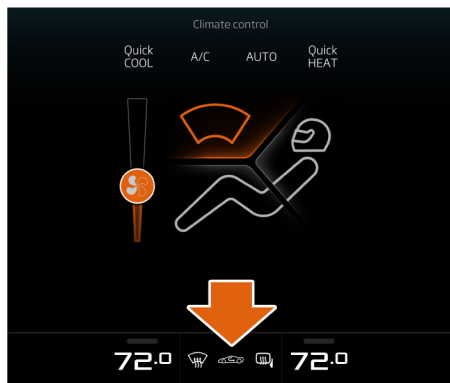


Select air recirculation when unpleasant smells or fumes are entering the vehicle. Air from outside the vehicle is now prevented from entering the cabin.

WARNING: Switch to air recirculation mode briefly if outside temperatures are low. Be aware that the windows could mist up, which may impair your visibility. As a result, you could be distracted from road and traffic conditions and cause an accident.

NOTE: Switch on the air conditioning to prevent the windows misting.

Touch the air recirculation button, to activate air recirculation. The button will illuminate. To switch off air recirculation, touch the button again and the button illumination will be extinguished.

Blower speed control

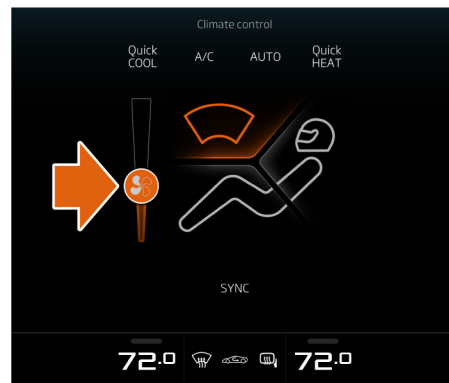

NOTE: When the engine is first started, the blower speed is limited and the air is directed at the windscreen until the engine has warmed up.

NOTE: When the engine is restarted from hot, the blower may operate at low speed. This removes warm air from the vents, the blower speed will then increase to the requested setting.

Comfort and Convenience


Climate Control

Touch the + button to increase the blower speed, or touch the - button to decrease blower speed. Alternatively, touch the fan icon and drag it to the desired setting.

If in automatic mode, adjusting the blower speed will cause the AUTO button to extinguish.

Press the AUTO button to return to automatic mode.

Air distribution settings

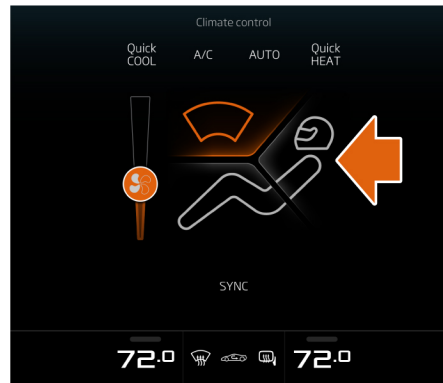


The air distribution can be set using the air distribution controls.

Press the top screen area to direct air to the windscreen, press the middle screen area to direct air to the center air vents, press the bottom screen area to direct air to the footwell vents.

All three screen areas, a combination of any two or an individual area can be selected at any time.

When an air distribution screen area is pressed, the screen icon will illuminate.

Dashboard air vents

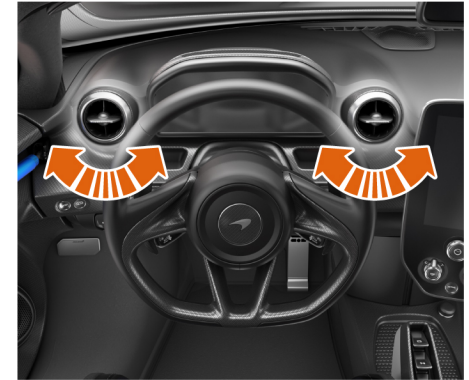



Turn a quarter turn in either direction until the vent is open or closed.

Comfort and Convenience

Climate Control

Heated mirrors

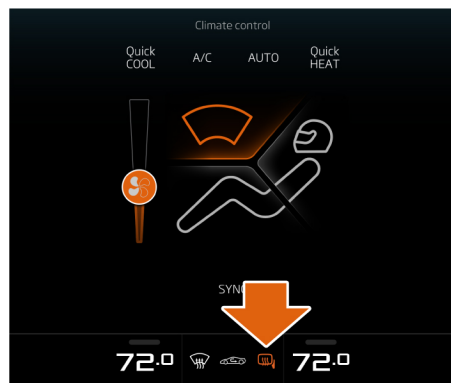

 **WARNING:** Remove any accumulated ice or snow from the mirrors and windows before setting off. Impaired visibility could endanger yourself and others.

Touch the button to heat the exterior mirrors. The icon on the button will illuminate. To switch off, touch the button again and the icon on the button will be extinguished.

The heated mirrors switch off automatically after a set time, depending on the outside air temperature.

Comfort and Convenience

Lo-Jack Stolen Vehicle Recovery System

Overview

This section provides an overview of the Lo-Jack Vehicle Recovery System. If you need further clarification, contact your McLaren Retailer.

The Lo-Jack system comprises a small, silent radio transmitter installed in the vehicle to aid locating the vehicle in the event of a theft.

Once installed, the transmitter and the Vehicle Identification Number (VIN) are registered with the National Crime Information Center (NCIC) database, used by federal, state and local law enforcement agencies throughout the USA.

In the event of a theft

1. If you discover the vehicle has been stolen, report the theft to the local Police authority including the details of the VIN.
2. The theft is then recognized by the NCIC database which automatically triggers the activation of the Lo-Jack transmitter in the stolen vehicle.
3. Once the transmitter is activated, it will transmit a signal which can be detected by tracking units fitted to Police vehicles within a 2-3 mile radius.
4. When the Police secure the stolen vehicle, arrangements will have to be made with you for the vehicle to be collected. The Police may recover the vehicle to a secure compound for further investigation.

You may be liable for any recovery and storage charges.

Comfort and Convenience

Interior Features

Interior lighting



1. Left-hand reading light on/off/gradual touch pad
2. Interior lighting on/off touch pad
3. Right-hand reading light on/off/gradual touch pad

For full interior lighting, press the touch pad (2) quickly.



NOTE: Ensure that the interior lighting is switched off when leaving the vehicle.

To switch off the interior lighting, press touch pad (2) again.

Reading lights

Press touch pads (1) or (3) to switch on the desired reading light.

For gradual reading illumination, press and hold touch pad (1) or (3) until desired lighting is achieved.

Press touch pads (1) or (3) again to switch off the respective reading light.

Courtesy lighting

The interior of your McLaren is lit in the following areas:

- the driver's and passenger's footwells, when you open a door
- the center console (illuminated by a light within the overhead console), if the ignition is on
- the interior door handles, if the ignition is on

The courtesy lighting extinguishes 60 seconds after the doors have been closed or when the ignition is switched on.

Ambient lighting

The ambient lighting can be adjusted for color and intensity using the McLaren Infotainment System (MIS) settings menu. See Light settings, page 4.13.

Comfort and Convenience

Interior Features

Entry lighting

Entry lighting improves visibility and security when you approach the vehicle.

When the vehicle is unlocked, the headlamps and tail lamps illuminate for a period of time or until the ignition is switched on.

To set the entry lighting duration, see Light settings, page 4.13.

Exit lighting

Exit lighting improves visibility and security when you leave the vehicle by illuminating the headlamps and tail lamps for a period of time.

To set the exit lighting duration, see Light settings, page 4.13.

Exit lighting can also be activated manually by pulling the turn signal stalk towards you momentarily three times. The vehicle must be in an Awake mode with the ignition off.


Every additional pull on the turn signal stalk whilst the exit lighting has been activated will increase the time increment by an additional 15 seconds.

Once the vehicle has been exited, locked and completed its set operating time, the exit lighting will be extinguished and the function will not be available, unless it is switched on in the McLaren Infotainment System (MIS) or is manually activated again through the turn signal stalk.

Owner documentation

Your McLaren is equipped with the following documents:

- Service and Warranty Guide - provides information on what to do and who to contact in the event of problems.
- Owner's Handbook - provides information on how to operate your McLaren.

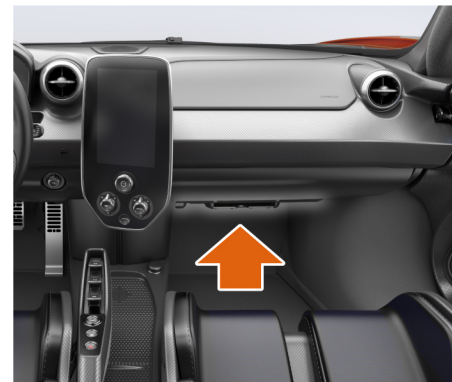

The Service and Warranty Guide can be stored in a slot under the dashboard on the passenger's side.

Comfort and Convenience

Interior Features

Sun visors



Fold the sun visors down to protect your eyes from bright sunlight as you are driving.

Vanity mirrors

Slide the panel on the sun visors to reveal a personal mirror.

Accessory power sockets

Front service area accessory socket



To access the front service area, see Front service cover, page 1.08.

The front service area accessory socket has a maximum load rating of 20 Amps and is the only one that can be used to connect the McLaren supplied battery charger.

i NOTE: Do not leave any device (except the McLaren supplied battery charger), that draws power from the vehicle, connected to the socket for extended periods without the engine running. This may lead to excessive battery drain.

Interior accessory socket



The interior accessory socket is located in the center console and has a maximum load rating of 15 Amps.

i NOTE: Do not connect a battery charger to the interior accessory socket.

Comfort and Convenience

Interior Features

USB sockets

Media USB sockets



The media USB sockets are located inside the center console stowage compartment.

The two media USB sockets can be used to connect USB flash drives, iPods and other compatible MP3 players.

These sockets can also be used to charge compatible cell phones or media devices.

i **NOTE:** The USB1 port has a high power output suitable for charging mobile devices.

MSO Push-to-Drink System

The MSO Push-to-Drink System allows the driver to drink when the vehicle is in motion whilst wearing a helmet.


The drink dispenser unit is located between the driver and passenger seats and pumps fluid to the driver upon request. The drink dispenser button is located on the seat harness and can be adjusted to suit the driver's preference by re-positioning the Velcro straps.

The delivery hose can be routed to the helmet to suit the driver's preference using quick release connectors and self adhesive clips if required. The hose is fitted and secured into the helmet as required.



WARNING: Ensure the cable and delivery hose positioning does not impede driver's control of the vehicle.

Removing the drink bottle

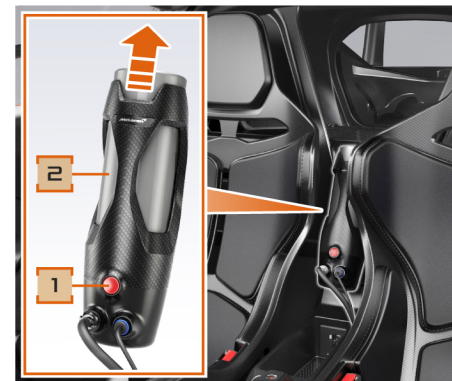

1. Press the bottle release button (1)
2. Pull the bottle upwards to release from the dispenser (2)

Installing the drink bottle

1. Insert the full bottle into the dispenser, an audible click can be heard when the bottle is fully located.

Comfort and Convenience

Interior Features

Cleaning the system



NOTE: After each use, the condition of the drink bottle(s), delivery hose and connectors should be inspected. Damaged items should not be re-used. Drink bottles should not be stored with fluid left inside. Sterilize and empty the system before storage, re-sterilize prior to use. Drink bottles should be stored with the caps removed.

1. Rinse the drink bottle(s) and fill with mineral water



NOTE: Do not fully empty the drink bottle.

2. Insert the drink bottle into the dispenser and operate the system to flush

Emptying the system

1. Place an empty drink bottle in to the dispenser.
2. Connect the drink tube and place in a container.
3. Operate the system for 30 seconds or until the all fluid has been removed.



NOTE: The delivery hose can be disconnected to aid drying.

Maintaining Your McLaren

Fluid Topping Up.....6.02

Engine oil.....	6.02
Gearbox oil level.....	6.04
Coolant.....	6.04
Power steering fluid.....	6.05
Brake fluid.....	6.06
Windscreen washers.....	6.07

Emergency Equipment.....6.08

Safety.....	6.08
Overview.....	6.08
Warning triangle.....	6.08
First aid kit.....	6.09
Tire sealant.....	6.09
Towing eye.....	6.10
Fuel funnel.....	6.10
Rear service cover release tool.....	6.10
Center lock nut torque tool.....	6.11
Locking ring removal tool.....	6.11
Manual door release key holder.....	6.11
Fire extinguisher.....	6.12

Battery Care and Maintenance.....6.13

Safety.....	6.13
Charging the battery.....	6.13
Boost starting from another vehicle.....	6.14

Fuses.....6.15

Fuse replacement.....	6.15
Main fuse box.....	6.15
Secondary fuse box.....	6.18

Battery fuse box.....	6.20
-----------------------	------

Lighting.....6.21

Vehicle lights.....	6.21
---------------------	------

Manual Unlocking and Opening.....6.22

Unlocking - discharged battery.....	6.22
Starting the vehicle.....	6.23
Door opening from inside - discharged battery.....	6.24
Replacing key fob battery.....	6.24
Opening front service cover - discharged battery.....	6.25

Washers and Wipers.....6.28

Replacing the wiper blades.....	6.28
---------------------------------	------

Wheels and Tires.....6.30

Wheels and tires.....	6.30
Deflated tire.....	6.34

Vehicle Care.....6.36

Washing your McLaren.....	6.36
Cleaning the interior.....	6.37
Car cover.....	6.38

Raising the Vehicle.....6.39

Vehicle lifting points.....	6.39
-----------------------------	------

McLaren Assistance.....6.40

McLaren assistance.....	6.40
Replacement battery.....	6.40
In the event of a breakdown.....	6.40
Towing for recovery.....	6.41

Maintaining Your McLaren Fluid Topping Up

Engine oil



The engine uses approximately 0.1 quarts of oil for every 625 miles (1,000 km), depending on your style of driving. The oil consumption may be higher than this when the vehicle is new or if you frequently drive at high engine speeds.


You will only be able to estimate the oil consumption after the vehicle has been driven for several thousand miles or kilometers.

i NOTE: Lubricant additives could damage the engine or gearbox. Damage caused by such additives is not covered by the vehicle warranty. Further information is available from your McLaren Retailer.

Checking the engine oil

1. Ensure the following conditions are met:
 - Vehicle stationary and positioned on a level surface.
 - Neutral selected and the foot brake applied (use left foot).

i NOTE: The foot brake must be applied for the entire duration of the oil level check.

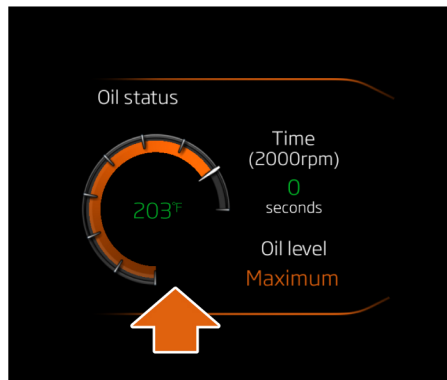


2. The level is viewed in the Vehicle Info section on the Folding Driver Display, see Oil status, page 3.07.
3. Start the engine and hold the engine speed at 2,000 rpm for 120 seconds. Allow the engine oil temperature to reach a temperature of 194°F (90°C).

i NOTE: The throttle pedal can be fully depressed as the engine speed will be electronically limited to 2,000 rpm.

4. When the timer has reached '0', the oil level will be shown on the Folding Driver Display along with a description.

i NOTE: The line on the display indicates the maximum oil level for 19 seconds after the oil level is read.

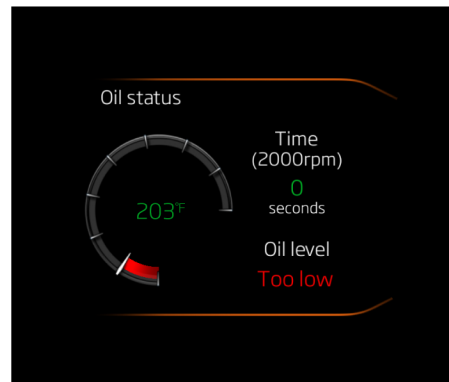

5. If the engine oil is below the target level, top up the oil in accordance with the following procedure.

Maintaining Your McLaren Fluid Topping Up

i NOTE: Once the oil level check has been completed and returned a value, do not continue to test the system. This may lead to aeration of the oil and return a false value. To end the oil level check, release the throttle pedal and return to the Vehicle info menu by moving the menu stalk back.

Topping up the engine oil

- 1. Open the rear service cover.
See Rear service cover, page 1.09.



- 2. Unscrew the engine oil filler cap.

- 3. Top up with the correct quantity of Mobil 1 FS 0W-40 engine oil. Refer to Top up quantity, page 6.03.
- 4. Check the Folding Driver Display to ensure level is correct.

i NOTE: If you have inadvertently overfilled the engine with oil, you must have any excess removed at your McLaren Retailer. The engine or the catalytic converter could be damaged.


- 5. Refit the engine oil filler cap.

i ENVIRONMENTAL: When topping up, take care not to spill any oil. Oil must not be allowed to escape into the soil or waterways.

i NOTE: Ensure the oil filler cap is refitted correctly.

- 6. Close the rear service cover
See Rear service cover, page 1.09.

Top up quantity

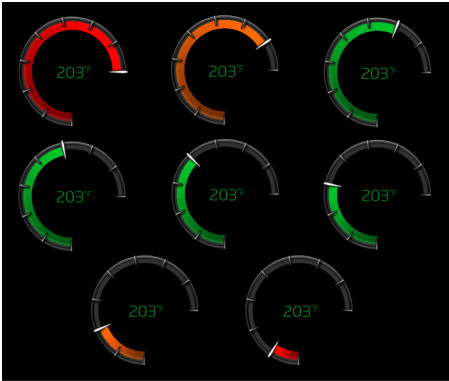

Based on the oil status displayed on the Folding Driver Display, add the required quantity of oil as shown in the following table, then check the engine oil level again.

Segments on display	Quantity of oil required
1 - red - under filled	0.90 liter
2 - amber - min.	0.70 liter
3 - green - OK	0 liter

Maintaining Your McLaren Fluid Topping Up

Segments on display	Quantity of oil required
4 - green - OK	0 liter
5 - green - OK	0 liter
6 - green - OK	0 liter
7 - amber - max.	0 liter
8 - red - overfilled	Contact your McLaren Retailer

Oil temperature

If the oil temperature is too high, a warning will be displayed on the Folding Driver Display. Reduce the vehicle and engine speed until the warning message disappears.

Gearbox oil level


If you experience oil loss or problems with gear shifts, have the gearbox checked by your McLaren Retailer.

i NOTE: The clutch and gearbox oil has mileage related service intervals. This maintenance can only be carried out by your McLaren Retailer.

Coolant

Coolant is a mixture of water and antifreeze/corrosion inhibitor. Only check the coolant when the vehicle is positioned on level ground and the engine is cool.

Topping up the coolant

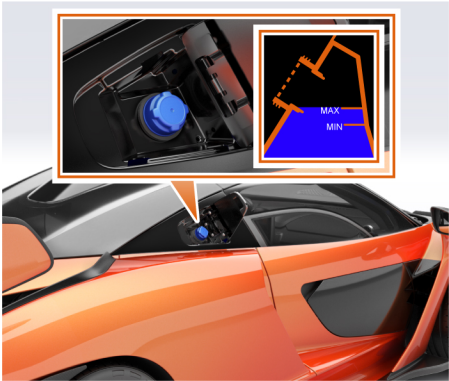



1. Press the upper edge of coolant filler flap, the latch will release and the flap will open.
2. Slowly unscrew the cap by half a turn counter-clockwise and allow excess pressure to escape.
3. Unscrew the cap fully and remove it.

Maintaining Your McLaren Fluid Topping Up

4. The coolant level is correct when it is at the top of the **MAX** marker.
5. Top up if necessary using only Mobil Antifreeze Extra.
6. Replace the cap by turning it clockwise to the stop.
7. Close the coolant filler flap.

Power steering fluid

 **WARNING: Power steering fluid is highly flammable. Fire, naked flames and smoking are prohibited when handling power steering fluid.**

 **WARNING: Power steering fluid is toxic. Keep containers sealed and away from children. If fluid is accidentally consumed, seek medical help straight away.**








Checking fluid level

1. Switch the ignition on and start the engine. Select Comfort handling mode, see Handling control, page 2.21.
2. Allow the engine to idle for 20 seconds before checking the fluid level.
3. Open the front service cover, see Front service cover, page 1.08.
4. Unscrew the cap counter-clockwise and remove it.
5. The power steering fluid level is correct when it is at the top of the **MAX** marker.
6. Top up if necessary using only Pentosin CHF202 power steering fluid, contact your McLaren Retailer.
7. Replace the cap.
8. Close the front service cover, see Front service cover, page 1.08.

Maintaining Your McLaren Fluid Topping Up

Brake fluid

-  **WARNING:** Brake fluid is highly flammable. Fire, naked flames and smoking are prohibited when handling brake fluid.
-  **WARNING:** Brake fluid is toxic. Keep containers sealed and away from children. If fluid is accidentally consumed, seek medical help straight away.
-  **WARNING:** Only use fluid from new, air tight containers.
-  **NOTE:** Avoid spilling brake fluid, it is harmful to painted surfaces. Any spillages must be removed immediately with a mixture of car shampoo and water.
-  **NOTE:** The engine must be switched off before carrying out the brake fluid check and top up process.



Checking fluid level

1. Open the front service cover, see Front service cover, page 1.08.
2. Unscrew the cap counter-clockwise and remove it.
3. The brake fluid is correct if the level just covers the base of the filter in the filler neck.
4. Top up if necessary using only new Pentosin DoT 5.1 brake fluid.
5. Replace the cap.
6. Close the front service cover, see Front service cover, page 1.08.

Maintaining Your McLaren Fluid Topping Up

Windscreen washers

⚠ WARNING: Some washer fluids are highly flammable. Fire, naked flames and smoking are prohibited when handling washer fluid.

⚠ WARNING: Washer fluid is toxic. Keep containers sealed and away from children. If fluid is accidentally consumed, seek medical help straight away.

i NOTE: McLaren recommend the use of Mobil screenwash concentrate.

i NOTE: Add washer fluid to the reservoir all year round.

The reservoir for the windscreen washers is located in the front service area.

The reservoir has a capacity of approximately 1.2 quarts.

Checking fluid level


1. Open the front service cover, see Front service cover, page 1.08.
2. Mix a solution of screenwash concentrate and water in a container before adding to the reservoir. Concentration of the washer solution should be mixed to suit the outside temperatures.
3. Open the reservoir cap, top up the reservoir with washer fluid and close the cap.
4. Close the front service cover, see Front service cover, page 1.08.



Maintaining Your McLaren Emergency Equipment

Safety

Before using the emergency equipment, familiarize yourself with the following safety information.

 **WARNING:** Always ensure the emergency equipment supplied is used in the proper manner and for the purpose it was designed. Always use the emergency equipment in a safe and responsible manner and be aware of other road users.

Overview



 **NOTE:** The towing eye is supplied fitted inside the first aid kit case, the fuel funnel is supplied with the vehicle.


Warning triangle



The warning triangle (1) is located behind the driver's seat.

Maintaining Your McLaren Emergency Equipment

Setting up the warning triangle

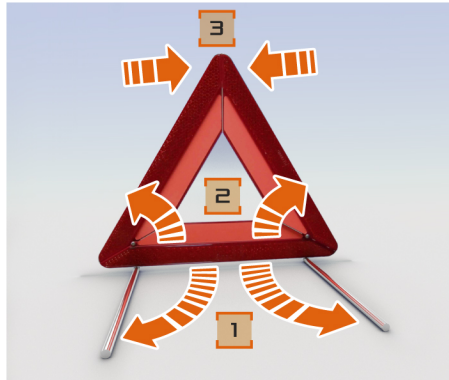

Fold the legs (1) sideways from the bottom.

Pull side reflectors (2) upwards to form a triangle and lock them at the top using press-stud (3).

Place the warning triangle at an appropriate distance from the vehicle to warn other traffic of a breakdown.

First aid kit



The first aid kit (2) is located behind the driver's seat.

i NOTE: Check the expiry dates of the first aid kit materials every 12 months, and replace them if necessary.

Tire sealant



The tire sealant (3) is located behind the driver's seat.

For instructions on how to use the tire sealant, see Deflated tire, page 6.34.

i NOTE: Check the expiry date of the tire sealant every 12 months, and replace if necessary.

Maintaining Your McLaren Emergency Equipment

Towing eye



The towing eye (4) is located inside the first aid kit case behind the driver's seat.

i NOTE: Your McLaren is equipped with a front towing eye mounting only. It is not possible to tow other vehicles.

For information on installing the towing eye, see Towing eye and mounting, page 6.41.

Fuel funnel



The fuel funnel (5) is supplied with the vehicle.

i NOTE: Only use the fuel funnel when filling the vehicle with fuel from sources other than a fuel pump at a gas station. Do not use the fuel funnel when topping up coolant, engine oil or any other fluids in the vehicle.

Rear service cover release tool



The rear service cover release tool (6) is located inside the first aid kit case behind the driver's seat.

Maintaining Your McLaren Emergency Equipment

Center lock nut torque tool



The center lock nut torque tool (7) is located inside the accessories bag, behind the driver's seat.

Locking ring removal tool



The locking ring removal tool (8) is located inside the accessories bag, behind the driver's seat.

Manual door release key holder



The manual door release key holder (9) is supplied with the vehicle.

i NOTE: The manual door release key holder is used to assist with turning the mechanical key in order to gain access to the vehicle if the vehicle battery or key fob battery has become discharged. Therefore, the manual door release key holder should not be kept inside the vehicle.

Maintaining Your McLaren Emergency Equipment

Fire extinguisher



The fire extinguisher is located below the passenger seat.

Release the retaining strap and remove the fire extinguisher.

To operate, follow the manufacturer's instructions on the side of the fire extinguisher.

i **NOTE:** The fire extinguisher must be checked every 12 months or it may fail in an emergency. Once the extinguisher is used it will have to be replaced.

Maintaining Your McLaren

Battery Care and Maintenance

Safety

Before using the battery charger, familiarize yourself with the following safety information.

WARNING: Your McLaren is fitted with a lithium-ion battery. Only a lithium-ion battery charger can be used on this type of battery. Contact your McLaren Retailer for more information.

WARNING: The lithium-ion battery fitted to your McLaren is sealed for life and no attempt should be made to break the battery seal to inspect the battery cells.

WARNING: Leave a suitable lithium-ion battery charger connected to the lithium-ion battery and switched on during periods when your vehicle is not in regular use. This will help maintain and prolong the life of the battery.

WARNING: Before use, check that all cables are in good condition; do not use cables that are damaged.

Ensure that all cables are kept away from sharp edges, are not pinched or trapped and are not close to hot surfaces or water.

Never charge a damaged battery. The battery must only be charged in a well ventilated area; the charger must never be covered or placed on the battery.

Do not place any metal objects on a battery. You could cause a short circuit and the battery could ignite. Keep the charger out of reach of children at all times.

Charging the battery

NOTE: To maintain your lithium-ion battery in optimum condition, always leave the McLaren supplied battery charger connected to the battery and switched on during periods when your vehicle is not in regular use.

NOTE: Do not connect the battery charger to the interior accessory socket.



Refer to the instructions supplied with the battery charger. The charger connects to the accessory socket under the front service cover, see Front service cover, page 1.08.

Maintaining Your McLaren

Battery Care and Maintenance

Boost starting from another vehicle

Contact your McLaren Retailer.

Maintaining Your McLaren Fuses

Fuse replacement

⚠ WARNING: Fuses protect the vehicle's electrical systems. The failure of any fuse will render the system it protects inoperative. Use replacement fuses of the same rating and type. Incorrect fuse ratings can overload a system and cause a fire or malfunction. Blown fuses should be replaced and no attempt should be made to repair a blown fuse.

i NOTE: Before removing a fuse, turn off all electrical equipment and switch off the ignition.

There are three fuse boxes fitted to your McLaren.

Fuse Box	Location
Main fuse box	Behind a panel in the rear bulkhead, behind the left-hand seat.
Secondary fuse box	Below the dashboard on the passenger's side.

Battery fuse box	On top of the battery.
------------------	------------------------


Main fuse box

Main fuse box access



1. To access the main fuse box:
 - Slide the seat forwards

Maintaining Your McLaren Fuses

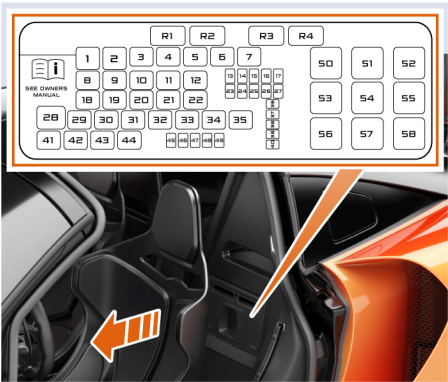

2. Release the two lower clips securing the panel to the bulkhead and remove the panel.
3. Refer to the fuse specification to determine which fuse protects the non-functioning electrical system, see Main fuse box fuse specification chart, page 6.16.

i NOTE: A label identifying the fuses is attached to the inside of the access panel.

4. Remove the appropriate fuse and replace it with a fuse of the same value as the original. If in doubt, check the fuse specification chart.
5. Fit the access panel by inserting the two upper retaining clips in the bulkhead and securing with the two lower clips.

i NOTE: If a replacement fuse does not solve the electrical problem, or it fails immediately, contact your McLaren Retailer.

Main fuse box fuse specification chart

No.	Amps	Circuit protected
F1	60	Right-Hand Secondary Air Pump
F2	60	Left-Hand Secondary Air Pump
F3	-	-
F4	-	-
F5	30	Transmission Control Unit

No.	Amps	Circuit protected
F6	30	Transmission Control Unit
F7	30	Starter
F8	-	-
F9	-	-
F10	-	-
F11	-	-
F12	20	Evac Pump
F13	5	Engine Control Module
F14	5	Permanent Battery
F15	10	Relays
F16	15	Audio Amplifier
F17	3	Door Locking Switch
F18	50	ECU Main Relay Feed
F19	40	Fuel Pump

Maintaining Your McLaren Fuses

No.	Amps	Circuit protected
F20	-	-
F21	-	-
F22	40	Fuel Relay
F23	5	Tilt Sensor
F24	20	Infotainment Control Unit
F25	10	Driver's/Passenger's Door Latch
F26	3	Auxiliary USB Board
F27	15	Audio Amplifier
F28	-	-
F29	-	-
F30	-	-
F31	50	Cooling Fan Left-Hand
F32	50	Cooling Fan Right-Hand

No.	Amps	Circuit protected
F33	-	-
F34	-	-
F35	-	-
F36	20	Battery Relay
F37	15	Canister Purge, Lambda Sensors, Cooling Fan Relay Coil
F38	15	Fuel Injection and Ignition - Left-Hand Bank
F39	15	Fuel Injection and Ignition - Right-Hand Bank
F40	10	Engine Ancillaries
R41	-	Evac Pump
R42	-	-
R43	-	-
R44	-	-

No.	Amps	Circuit protected
F45	10	Electrical Thermostats, Camshaft Actuators
F46	3	Output Shaft Speed, Even Gear Shaft Speed
F47	3	Input Shaft Speed, Odd Gear Shaft Speed
F48	20	ESIB
F49	5	Starter
R50	-	-
R51	-	-
R52	-	Fuel Pump Relay
R53	-	Transmission Control Unit
R54	-	Transmission Control Unit
R55	-	Starter
R56	-	Secondary Air Pump RH
R57	-	-


Maintaining Your McLaren Fuses

No.	Amps	Circuit protected
R58	-	ECU Main relay Feed

Secondary fuse box

Secondary fuse box access

1. Access to the secondary fuse box is gained by lowering the closing panel below the dashboard on the passenger's side.

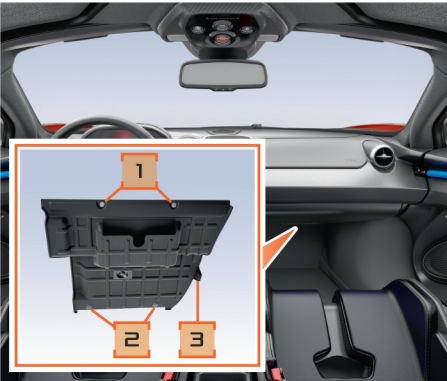

2. Remove the two front screws (1).
3. Remove the side fixing clip (2).

i NOTE: If you wish to lower the closing panel fully, also remove the two clips at the rear (3).

4. Lower the closing panel, sufficiently to gain access to the fuse box.

i NOTE: Do not lower the closing panel further than necessary as it could be damaged.



5. Remove the appropriate fuse and replace it with a fuse of the same value as the original. If in doubt, check the fuse specification chart, see Secondary fuse box fuse specification chart, page 6.19.
6. Raise the closing panel into position, fit the clip and fit and tighten the two front screws.

Maintaining Your McLaren Fuses

Secondary fuse box fuse specification chart

No.	Amps	Circuit protected
F1	20	Driver's Door
F2	20	Passenger's Door
F3	25	Lights
F4	35	Lights
F5	35	Body
F6	35	Body
F7	35	Alarm
F8	-	-
F9	-	-
F10	-	-
F11	-	-
F12	-	-
F13	-	-

No.	Amps	Circuit protected
F14	5	Transmission Control Unit
F15	10	Air Conditioning
F16	3	Alarm Control Unit
F17	3	Tracker
F18	7.5	Alarm
F19	5	Central Display
F20	3	Transmission Control Unit Relays
F21	15	Display Control Unit
F22	-	-
F23	5	Driver Display
F24	10	Development Connector
F25	10	OBD2 Diagnostics
F26	-	-

No.	Amps	Circuit protected
F27	-	-
F28	-	-
R29	-	Transmission Control Unit
R30	-	Transmission Control Unit

Maintaining Your McLaren Fuses

Battery fuse box

Battery fuse box access

Contact your McLaren Retailer.

Maintaining Your McLaren Lighting

Vehicle lights


Lighting is an important aspect of vehicle safety. You must ensure that all lights are working at all times.

All the external lights on your McLaren use the latest light-emitting diode technology.

Unlike traditional filament bulbs, these lights have a long life and low power consumption while providing the same amount of illumination.

Headlamps

Your McLaren is fitted with light-emitting diode headlamps. These provide greater visibility on both lo and hi beams, especially during adverse weather and driving conditions.

 **NOTE:** Do not attempt to change light-emitting diode yourself, as you could damage the vehicle lighting systems. In case of failure, contact your McLaren Retailer.

Maintaining Your McLaren Manual Unlocking and Opening


Unlocking - discharged battery

If you are unable to lock or unlock the vehicle because the vehicle battery or key fob battery has become discharged, use the mechanical key.

Unlocking and opening procedure



1. Push against the thumb indent and slide the back cover away from the key fob.

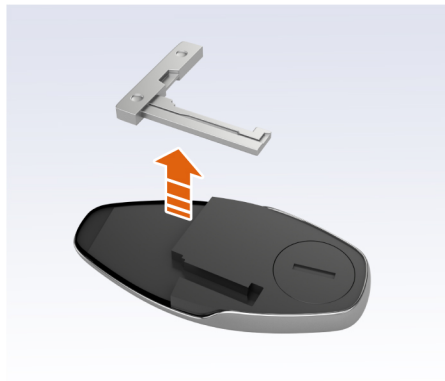

2. Release and remove the mechanical key from the key fob.



3. Insert the mechanical key into the manual door release key holder.

See Manual door release key holder, page 6.11

Maintaining Your McLaren Manual Unlocking and Opening



4. Insert the mechanical key into the lock and, using the manual door release key holder for leverage, turn the key counter-clockwise until mechanical resistance is preventing full release of the door.
5. Apply pressure to the latch area of the door (to counteract pressure of the door seals), and turn the key further to release the door.
6. Fit the mechanical key back into the key fob.

i NOTE: Unlocking the vehicle using the mechanical key will activate the anti-theft system and may cause the alarm to sound. Once the door is open, place the key fob on the section of the center console immediately behind the switch panel within 10 seconds. The vehicle will recognize the key fob and stop the alarm from sounding.

7. If the key fob battery has become discharged, replace the battery at the earliest possible opportunity, see Replacing key fob battery, page 6.24.
8. Return the manual door release key holder to a safe storage location.

Starting the vehicle



If the key fob battery has become discharged, and the engine will not start, place the key fob on the section of the center console immediately behind the switch panel.

In this position the vehicle is able to sense the presence of the valid key fob and the vehicle can be started and driven.

Replace the key fob battery at the earliest possible opportunity, see Replacing key fob battery, page 6.24.

Maintaining Your McLaren Manual Unlocking and Opening

Door opening from inside - discharged battery



To release a door from inside, release the manual door release strap retainer and pull the strap.

The door latch will then release, allowing the door to be partially raised before it automatically swings outwards and upwards.

To refit the release strap, feed the strap into its holder and snap the retainers into place.

i NOTE: Only use this strap when the battery has become discharged.


- i** NOTE: Please ensure that both of the retainers on the manual door release strap are fitted correctly, and in the correct positions on the door aperture after use.
- i** NOTE: Please ensure that the manual door release strap is fully retracted before fitting the retainers to their door aperture locations.

Replacing key fob battery



1. Push against the thumb indent and slide the back cover away from the key fob.

Maintaining Your McLaren Manual Unlocking and Opening

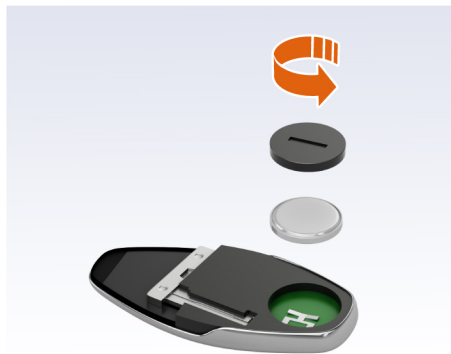

2. Unscrew the battery cover and remove the discharged battery.
3. Install a new battery, ensuring that the polarity is correct.

i NOTE: Handle the battery as little as possible. Moisture and oil from fingers can affect battery life and cause corrosion of the contacts. Only hold the battery on the edges.


4. Refit the battery cover, ensuring that the seal is seated correctly.
5. Refit the key fob the back cover.

Opening front service cover - discharged battery

Opening procedure



1. Push against the thumb indent and slide the back cover away from the key fob.

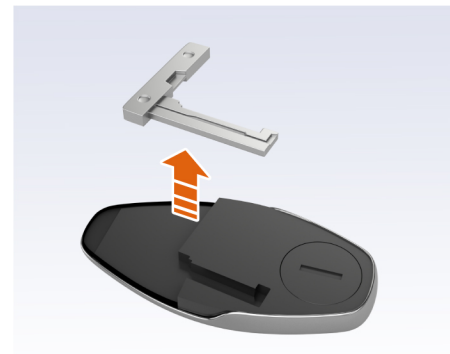

2. Release and remove the mechanical key from the key fob.

Maintaining Your McLaren Manual Unlocking and Opening




3. Insert the mechanical key into the manual door release key holder.
See Manual door release key holder, page 6.11



4. Insert the mechanical key into the lock and, using the manual door release key holder for leverage, turn the key counter-clockwise until mechanical resistance is preventing full release of the door.
5. Apply pressure to the latch area of the door (to counteract pressure of the door seals), and turn the key further to release the door.
6. Fit the mechanical key back into the key fob.

i NOTE: Unlocking the vehicle using the mechanical key will activate the anti-theft system and may cause the alarm to sound. Once the door is open, place the key fob on the section of the center console immediately behind the switch panel within 10 seconds. The vehicle will recognize the key fob and stop the alarm from sounding.

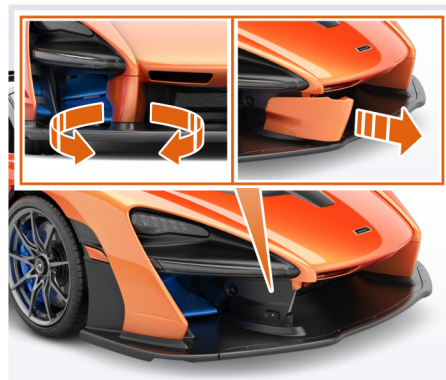

7. Release the rear edges and pull the cover forward to remove from the front bumper.

Maintaining Your McLaren Manual Unlocking and Opening



8. The mechanical lock is located in the front right-hand air duct.
Insert the mechanical key into the lock and, using the manual door release key holder for leverage, turn the key counter-clockwise to unlock and release of the front service cover.
9. Open the front service cover, the hinge will support it in the fully open position.
10. Return the manual door release key holder to a safe storage location.
11. Fit the mechanical key back into the key fob.
12. If the key fob battery has become discharged, replace the battery at the earliest possible opportunity, see Replacing key fob battery, page 6.24.

Maintaining Your McLaren Washers and Wipers

Replacing the wiper blades

⚠ WARNING: Ensure the ignition is switched off before you replace the wiper blades. The windscreen wipers could be set in motion and injure you.

⚠ WARNING: Replace the wiper blades every 12 months or the windscreen will not be wiped properly. You may not be able to observe the road and traffic conditions as a result and could cause an accident.

Parking the wiper blades

1. Press the STOP/START button once to switch on the ignition but **DO NOT** touch the brake pedal.
2. Pull the wiper control stalk towards you twice, the wipers will move to a winter park position and then to the service park position.

The winter park position locates the wiper arms vertically to aid water run-off and help prevent snow build-up.

The service park position locates the wiper arms in a convenient position for wiper blade replacement.

To remove the main wiper blade



1. Position the wiper blades in the service park position on the windscreen see Parking the wiper blades, page 6.28.
2. Lift the main wiper arm from the screen.
3. Rotate the wiper blade through 90° and remove in the direction of the arrow.

i NOTE: Do not lower the wiper arms onto the windscreen without the wiper blades fitted.

To install a new main wiper blade


1. Slide the wiper blade onto the wiper arm and rotate 90°.
- i NOTE:** Ensure the wiper blade is securely fitted in the wiper arm.
2. Lower the wiper arms onto the windscreen.
 3. Pull the wiper control stalk towards you once, the wipers will move back to the normal park position.

To remove the small wiper blade




Maintaining Your McLaren Washers and Wipers

1. Position the wiper blades in the service park position on the windscreen see Parking the wiper blades, page 6.28.
2. Lift the small wiper arm from the screen.
3. Depress the wiper blade clip and slide it out from the arm.

 **NOTE:** Do not lower the wiper arms onto the windscreen without the wiper blades fitted.

To install a new small wiper blade


1. Slide the wiper blade onto the wiper arm and ensure that the clip engages in the arm.

 **NOTE:** Ensure the wiper blade is securely fitted in the wiper arm.

2. Lower the wiper arms onto the windscreen.
3. Pull the wiper control stalk towards you once, the wipers will move back to the normal park position.

Maintaining Your McLaren Wheels and Tires

Wheels and tires


 **WARNING:** Have worn tires replaced in axle pairs and ensure the tires are fitted as specified. With worn tires, the driving stability of the vehicle will be adversely affected, especially when driving at high speeds. Consult your McLaren Retailer if you have had new tires fitted for information on the appropriate bedding in time based on your driving style.


- With new tires, avoid high speed cornering and excess speed.
- Only have wheels and tires of the same type and make fitted.
- Never use a tire which has been punctured and then repaired.
- Only have tires of the correct size fitted.
- Tires degrade over time due to the effects of ultraviolet light, extreme temperatures, high loads, and environmental conditions. It is recommended that tires are replaced every 6 years, or sooner if required.


McLaren recommend that you only use Pirelli summer or winter tires, see Wheel and tire sizes, page 7.08.


These tires provide the best possible performance in conjunction with the safety systems on your vehicle and have been specifically approved by McLaren.


McLaren cannot accept any responsibility for damage that may result from use of other tires and wheels. Further information about wheels and tires can be obtained from your McLaren Retailer.

 **WARNING:** Using tires other than those which have been recommended by McLaren, may contact the body work and adversely affect the handling. This may cause loss of vehicle control, resulting in serious personal injury or death. Noise levels and fuel consumption may also be adversely affected. In addition, when driving with a load or when using snow traction devices, they could cause contact between the bodywork and axle components. This could result in damage to the tires or the vehicle.

 **NOTE:** Retreaded tires must not be used. Do not fit used tires if you have no information about their previous usage.


 **NOTE:** Modification to the brake system and wheels is not permitted, nor is the use of spacer plates or brake dust shields. Any such modifications will invalidate the vehicle warranty on the area modified.

 **NOTE:** A wheel change must be carried out at your McLaren Retailer. The vehicle could be damaged if it is jacked up incorrectly.

 **NOTE:** Store tires in a cool, dry place, preferably in the dark. Protect the tires from oil, grease and gasoline.

Maintaining Your McLaren Wheels and Tires

Tire markings

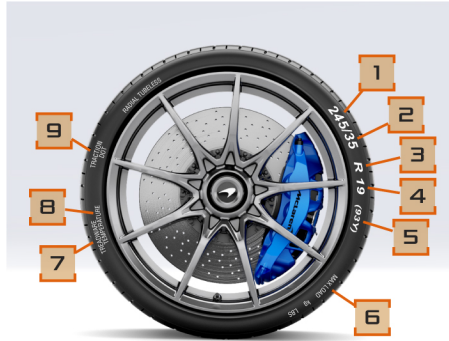

1. Width of tire in millimeters.
2. Tire profile given as percentage of tire width.
3. Indicates that the tire is radial ply.
4. Indicates the diameter of the wheel rim in inches.
5. The numbers denote load index and the letter indicates the speed rating. 91 indicates a weight of 1,350 lbs (615 kg) and Y indicates speeds over 186 mph (300 km/h).

6. Displays the maximum load which can be carried by the tire.
7. Treadwear grade number. The higher the figure the longer a tire will last.
8. The alpha character denotes resistance to heat. An 'A' rated tire offers most heat resistance.
9. Information about the manufacture of the tire. Contains place and date of manufacture.

Tires



WARNING: The tires must be mounted according to the labeling on the tire wall. The word 'OUTSIDE' must be on the outer edge of the tire when it is fitted to the wheel or the stability of the vehicle will be adversely affected, especially at high speeds.

Asymmetric tires



Asymmetric tires have a tread pattern that is different from one side of the tread to the other. This combination of tread offers better grip in both wet and dry conditions.

The outer tread features a larger stiffer tread pattern that aids with cornering stability. The inner tread pattern aids stability in wet conditions. A central groove in the tire aids straight line stability.



WARNING: Only tires recommended by McLaren are to be fitted to the vehicle.

Maintaining Your McLaren Wheels and Tires

⚠ WARNING: The tires must be mounted according to the labeling on the tire wall. The benefits of asymmetric tires will only be available if the tires are fitted correctly.

Trofeo R tires

The driver's skill level must be commensurate with the vehicle performance levels in the upper range limits due to increased safety risks.

i NOTE: Due to ultra high performance design and the particular manufacturing process of these tires, they must always be replaced in axle sets (front and rear) regardless of wear or mileage. Failure to do so may have a negative affect on the handling characteristics of the vehicle.

The main features of the Trofeo R tires are a reduced tread depth and a special tread pattern and carcass compared with other tires.

⚠ WARNING: Risk of accident from worn tires. Trofeo R tires have a smaller tread depth, and thus can reach their wear limit sooner. It is important to check tire wear frequently to avoid risk of serious personal injury or death from worn tires.

⚠ WARNING: Risk of accident through loss of road surface contact, control over the vehicle and braking ability, leading to serious personal injury or death. The reduced tire tread depth means that there is an increased risk of hydroplaning on wet roads. When driving on wet or mud-covered roads reduce speed significantly.

i NOTE: Notify anyone using your car of these characteristics and possible effects.

Inspecting wheels and tires

At least every 7 days, check the tires for cuts, punctures, tears, bumps, deformation and cracks. Check wheels for severe corrosion. Damaged wheels could cause a loss of tire pressure.

Regularly check the tire tread depth and the condition of the tread across the whole width of the tire. Turn the front wheels to full lock in order to inspect the inner tread.



When the tread is worn to 1.6 mm, the wear indicators appear on the surface of the tread pattern, producing a continuous band of rubber across the width of the tire. Tires must be replaced as soon as the wear indicator becomes visible, or sooner if legislation dictates replacement at a greater tread depth.

i NOTE: It is recommended that you always have your tires replaced by your McLaren Retailer. Each wheel has a tire pressure sensor connected to the tire valve. In order to avoid damage to the sensor, the tires must be replaced using the correct procedure.

Maintaining Your McLaren Wheels and Tires

⚠ WARNING: Tire grip decreases rapidly on wet or icy roads, particularly when the tread depth is close to the minimum. You could lose control of the vehicle and cause an accident due to the reduced grip of the tires. Reduce your speed and drive with greater care.

i NOTE: If tread wear is uneven across the tire, or becomes excessive, the wheel alignment should be checked.

Regularly check the pressure of all your tires and correct the pressure as necessary, see Tire pressures, page 7.09.

All wheels must have a valve cap fitted to protect the valve against dirt and moisture.

Driving precautions


When parking your McLaren, ensure that the tires do not contact the kerb or other obstacles. If it is necessary to drive over kerbs, speed humps or potholes, drive slowly and approach the obstacle at a shallow angle or the tires could be damaged.

While driving, pay attention to vibrations, noises and unusual handling characteristics, e.g. pulling to one side. This may indicate that the tires or wheels are damaged. If you experience anything unusual, reduce your speed and stop the vehicle as soon as safety permits to check the tires and wheels for damage. If you find no signs of damage, have the tires and wheels inspected at your McLaren Retailer.

Tire pressures

⚠ WARNING: Tire pressure that is too high or too low has a negative effect on the vehicle's active safety, this could lead to an accident. Frequently check the pressure of all tires, particularly prior to long trips, and correct the pressure as necessary.

⚠ WARNING: If the pressure in a tire drops repeatedly, inspect the tire for foreign objects or signs of punctures, check the valve for air leaks.

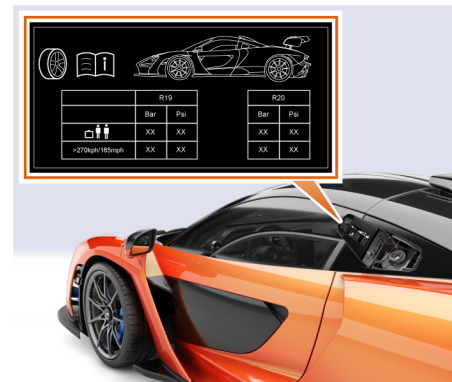

For the tire pressures for various operating conditions, see Tire pressures, page 7.09. They are also printed on a label attached to the fuel filler flap.

If the vehicle is to be driven at high speeds, the tire pressure must be checked, and if necessary adjusted.

i NOTE: In some markets, the tire pressure label is attached to the base of the driver's side door.

i NOTE: Tire pressures given for low loads are minimum values which offer optimum ride comfort.

Maintaining Your McLaren Wheels and Tires

Increased pressures for higher loads will not adversely affect the running of the vehicle, but ride comfort will be impaired.

Check the pressures when the tires are cold. If it is necessary to check the tires when they are warm, pressures will be higher. Do not let air out of warm tires to match the recommended cold tire pressures.

Driving with tire pressure that is too high or too low can:

- create a risk of tire failure with resultant accidents, causing injury or death.
- shorten the life of the tires.
- cause increased tire damage.
- have a negative effect on handling characteristics (e.g. by causing aquaplaning).



ENVIRONMENTAL: Check tire pressures at least every 7 days.

Interchanging wheels



WARNING: Only approved wheels with winter tires can be fitted to your McLaren as alternatives.

Deflated tire

Your McLaren is equipped with a container of tire sealant, which is located behind the driver's seat.

In the event of a puncture, follow the steps below to ensure your safety, and the safety of other vehicle occupants and other road users.

Repairing a puncture

1. Stop the vehicle as far away as possible from traffic and on a firm and level surface.
2. If on a public highway, switch on the hazard warning lamps, see Hazard warning lamps, page 1.31.
3. Apply the parking brake and select neutral.
4. Passengers should exit the vehicle safely and remain well away from the vehicle, the road and any traffic.
5. Place the warning triangle at an appropriate distance from the vehicle to warn other traffic of a breakdown, see Warning triangle, page 6.08.

Using the tire sealant



You can use the tire sealant to seal small punctures, particularly those in the tire's tread. The tire sealant can be used at ambient temperatures down to -4°F (-20°C).




WARNING: The tire sealant is unable to seal punctures if:

- there are cuts or punctures in the tire greater than 4 mm.
- the wheel rims are damaged.
- you have driven at very low tire pressures or with deflated tires.

Maintaining Your McLaren Wheels and Tires


Contact your McLaren Retailer immediately


Remove the tire sealant from behind the driver's seat and follow the instructions on the container.


 **NOTE:** If possible, locate the cause of the puncture and position the wheel so the puncture is at the lowest point to enable the sealant to be more effective.

Have the punctured tire replaced as soon as possible.

 **WARNING:** Have punctured tires replaced. McLaren do not recommend that punctured tires are repaired.


 **WARNING:** If the tire sealant comes into contact with your eyes or skin, immediately rinse thoroughly with clean water, change out of clothing which has been in contact with the tire sealant. If an allergic reaction occurs, contact a doctor immediately.

 **WARNING:** Keep the tire sealant out of reach of children. If tire sealant is swallowed, immediately rinse the mouth thoroughly and drink a large amount of water. Do not induce vomiting. Contact a doctor immediately. Do not inhale tire sealant fumes.




 **NOTE:** After using tire sealant, the tire valve, incorporating the tire pressure monitoring system sensor, will have to be replaced.


Maintaining Your McLaren Vehicle Care

Washing your McLaren


-  **ENVIRONMENTAL:** Some cleaning products contain chemicals that are hazardous to the environment. Always take precautions to prevent fluids from spilling and never use excessive quantities.

Hand washing your McLaren




-  **NOTE:** When cleaning the vehicle ensure water does not enter the exhaust system.
1. Pre-rinse the body thoroughly with a hose pipe held at a shallow angle to loosen any dirt and wet the paintwork ready for washing, avoiding direct spray on engine cover vents or exhaust pipes.
 2. Prepare a bucket of warm water and a good quality car shampoo. Refer to the shampoo manufacturer's instructions for dilution ratios.
 3. Working from the top of the vehicle down, wash the vehicle, ideally using a lambswool wash mitt rather than a sponge, use generous quantities of water paying particular attention to areas where dirt can accumulate. Use one wash mitt for the top of the vehicle (areas above the wheel arch line) and a separate mitt for areas below the wheel arch line.
 -  **NOTE:** Do not clean the wheels with these wash mitts.
 -  **NOTE:** Do not allow the shampoo to dry, it will leave streaks on the paint work.
 4. Tar spots and stubborn grease marks can be removed using white spirit or denatured alcohol. After cleaning, immediately wash the area with soapy water to remove all traces of spirit or alcohol.
 5. Once the vehicle is clean, work from the top of the vehicle down and rinse thoroughly using a hose pipe held at a shallow angle, avoiding direct spray on engine cover vents or exhaust pipes.
 6. Dry the vehicle using a chamois leather or drying towel.

-  **NOTE:** In case of signs of water in the engine bay, it is advised to drive the vehicle and warm the engine to operating temperature to dry off any excessive water from the engine.

Washing the wheels

-  **NOTE:** Wash the wheels frequently, do not allow brake dust to become ingrained in the wheel rim finish.

Wash the wheels using warm water, a good quality car shampoo and a wheel brush or wash mitt that is used only on the wheels. Apply polish to non-satin finished wheels to assist in keeping them clean.

-  **NOTE:** Never apply polish to satin finish wheels, this will result in localized glossy patches on the surface of the wheel.
-  **NOTE:** Do not use acid based wheel cleaners as these can damage the wheel rim finish leading to corrosion.
-  **NOTE:** Ensure the brakes are fully dried after the wheels have been cleaned before the vehicle is stored.

Maintaining Your McLaren Vehicle Care

Wiper blades and rubber seals

Clean wiper blades and rubber seals using warm water and a good quality car shampoo only. Do not use petroleum or alcohol-based cleaners.

Windscreen, windows and mirrors

Regularly clean all windows inside and out using a window cleaning solution. An automotive glass cleaner is recommended. After washing the vehicle with car shampoo containing wax, clean the outside of the windscreen with glass cleaner. Do not use abrasive cleaning compounds as mirror glass is particularly susceptible to damage.

Satin carbon fiber


Before cleaning satin carbon fiber, always test the cleaning solution on a concealed area. Use only detergent with water and a lint free cloth. Do not use abrasive cleaning products or polish.

Underbody cleaning

Salt used on roads to control snow and ice during the winter can collect on the vehicle's underbody, if this is not removed, corrosion can occur. During the winter months, regularly hose the underbody with water paying particular attention to the wheel arches and areas where dirt can accumulate.

Polishing

Occasionally polish the paint work using a good quality polish, following up with a protective wax.

 **NOTE:** Do not use cutting compound, color restoration products or polishes containing a harsh abrasive. These can scratch the surface and permanently damage the paint work.

Paint damage and rectification

Regularly inspect the paint work for damage. Any stone chips or deep scratches should be repaired as soon as possible. Contact your McLaren Retailer for advice.

Cleaning the interior

 **NOTE:** Your McLaren Retailer will be able to recommend products for cleaning the interior of your vehicle.

Carpet and fabrics

Before cleaning upholstery, always test the cleaning solution on a concealed area. Clean with diluted upholstery cleaner and a clean cloth.

Leather

Before cleaning leather, always test the cleaning solution on a concealed area. Clean with warm water and a non-detergent soap or a proprietary leather cleaner. Dry with a dry, clean, lint-free cloth. Do not use abrasive cleaning products or polish.

Do not polish the upper surfaces of the dashboard. Polished surfaces are reflective and may interfere with the driver's view. Clean with diluted upholstery cleaner, then wipe with a damp cloth.

Maintaining Your McLaren Vehicle Care

Carbon Fiber

Before cleaning visible carbon fiber, always test the cleaning solution on a concealed area. Clean with a propriety matt dashboard cleaner. Contact your McLaren Retailer for more information. Do not use abrasive cleaning products or polish.

Alcantara®

Dust the material with care. Moisten a soft cloth or a sponge with water, wring it thoroughly and run it over the whole Alcantara® material. Make sure not to wet it excessively; rinse the cloth or sponge and repeat as necessary.

Leave the material to dry overnight.

Once the material has dried, in order to restore the material, brush it delicately with a soft bristle brush.

Seat belts

Extend the belts and clean with warm soapy water only. Do not use any type of detergent or chemical cleaning product. Allow the belts to dry naturally while extended, preferably away from direct sunlight.

Instruments and display screens

Clean the Folding Driver Display and Central Infotainment Touchscreen using a damp cloth. Do not use abrasive cleaning products or polish.

Car cover

A car cover, suitable for use inside a garage, can be purchased from your McLaren Retailer.

McLaren recommend that the vehicle is covered if it is to be left in storage for periods over two weeks. Clean the vehicle inside and out, ensuring that it has fully dried, prior to fitting the cover.




NOTE: Allow the engine to cool before fitting the cover or the hot exhaust pipes could cause damage to the cover.

Maintaining Your McLaren

Raising the Vehicle

Vehicle lifting points

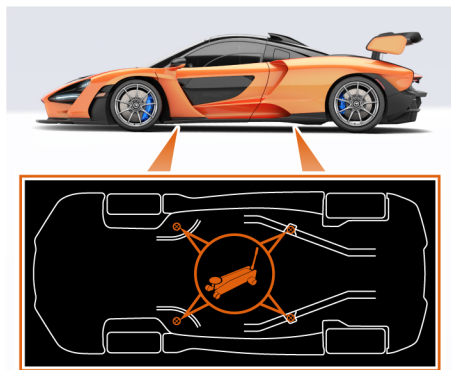

WARNING: Ensure the vehicle is correctly positioned on a jack or vehicle lift before raising the vehicle to a workable height. Always engage vehicle lift safety locks or use suitable stands to ensure your safety before working under the vehicle.

Refer to the illustration, and labels on the vehicle, for correct lifting locations.

Make this information available to any third parties who may be assisting in the recovery of your McLaren.



NOTE: Lifting the vehicle at any other points will damage the vehicle.



NOTE: Use a jack with a flat lifting platform and a rubber pad to protect the chassis from surface damage. Do not lift under a body panel.

Maintaining Your McLaren

McLaren Assistance

McLaren assistance

If your McLaren is immobilized, do not attempt to make your own arrangements for assistance.

Refer to your Service and Warranty Guide, this contains all the information you need.

Replacement battery

If your McLaren has been immobilized due to a fault with the vehicle battery, the battery must only be replaced with a lithium-ion battery of the correct specification.

In the event of a breakdown

In the event of a problem with your vehicle, contact your McLaren Retailer. If your McLaren Retailer is unavailable, contact the roadside assistance operator who is available 24 hours a day, 7 days a week.



NOTE: The contact details of your roadside assistance operator can be found in your Service and Warranty Guide.

The McLaren Retailer or roadside assistance operator will verify your identity and that of your vehicle, as well as determining your exact location.

They will then discuss the problem with you and, with your agreement, determine the best solution.


Maintaining Your McLaren McLaren Assistance

Towing for recovery

Your McLaren is equipped with a front towing eye mounting on each side of the vehicle.

- i** NOTE: Do not tow the vehicle, doing so could damage the gearbox. The towing eye must only be used to winch the vehicle onto a trailer or transporter for recovery purposes.
Do not use a rigid bar to tow the vehicle.

Towing eye and mounting

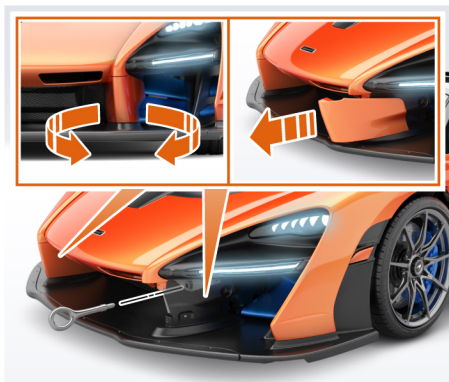

1. Release the rear edges and pull the cover forward to remove from the front bumper.

2. Screw the towing eye clockwise into the mounting hole, ensuring that it is screwed in to the full extent of the thread.

- i** NOTE: To avoid damage to the towing eye and the vehicle, it is important to ensure that the towing eye is in full contact with the mating surface of the front structure.

- i** NOTE: A winch cable/strap must be secured to the towing eye only or the vehicle could be damaged.

3. Remove the towing eye, stow it behind the driver's seat and refit the cover to the towing eye mounting as soon as the vehicle has been recovered.

Vehicle Data and Glossary

- Genuine McLaren Parts and Accessories.....7.02**
 - Overview.....7.02
- Vehicle Identification.....7.03**
 - Vehicle identification number (VIN).....7.03
- Data.....7.04**
 - Overview.....7.04
 - Vehicle operating temperatures.....7.04
 - Engine.....7.04
 - Maximum speeds in each gear.....7.05
 - Gear ratios.....7.05
 - Vehicle dimensions.....7.06
 - Vehicle weights.....7.08
 - Wheel and tire sizes.....7.08
 - Turning circle.....7.09
 - Tire pressures.....7.09
- Service Products, Fluids and Capacities.....7.11**
 - Service products.....7.11
 - Engine oil specification.....7.11
 - Fuel.....7.11
 - Coolant.....7.12
 - Power steering fluid.....7.12
 - Brake fluid.....7.13
- Technical Glossary.....7.14**
 - Technical glossary.....7.14

Vehicle Data and Glossary

Genuine McLaren Parts and Accessories

Overview

McLaren recommend that you only use genuine McLaren replacement parts and accessories. The use of non-genuine parts could have a detrimental effect on the vehicle's operation and safety. McLaren tests replacement parts and accessories, for reliability, safety and suitability. McLaren accepts no responsibility for the use of non-genuine parts on their vehicles, even if they have been independently approved.

In many countries, replacement parts and accessories are only officially approved for installation if they comply with legal requirements. All genuine McLaren replacement parts and accessories meet these requirements.

Genuine McLaren parts and accessories can be obtained from your McLaren Retailer where the parts will be professionally fitted.

Ensure that any accessories are suitable for your McLaren. Accessories which constitute a modification to the vehicle could invalidate the vehicle's warranty. This applies if they:

- change the vehicle type approved in the warranty.
- could endanger road users.

- adversely affect the vehicle's emissions and noise levels.

Always quote the vehicle identification number, you will find this on the vehicle identification plate, and in the bottom left-hand corner of the windscreen.

Vehicle Data and Glossary

Vehicle Identification

Vehicle identification number (VIN)



The vehicle identification number can be found on the bottom left-hand corner of the windscreen.

The number can also be found engraved on the body below the right-hand seat, stamped on a plate at the base of the driver's side door aperture and viewed in the Vehicle info section on the Folding Driver Display, see Vehicle identification, page 3.08.

VIN plate



The vehicle identification number plate also contains the following:

- Maximum permitted laden weight
- Maximum permitted laden weight including trailer
- Maximum permitted front axle laden weight
- Maximum permitted rear axle laden weight

Vehicle Data and Glossary Data

Overview

This section contains all the necessary technical data for your vehicle and applies to the vehicle's standard equipment. The data may therefore differ for vehicles with optional equipment. You can obtain further information from your McLaren Retailer.

Vehicle operating temperatures

Minimum ambient operating temperature	14°F (-10°C)
Maximum ambient operating temperature	+95°F (+35°C)

i NOTE: If the vehicle is used outside the minimum and maximum ambient temperatures, performance degradation may be experienced. McLaren disclaims any liability of the stated engine power not being achieved if the vehicle is being used outside of the stated temperature ranges or being used at altitude.

Engine

Rated output (kW) @rpm	588 @ 7,500
Rated output (PS) @rpm	800 @ 7,500
Rated torque (Nm) @rpm	800 @ 5,500-6,500
Rated torque (lb-ft) @rpm	590 @ 5,500-6,500
Number of cylinders	8
Displacement cm³	3,994
Maximum engine speed (rpm)	8,415

Vehicle Data and Glossary Data

Power to weight ratio (PS/tonne)	668
----------------------------------	-----

Vehicle emission label



The vehicle emission label can be found permanently affixed to the underside of the rear service cover.

The label contains:

- engine displacement
- a statement of compliance with the appropriate model year US EA regulations
- the exhaust emissions standard.

Maximum speeds in each gear

Gear	mph (km/h)
1st gear	50 (80)
2nd gear	76 (122)
3rd gear	105 (169)
4th gear	136 (218)
5th gear	173 (278)
6th gear	211 (340)
7th gear	197 (317)


Gear ratios

1st gear	3.982:1
2nd gear	2.612:1
3rd gear	1.905:1
4th gear	1.479:1
5th gear	1.160:1
6th gear	0.906:1
7th gear	0.686:1
Final drive	3.308:1

Vehicle Data and Glossary

Data

Vehicle dimensions

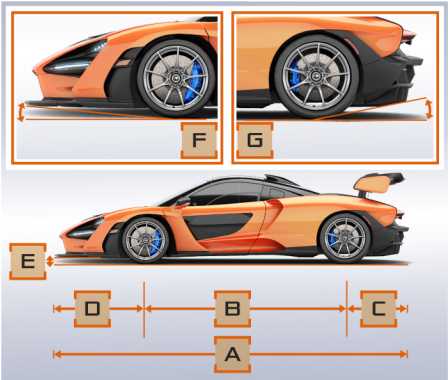

A	Vehicle length	15 ft 7 in (4,743 mm)
B	Wheelbase	8 ft 10 in (2,670 mm)
C	Rear overhang	2 ft 10 in (860 mm)
D	Front overhang	3 ft 12 in (1,214 mm)

E	Ground clearance (normal)	5 in (115 mm)
	Ground clearance (vehicle lift)	6 in (162 mm)
	Ground clearance (Race mode)	3 in (65 mm)
F	Approach angle (normal)	5.6°
	Approach angle (vehicle lift)	9°
	Approach angle (Race mode)	3.02°
G	Departure angle (normal)	11.7°
	Departure angle (vehicle lift)	12.27°
	Departure angle (Race mode)	6.65°



Vehicle Data and Glossary

Data

H	Vehicle width (doors closed, including mirrors)	7 ft (2,153 mm)
I	Vehicle height (doors closed) (normal)	4 ft (1,228 mm)
	Vehicle height (doors closed) (vehicle lift)	4 ft (1,238 mm)
	Vehicle height (doors closed) (Race mode)	3 ft 9 in (1,131 mm)



J	Vehicle width (doors open at widest point)	9 ft 6 in (2,893 mm)
K	Vehicle height (doors open) (normal)	6 ft (1,817 mm)
	Vehicle height (doors open) (vehicle lift)	5 ft 12 in (1,827 mm)
	Vehicle height (doors open) (Race mode)	5 ft 10 in (1,767 mm)

 NOTE: All dimensions are approximate.

Vehicle Data and Glossary

Data

Vehicle weights

Weight	lbs (kg)
Dry weight	2,641.0 (1,198.0)
Unladen weight (all fluids and 90% fuel)	2,885.9 (1,309.0)
Kerb weight (plus 165 lb driver)	3,062.2 (1,389.0)
Kerb weight distribution - front axle	1,286.1 (583.4)
Kerb weight distribution - rear axle	1,776 (805.6)
Maximum gross vehicle weight (GVW)	3,487.5 (1,581.9)
Maximum gross vehicle weight distribution - front axle	1,464.8 (664.4)

Maximum gross vehicle weight distribution - rear axle	2,022.7 (917.5)
---	-----------------

Wheel and tire sizes

Wheel sizes

Front wheels	9J x 19
Rear wheels	11.5J x 20

Summer tires

Front tires	
- Pirelli P Zero™ MC	245/35 R19
- Pirelli P Zero™ Trofeo R MC2	245/35 R19

Vehicle Data and Glossary

Data

Rear tires	
- Pirelli P Zero™ MC	315/30 R20
- Pirelli P Zero™ Trofeo R	315/30 R20

Winter tires

Front tires	
- Pirelli SottoZero™ MC	245/35 R19

Rear tires	
- Pirelli SottoZero™ MC	305/30 R20

Turning circle

Turning circle kerb-to-kerb	42 ft 4 in (12.9 m)
--------------------------------	---------------------

Tire pressures


Loading condition	Front wheels		Rear wheels	
	Bar	Psi	Bar	Psi
Normal use				
Pirelli P Zero™	2.2	32	2.2	32
Pirelli SottoZero™	2.2	32	2.2	32
Pirelli P Zero™ Trofeo R	2.0	29	2.0	29

Loading condition	Front wheels		Rear wheels	
	Bar	Psi	Bar	Psi
Speeds over 165 mph (270 km/h)				
All tires	3.0	44	3.2	46

The tire pressures can also be found on a label on the inside of the fuel filler flap.

Vehicle Data and Glossary

Data

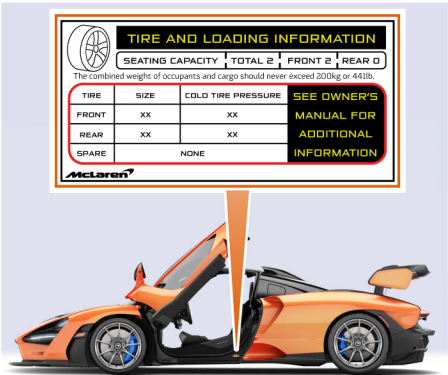


i NOTE: In some markets, the tire pressure label is attached to the base of the driver's side door aperture.


Vehicle Data and Glossary

Service Products, Fluids and Capacities

Service products

Service products are fuel, engine oil, coolant and brake fluid. McLaren recommend that you only use products tested and approved for McLaren. Damage resulting from using non-approved service products is not covered by the liability for material defects.

 **WARNING:** When handling, storing and disposing of any service products, please observe the relevant regulations. Failure to do so could endanger people and the environment. Do not allow service products to come into direct contact with your eyes or open wounds. Contact a doctor immediately if any service product is swallowed.

 **ENVIRONMENTAL:** Dispose of service products in an environmentally responsible manner.


Engine oil specification




Engine oil capacity	2.4 gal.
---------------------	----------


 **NOTE:** McLaren recommend only Mobil 1 FS 0W-40 engine oil.

You may obtain further information from your McLaren Retailer.

 **NOTE:** Do not use any lubricant additives. These could lead to increased wear and damage to the mechanical assemblies. Damage caused by additives, which are not approved, is not covered by the McLaren warranty.

Fuel

 **WARNING:** Fuel is highly flammable. Fire, naked flames and smoking are prohibited when handling fuels. Switch off the engine before refueling.

 **WARNING:** Do not allow fuel to come into contact with skin or clothing. Allowing fuels to come into direct contact with your skin or inhaling fuel vapors is damaging to your health.

For more information about fuel, see Recommended fuel, page 2.53.

Fuel tank

Total capacity	18.9 gal. (72 liters)
Capacity remaining when low level lamp illuminates	2.9 gal. (11 liters)

Vehicle Data and Glossary

Service Products, Fluids and Capacities

Coolant

Cooling system capacity	6.6 gal. (25.2 liters)
Antifreeze/corrosion inhibitor	Mobil Extra Antifreeze
Antifreeze quantity for protection to -4°F (-20°C)	3.3 gal. (12.6 liters)

The coolant is a mixture of water, antifreeze and corrosion inhibitor. It performs the following functions in the cooling system:

- Antifreeze protection
- Increased efficiency of the cooling system
- Offers anti-corrosion protection

i NOTE: Use Mobil Extra Antifreeze in all climates, all year round. If coolant is not used, the cooling system will not be sufficiently protected from corrosion and the cooling system efficiency will be reduced.

i NOTE: To prevent damage to the engine, only top up with a pre-mixed coolant that provides the desired level of antifreeze protection.

If antifreeze/corrosion inhibitor is present in the correct concentration, the boiling point of the coolant will be around 266°F (130°C). The antifreeze and corrosion inhibitor concentration in the cooling system should be approximately 50% ±5%. This will protect the cooling system against freezing in temperatures of -40°F (-40°C).

The antifreeze and corrosion inhibitor concentration in the cooling system should not exceed 55%, which provides antifreeze protection down to -49°F (-45°C), as a higher concentration will not dissipate heat as effectively.

If the vehicle is losing coolant, do not drive your vehicle and contact your McLaren Retailer.

Power steering fluid

Only use Pentosin CHF202 power steering fluid.

Vehicle Data and Glossary

Service Products, Fluids and Capacities

Brake fluid

Only use Pentosin DoT 5.1 brake fluid.

Over time, the brake fluid absorbs moisture from the air, this reduces its boiling point.



WARNING: If the boiling point of the brake fluid is reduced too much, vapor pockets may form in the brake system when the brakes are applied hard (e.g. when driving downhill or track driving) impairing the braking efficiency. Therefore, the brake fluid must be replaced at the recommended service intervals.

Vehicle Data and Glossary

Technical Glossary

Technical glossary

Active dynamics control

A system that allows the driver to change the handling and performance characteristics of the vehicle.

Active rear wing

The active rear wing is a movable wing that enhances the vehicle's driving stability and braking performance by increasing rear downforce.

Anti-lock braking system (ABS)

The ABS prevents the wheels from locking when you brake. This allows the vehicle to be steered during braking maneuvers.

Brake assist system

The brake assist system operates in emergency braking situations. If you depress the brake pedal quickly, the brake assist system automatically increases the force being applied to the brakes and thus shortens the stopping distance.

Brake disc wiping

Brake disc wiping operates when the windscreen wipers are switched on. It prevents moisture build up on the brake discs during periods of heavy rain, by applying the brakes momentarily, so that the pads touch the discs.

Brake steer

Brake steer offers the benefits of a torque vectoring differential, but is integrated into the braking system reducing weight and providing excellent speed of response.

If the system detects that the vehicle is starting to understeer through a corner, the inside rear brake is gently applied. This helps to increase the yaw rate of the vehicle, making the vehicle feel more resistant to understeer. The lateral 'g' force is also increased giving better handling characteristics.

If the driver uses too much throttle exiting a corner, the inside rear wheel increases speed, which without brake steer could cause the vehicle to become unstable. In this situation, brake steer will again gently apply the brake on the inside rear wheel, thereby restoring traction and stability.

Cylinder cut

Cylinder cut operates during automatic upshifts in Sport and Track powertrain modes and manual upshifts in Comfort powertrain mode.

When calling for an upshift under hard acceleration, fuel is interrupted (cut) in a defined number of engine cylinders. This rapidly decreases the engine torque and engine speed, allowing faster upshifts to be achieved. This will make the upshift more audibly noticeable than a normal upshift.

Dual clutch gearbox

The dual clutch gearbox is 7 speed. Gear changes can be fully automatic or driver controlled. The gear changes are almost instantaneous. It is this coupled with uninterrupted torque delivery from the engine which provides the relentless acceleration.

Electronic stability control (ESC)

ESC monitors driving stability and traction between the tires and the road surface.

Vehicle Data and Glossary

Technical Glossary

Global positioning system (GPS)

By means of the appropriate receivers, satellite signals supply information on the geographical position of the vehicle. These signals are compared with a digital map and used both to determine the position of the vehicle and for its route guidance.

Handling control

The handling control switch affects the RaceActive Chassis Control II system.

Hill hold control

Hill hold control prevents roll-back on hill starts. The brake system automatically applies the brakes until the accelerator is pressed.

Ignition cut

Ignition cut operates during manual upshifts in powertrain mode.

When calling for an upshift under hard acceleration, ignition is interrupted (cut) in a defined number of engine cylinders. This rapidly decrease the engine torque and engine speed, allowing faster upshifts to be achieved.

Inertia push

When Non-Active is selected or within Track powertrain mode when calling for an upshift at high engine speeds under hard acceleration, inertia push delivers greater acceleration. Under normal driving conditions, outside of inertia push when maximum performance is not called for, the engine and transmission speeds are aligned for a smooth seamless upshift. However, with inertia push, the clutch holding the next gear is engaged with greater force and the engine speed is not allowed to decrease fully, therefore utilizing the inertia of its internal rotating masses. This in turn provides a torque impulse as the gear is engaged aiding acceleration and maximizing performance.

Keyless entry

Keyless entry allows the driver to unlock the vehicle and disarm the alarm by simply opening the door when the key fob is within 3 ft 11 in (1.2 m) of the door sensors.

Launch control

Launch control is designed to give the maximum acceleration performance from a standing start.

Parking sensors

The parking sensor system comprises two ultrasonic sensors in the front bumper, four ultrasonic sensors in the rear bumper and two sounders. When the parking sensors detect an obstruction while maneuvering, the sounders provide an audible warning.

Performance shift cue (PSC)

PSC is an audible shift indicator, which will sound to indicate that an upshift is required to maintain optimum performance.

Rear view camera (RVC)

The RVC is mounted in the center of the rear bumper. The live video feed is displayed on either the Folding Driver Display or the Central Infotainment Touchscreen when the function is active.

Supplementary restraint system (SRS)

The SRS comprises a number of air bags which are automatically deployed in an accident to provide additional occupant protection.

Vehicle Data and Glossary

Technical Glossary

Tire pressure monitoring system (TPMS)

The TPMS constantly checks the pressure and temperature in all four tires. It warns if the pressure drops or the temperature rises in one or more of the tires.

Vehicle identification number (VIN)

The VIN is a unique 17 digit number which provides information about your vehicle, as well as when and where it was built.

Typical VIN = SBM15ACA0KW999999

Conformity Information

Compliance.....8.02
 McLaren Infotainment System (MIS).....8.02

Conformity Information Compliance

McLaren Infotainment System (MIS)


All regions/markets

Model: ECI1-MC100E, ECI1-MC100J, ECI1-MC100K, ECI1-MC100M

Speaker Impedance: 4-8Ω

Operating Voltage: 14.2V (9V – 16V allowable)

U.S.

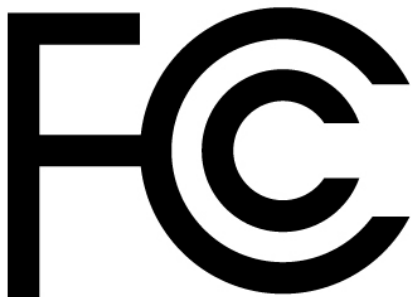

FCC ID: IOMKC014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate this equipment.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Canada

IC: 282C-KC014

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Overview.....9.02
 About.....9.02

Ayrton Senna Institute Overview

About

**Ayrton
Senna**
Institute



Never before has a McLaren road or race car been inspired by one of our greatest drivers, but the McLaren Senna bears the name of legendary Formula 1™ driver Ayrton Senna, befitting its status as the ultimate McLaren track car. While the McLaren Senna will be a star to McLaren road car and motorsport fans across the world, it is also crucial that this new McLaren brings into focus Ayrton Senna's enduring legacy away from the racetrack, highlighting the incredible charitable work of the Instituto Ayrton Senna (IAS), which provides comprehensive education to the children of Brazil.

The history of the IAS

Ayrton Senna envisioned a country where everyone had the opportunity to be victorious in whatever they dreamed of doing. He knew that this possibility was remote for most Brazilians but he dared to change that reality. Two months before his tragic accident at the San Marino GP, he shared with his sister Viviane his desire to do something for the future of Brazil and especially for its children. Viviane, already working for human development as a psychologist, wanted to do more for the new generations, and together they dreamed of fulfilling this desire to help the youth of Brazil. Sadly, Ayrton didn't live to implement the life-changing work he imagined. However, despite the pain of their loss, Viviane and the Senna family decided to realise Ayrton's dream with the establishment of the IAS.

Ayrton Senna Institute

Overview

The vital work of the IAS

Success for the IAS is not only seeing the children and youth of Brazil performing well in Portuguese, mathematics and other school subjects. That's because success at school – and beyond – depends on a wider set of abilities, understandings and values that relate to human life as a whole. The IAS fights illiteracy and truancy but goes above and beyond these problems to educate and prepare a new generation for the challenges of life. By promoting skills and abilities necessary for children to perform well in their social and professional lives, it prepares the youth of today for a world that is in constant transformation.

Recognition for the IAS

In 2004 the IAS became the first non-governmental organization to receive the UNESCO (United Nations Educational, Scientific and Cultural Organization) seal for the UNESCO Chair in Education and Human Development. In 2012, the OECD (Organization for Economic Cooperation and Development) invited the Instituto Ayrton Senna to join their group of partner organizations. It became the first Brazilian organization to join NetFWD (Net Forward), its global network of foundations dedicated to promoting social impact.

An enduring legacy between McLaren and Senna

Ayrton Senna's indomitable spirit has always been alive at McLaren but the McLaren Senna will amplify his legacy around the world. McLaren is proud to announce an official collaboration with the IAS, and a significant donation that supports its ongoing work with underprivileged children in Brazil. In its first years of operation the IAS benefited tens of thousands of children, and today it helps up to a million annually in practically every state of Brazil through the provision of vital education. McLaren is committed to ensuring the continuation of this truly life-changing work.

Index

A	
Accelerator pedal position.....	2.17
Accessories	
overview.....	7.02
Activate Race mode.....	2.29
Active Aero.....	2.38, 2.40
Active dynamics panel.....	2.20
active button.....	2.20
handling control.....	2.21
launch control.....	2.25
powertrain control.....	2.22
Active front aero blades.....	2.40
Active rear wing.....	2.38
Active speed limiter	
setting an upper speed limit.....	2.48, 2.49
Aero.....	2.38, 2.40
Air bags.....	1.17
child passengers.....	1.22
deployment.....	1.21
front air bags.....	1.18
knee air bags.....	1.18
occupant classification system.....	1.19
Out Of Position (OOP) testing.....	1.21
replacement.....	1.18
side head air bags.....	1.19
system modification.....	1.18
Air distribution - climate control.....	5.09
Air recirculation mode - climate control.....	5.08
Air vents	
dashboard.....	5.09
Alarm.....	1.10
arming.....	1.10
disarming.....	1.10
panic.....	1.31
Anti-lock braking System.....	2.33
Auto alarm.....	4.16
Automatic door locking.....	4.16
Automatic light control.....	1.28
Automatic locking.....	1.08
Automatic mirror folding.....	4.16
Automatic mode - climate control.....	5.05
Automatic mode - transmission.....	2.17
Automatic wipe.....	1.33
Ayrton Senna Institute.....	9.02
B	
Battery.....	6.13
Battery Care And Maintenance	
battery charging.....	6.13
charging the battery.....	6.13
Battery fuse box.....	6.20
fuses.....	6.20
Battery replacement - key fob.....	6.24
Battery safety.....	6.13
Battery status.....	3.07
Belts - seat.....	1.15
Blower speed - climate control.....	5.08
Bluetooth phone settings.....	4.13
Boost starting.....	6.14
Brake assist system.....	2.34
Brake disc wiping.....	2.34
Brake fluid.....	7.13
topping up.....	6.06
Brake pedal.....	2.08
Brakes	
Anti-lock Braking System.....	2.33
Anti-lock Braking System warning	
light.....	2.34
bedding-in.....	2.50
brake assist system.....	2.34
brake disc wiping.....	2.34
brake steer.....	2.35
foot.....	2.08
hill hold control.....	2.35
parking.....	2.06
pedal.....	2.08
warning light.....	2.08
Brake-steer.....	2.35
Breakdown.....	6.40
Bulb replacement.....	6.21

Index

C

Camera.....	2.14
Park Assist.....	2.15
rear view.....	2.14
Cameras.....	4.20
Capacities.....	7.11
cooling system.....	7.12
engine oil.....	7.11
fuel tank.....	7.11
Car cover.....	6.38
Catalytic converter.....	2.12
high temperature.....	2.12
Center lock nut torque tool.....	6.11
Central Display	
AUX.....	4.32
bluetooth audio.....	4.32
bluetooth phone settings.....	4.13
cameras.....	4.20
connecting an external device.....	4.30
connection settings.....	4.10
contacts.....	4.27
copyright.....	4.02
device pairing.....	4.23
ending a call.....	4.26
general settings.....	4.05
in-call options.....	4.26
introduction.....	4.04
light settings.....	4.13

making a call.....	4.24
McLaren Track Telemetry.....	4.38
media controls.....	4.29
navigation.....	4.18
other information.....	4.02
overview - media.....	4.28
overview - navigation.....	4.33
overview - phone.....	4.22
overview - radio.....	4.36
radio & media settings.....	4.12
radio controls.....	4.36
radio data system.....	4.37
receiving a call.....	4.26
regional settings.....	4.07
safety.....	4.33
setting a destination.....	4.35
settings.....	4.05
sound settings.....	4.11
storage.....	4.31
system controls.....	4.02
USB and iPod.....	4.30
using navigation.....	4.34
voice recognition.....	4.44
Changing wheels.....	6.34
Checking engine oil.....	6.02
Child passengers.....	1.22
Child restraint system.....	1.22
KISI child seat function.....	1.23
Cleaning.....	6.36

Center Display.....	6.38
Driver Display.....	6.38
exterior.....	6.36
instruments and display screens.....	6.38
interior.....	6.37
wheels.....	6.36
Climate control.....	5.04
air conditioning controls.....	5.04
air distribution.....	5.09
air recirculation mode.....	5.08
air vents.....	5.09
automatic mode.....	5.05
blower speed.....	5.08
controls.....	5.04
demisting.....	5.06
heated mirrors.....	5.10
manual mode.....	5.05
switching on/off.....	5.06
SYNC mode.....	5.05
temperature.....	5.07
Clock.....	3.04
Closing the front service cover.....	1.08
Closing the rear service cover.....	1.09
Closing the windows.....	5.02
Compliance	
McLaren Infotainment System	
(MIS).....	8.02

Index

Conformity Information	
McLaren Infotainment System	
(MIS).....	8.02
Connection settings	
overview.....	4.10
Coolant.....	7.12
topping up.....	6.04
Coolant temperature display.....	3.17
Copyright.....	3, 4.02
Cover - front service.....	1.08
Closing.....	1.08
Opening.....	1.08
Cover - rear service.....	1.09
Closing.....	1.09
Opening.....	1.09
Cruise control.....	2.44
canceling.....	2.45
decreasing speed.....	2.46
increasing speed.....	2.46
resuming speed.....	2.47
setting.....	2.44

D

Data	
overview.....	7.04
Daytime running lamps.....	1.29
Deactivate Race mode.....	2.30
Defrosting - climate control.....	5.06

Demisting - climate control.....	5.06
Deployment - air bags.....	1.21
Dimensions.....	7.06
Discharged battery.....	1.04
Discharged key fob battery.....	6.24
starting the engine.....	6.23
unlocking.....	6.22
Display.....	3.14
coolant temperature.....	3.17
Electronic stability control display.....	3.16
fuel level.....	3.17
fuel range.....	3.17
gear position indicator.....	3.15
handling and powertrain display.....	3.15
instruments cluster.....	3.04
messages.....	3.10
oil temperature.....	3.16
sport mode.....	3.14
track mode.....	3.14, 3.15
trip computer.....	3.05
vehicle info.....	3.06
Display messages.....	3.10
Display screen cleaning.....	6.38
Door mirror heating.....	1.26
Doors	
automatic locking.....	1.08
closing.....	1.07
locking.....	1.05
locking and unlocking from inside.....	1.06

manual opening from inside.....	6.24
opening from inside.....	1.07
opening from inside - discharged	
battery.....	6.24
opening from outside.....	1.04
opening from outside - discharged	
battery.....	6.22
Door unlock.....	4.16
Drag reduction system.....	2.39
Driver Display.....	3.04, 3.14
Comfort mode.....	3.14
coolant temperature.....	3.17
fuel level.....	3.17
gear position indicator.....	3.15
media.....	3.09
messages.....	3.10
navigation.....	3.10
overview.....	3.02
phone.....	3.08
right-hand display overview.....	2.05, 2.06
shift lights.....	3.02
speedometer.....	3.03
sport mode.....	3.14
tachometer.....	3.02
track mode.....	3.14, 3.15
trip computer.....	3.05
vehicle info.....	3.06
Driver Display overview.....	2.05
Driving away.....	2.10

Index

Driving in winter.....	2.55
Driving precautions.....	6.33
Driving Safety Systems	
General.....	2.33
DRS.....	2.39
Dual Clutch Gearbox.....	2.16
gear positions.....	2.16
gearshift paddles.....	2.19
kickdown.....	2.17
manual/automatic mode.....	2.17
Dynamic ESC modes.....	2.36

E

ECO mode.....	2.40
Economical driving.....	2.11
Eco Start-Stop System.....	2.09
Electrical status.....	2.02
Electric Windows	
Safety.....	5.02
Electronic stability control.....	2.35
deactivating.....	2.36
dynamic modes.....	2.36
reactivating.....	2.37
Electronic user manual.....	3
Emergency Equipment.....	6.08
center lock nut torque tool.....	6.11
fire extinguisher.....	6.12
fuel funnel.....	6.10

locking ring removal tool.....	6.11
manual door release key holder.....	6.11
overview.....	6.08
rear service cover release tool.....	6.10
safety.....	6.08
tire sealant.....	6.09
towing eye.....	6.10
warning triangle.....	6.08, 6.09
Emergency equipment safety.....	6.08
Emergency fuel filling funnel.....	6.10
Engine.....	2.08
Eco Start-Stop System.....	2.09
immobilizer.....	1.10
power output.....	7.04
running in.....	2.50
starting.....	2.08
stopping.....	2.09
technical data.....	7.04
warning light.....	2.11
Engine oil.....	6.02
capacity.....	7.11
checking.....	6.02
level warnings.....	6.02
specification.....	7.11
temperature warnings.....	6.04
topping up.....	6.03
usage.....	6.02
Entry lighting.....	5.13
Error messages.....	3.06

Exhaust.....	2.12
temperature monitoring.....	2.12
Exit lighting.....	5.13
Exterior lighting.....	1.27
Exterior mirrors.....	1.25
heating.....	1.26
mirror automatic fold.....	1.26
mirror fold.....	1.26
reverse dip.....	1.26
Extinguisher.....	6.12
Eye - towing.....	6.10

F

Features	
12 V socket.....	5.14
entry lighting.....	5.13
exit lighting.....	5.13
interior lighting.....	5.12
sun visors.....	5.14
USB sockets.....	5.15
Filling with fuel.....	2.52
Fire extinguisher.....	6.12
First aid kit.....	6.09
Fluid - brake.....	7.13
topping up.....	6.06
Fluid - power steering.....	7.12
topping up.....	6.05
Folding Driver Display.....	3.04

Index

right-hand display overview.....	2.05, 2.06
Folding Driver Display overview.....	2.05
Foot brake.....	2.08
Force limiters - seat belts.....	1.16
Front air bags.....	1.18
Front service cover.....	1.08
manual opening.....	6.25
Opening.....	1.08
opening - discharged battery.....	6.25
Fuel.....	2.52
funnel.....	6.10
quality.....	2.53
safety.....	7.11
tank.....	7.11
Fuel level display.....	3.17
Fuel range display.....	3.17
Funnel - fuel.....	6.10
Fuse box.....	
battery.....	6.20
main.....	6.15
secondary.....	6.18
Fuses.....	
battery fuse box.....	6.20
main fuse box.....	6.15
replacement.....	6.15
secondary fuse box.....	6.18

G

Gearbox.....	2.16
gear positions.....	2.16
gearshift paddles.....	2.19
kickdown.....	2.17
manual/automatic mode.....	2.17
oil topping up.....	6.04
Gear position indicator.....	3.15
Gear positions.....	2.06
Gear ratios.....	7.05
Gear shift indicator.....	2.11
General.....	2.33
General settings.....	4.05
Genuine McLaren Parts and Accessories.....	
overview.....	7.02
Glossary - technical.....	7.14
Ground clearance.....	5

H

Handling control.....	2.21
Hazard warning lamps.....	1.31
Headlamps.....	1.28
flash.....	1.28
hi beam.....	1.28
Heated mirrors.....	1.26, 5.10
Hi beam.....	1.28
Hill hold control.....	2.35

Horn.....	1.14
-----------	------

I

Identification number - vehicle.....	7.03
Ignition - switching on.....	2.03
Immobilizer.....	1.10
Increasing vehicle ground clearance.....	1.35
Increasing vehicle ride height.....	1.35
Individual unlock settings.....	1.06
In gear speeds.....	7.05
Inspecting tires.....	6.32
Inspecting wheels.....	6.32
Instituto Ayrton Senna (IAS).....	9.02
Instruments.....	3.14
cleaning.....	6.38
Comfort mode.....	3.14
coolant temperature display.....	3.17
display.....	3.14
display messages.....	3.10
display window.....	3.14
driver display overview.....	2.05
Electronic stability control mode.....	
display.....	3.16
fuel level display.....	3.17
fuel range display.....	3.17
gear position indicator.....	3.15
handling and powertrain display.....	3.15
left-hand display overview.....	2.05

Index

oil temperature display.....	3.16
overview.....	3.02
right-hand display overview.....	2.06
shift lights.....	3.02
speedometer.....	3.03
sport mode.....	3.14
tachometer.....	3.02
track mode.....	3.14, 3.15
trip computer.....	3.05
vehicle info.....	3.06
Instruments - Race mode.....	2.31
Interchanging wheels.....	6.34
Interior accessory power socket.....	5.14
Interior lighting.....	5.12
ambient lighting.....	5.12
courtesy lighting.....	5.12
Interior mirror.....	1.25
In the event of a theft.....	5.11
Introduction.....	2
overview.....	4.04
Stored data.....	6

J

Jacking the vehicle.....	6.39
Jump starting.....	6.14

K

Key fob.....	1.02
battery replacement.....	6.24
discharged battery.....	1.04
entry.....	1.02
stowing.....	1.03
Keyless entry.....	1.02
Kickdown.....	2.17
Kit - first aid.....	6.09
Kit - tire repair.....	6.34
Knee air bags.....	1.18

L

Lamps - side.....	1.28
Launch control.....	2.25
Lifting points - vehicle.....	6.39
Lighting	
ambient lighting.....	5.12
automatic control.....	1.28
courtesy lighting.....	5.12
daytime running lamps.....	1.29
exterior.....	1.27
hazard warning lamps.....	1.31
headlamp flash.....	1.28
hi beam.....	1.28
interior.....	5.12
Lo beam.....	1.28

parking lights.....	1.31
rear fog lamp.....	1.29
sidelamps.....	1.28
switch.....	1.27
turn signals.....	1.30
Light settings.....	4.13
Light switch.....	1.27
Limphone.....	2.11
Lo beam headlamps.....	1.28
Locking.....	1.05
automatic.....	1.08
from inside.....	1.06
from outside.....	1.05
mislock.....	1.05
Locking ring removal tool.....	6.11
Lo-jack system.....	5.11
Lo-jack vehicle recovery system.....	5.11
in the event of a theft.....	5.11

M

Main fuse box.....	6.15
fuses.....	6.15
Main instruments overview.....	2.05
Manual door release	
key holder.....	6.11
Manual door release key holder.....	6.11
Manual mode - climate control.....	5.05
Manual mode - transmission.....	2.17

Index

Manual unlocking.....	6.22
McLaren Assistance.....	6.40
in the event of a breakdown.....	6.40
McLaren Infotainment System	
AUX.....	4.32
bluetooth audio.....	4.32
bluetooth phone settings.....	4.13
cameras.....	4.20
connecting an external device.....	4.30
connection settings.....	4.10
contacts.....	4.27
copyright.....	4.02
device pairing.....	4.23
ending a call.....	4.26
general settings.....	4.05
in-call options.....	4.26
introduction.....	4.04
light settings.....	4.13
making a call.....	4.24
media controls.....	4.29
navigation.....	4.18
other information.....	4.02
overview - media.....	4.28
overview - navigation.....	4.33
overview - phone.....	4.22
overview - radio.....	4.36
radio & media settings.....	4.12
radio controls.....	4.36
radio data system.....	4.37

receiving a call.....	4.26
regional settings.....	4.07
safety.....	4.33
setting a destination.....	4.35
settings.....	4.05
sound settings.....	4.11
storage.....	4.31
system controls.....	4.02
USB and iPod.....	4.30
using navigation.....	4.34
voice recognition.....	4.44
McLaren Infotainment System (MIS)	
Compliance.....	8.02
Conformity Information.....	8.02
McLaren Track Telemetry	
drive.....	4.39
editing a track.....	4.43
ending your session.....	4.41
exporting telemetry data.....	4.42
importing telemetry data.....	4.42
opening the application.....	4.38
overview.....	4.38
reviewing you data.....	4.41
setup.....	4.39
Media.....	3.09
AUX.....	4.32
bluetooth audio.....	4.32
connecting an external device.....	4.30
media controls.....	4.29

overview.....	4.28
storage.....	4.31
USB and iPod.....	4.30
Media USB sockets.....	5.15
Messages.....	3.06
Mirror	
automatic exterior mirror fold.....	1.26
exterior.....	1.25
exterior mirror fold.....	1.26
heating.....	1.26, 5.10
interior.....	1.25
reverse dip.....	1.26
Mirrors	
vanity.....	5.14
Mislock.....	1.05

N

Navigation.....	3.10, 4.18
overview.....	4.33
safety.....	4.33
setting a destination.....	4.35
using navigation.....	4.34
Notification lights.....	2.04

O

Odometer.....	3.06
Oil - engine.....	6.02

Index

capacity.....	7.11
checking.....	6.02
level.....	6.02
level warnings.....	6.02
specification.....	7.11
status.....	3.07
temperature display.....	3.16
temperature warnings.....	6.04
top up.....	6.03
Oil - gearbox.....	6.04
Opening a door	
from inside.....	1.07
from outside.....	1.04
Opening and closing the vents	
dashboard air vents.....	5.09
Opening the front service cover.....	1.08
Opening the rear service cover.....	1.09
Opening the windows.....	5.02
Operating temperatures - vehicle.....	7.04
Other information.....	4.02
Outside temperature display.....	3.04
Owner documentation.....	5.13

P

Panic alarm.....	1.31
Park assist.....	2.15
Park assist cameras.....	2.15
Parking brake.....	2.06

Parking days.....	2.02
Parking lights.....	1.31
Parking sensors.....	2.12
Parts	
overview.....	7.02
Parts and Accessories	
overview.....	7.02
Passengers - child.....	1.22
Performance shift cue.....	4.16
Phone.....	3.08
contacts.....	4.27
Device pairing.....	4.23
ending a call.....	4.26
in-call options.....	4.26
making a call.....	4.24
overview.....	4.22
receiving a call.....	4.26
Pit lane pull away.....	2.28
Power output.....	7.04
engine.....	7.04
Power steering fluid.....	7.12
topping up.....	6.05
Powertrain control.....	2.22
Precautions - driving.....	6.33
Pressures - tire.....	6.33, 7.09
Products - service.....	7.11
Puncture repair kit.....	6.34
Push-to-drink	
drink.....	5.15

R

Race mode.....	2.29
activate.....	2.29
deactivate.....	2.30
instruments.....	2.31
overview.....	2.29
vehicle settings.....	2.32
Racing seats.....	1.13
adjustment.....	1.13
Radio	
overview.....	4.36
radio controls.....	4.36
radio data system.....	4.37
Radio & media settings	
overview.....	4.12
Rain sensor.....	1.33
Ratios - gear.....	7.05
Reading lights.....	5.12
Rear fog lamp.....	1.29
Rear service cover.....	1.09
Opening.....	1.09
Rear spoiler.....	2.38
Rear view camera.....	2.14
Recirculation mode - climate control....	5.08
Recommended fuel quality.....	2.53
Recovery of your vehicle.....	6.41
Refueling.....	2.52
Regional settings.....	4.07

Index

Replacement battery.....	6.40
Replacing	
bulbs.....	6.21
fuse.....	6.15
key fob battery.....	6.24
vehicle battery.....	6.40
wiper blade.....	6.28
Restraint system.....	1.17
child.....	1.22
KISI child seat function.....	1.23
supplementary.....	1.17
tether strap anchorages.....	1.24
Rev counter.....	3.02
Reverse mirror dip.....	4.15
Road speed limit.....	4.18
Running in.....	2.50

S

Safety.....	1.15, 5.02
air bags.....	1.17
air bags Out Of Position (OOP).....	1.21
air bag system modification.....	1.18
battery.....	6.13
fuel.....	7.11
mirrors.....	1.25
replacement of air bags.....	1.18
seat belts.....	1.15
seats.....	1.12

safety equipment.....	6.08
Sealant - tire.....	6.09
Seat belts.....	1.15
force limiters.....	1.16
safety.....	1.15
tensioners.....	1.16
wearing.....	1.16
Seat belt warning light.....	1.16
Seats	
racing seat adjustment.....	1.13
safety.....	1.12
Secondary fuse box.....	6.18
fuses.....	6.18
Sensors	
parking.....	2.12
Service and Warranty.....	5.13
Service cover	
Closing.....	1.09
Service cover - front	
Closing.....	1.08
service cover release tool.....	6.10
Service interval.....	3.08
Service products.....	7.11
Settings	
overview.....	4.05
Settings - individual unlock.....	1.06
Setting up warning triangle.....	6.09
Shift lights.....	3.02
Side head air bags.....	1.19

Sidelamps.....	1.28
Silent door lock.....	4.16
Snow socks.....	2.55
Sound settings.....	4.11
Specification - engine oil.....	7.11
Specifications.....	7.04
Speedometer.....	3.03
Speeds - in gear.....	7.05
Spinning wheel pull away.....	2.27
Spoiler.....	2.38
START/STOP button.....	2.03
Starting and driving	
foot brake.....	2.08
gear positions.....	2.06
instruments and warning lights.....	2.03
main instruments.....	2.05
notification lights.....	2.04
parking brake.....	2.06
starting the engine.....	2.08
switching on the ignition.....	2.03
warning lights.....	2.03
Starting the engine.....	2.08
discharged key fob battery.....	6.23
Steering column	
manual adjustment.....	1.14
Steering wheel	
horn.....	1.14
manual adjustment.....	1.14
Stopping the engine.....	2.09

Index

Stored data.....	6
Stowing the key fob.....	1.03
Summer tires.....	7.08
Sun visors.....	5.14
Supplementary Restraint System.....	1.17
Switching air conditioning on/off.....	5.06
Switching on the ignition.....	2.03
Switch - lighting.....	1.27
Symbols.....	4
SYNC mode - climate control.....	5.05
System controls.....	4.02

T

Tachometer.....	3.02
Technical data.....	7.04
engine.....	7.04
gear ratios.....	7.05
speeds - in gear.....	7.05
tire pressures.....	7.09
turning circle.....	7.09
vehicle dimensions.....	7.06
vehicle operating temperatures.....	7.04
vehicle weights.....	7.08
wheel and tire sizes.....	7.08
Technical glossary.....	7.14
Temperature - climate control.....	5.07
Temperature display.....	3.04
Tensioners - seat belt.....	1.16

Tire monitoring.....	3.07
Tire pressures.....	6.33, 7.09
Tires.....	6.31
asymmetric.....	6.31
inspecting.....	6.32
markings.....	6.31
monitoring system.....	2.41
pressure monitoring.....	2.41
pressures.....	6.33, 7.09
repair kit.....	6.34
sealant.....	6.09
summer.....	7.08
temperature monitoring.....	2.42
Trofeo R.....	6.32
winter.....	7.09
Tire type.....	4.17
Tools.....	6.08, 6.10
Topping up.....	6.02
brake fluid.....	6.06
coolant.....	6.04
engine oil.....	6.03
gearbox oil.....	6.04
power steering fluid.....	6.05
windscreen washers.....	6.07
Tow-away protection.....	1.11
Towing.....	6.41
eye.....	6.10
Track driving.....	5
Track use.....	2.51

Traction control system.....	2.35
Triangle - warning.....	6.08
Trofeo R tires.....	6.32
Turning circle.....	7.09
Turn signals.....	1.30

U

Unlocking - discharged battery.....	6.22
Unlocking from inside.....	1.06
Unlocking from outside	
key fob.....	1.02
keyless.....	1.04
Upper speed limit.....	2.48, 2.49
setting.....	2.48, 2.49
USB sockets.....	5.15
media.....	5.15

V

Valet mode.....	4.17
Vanity mirrors.....	5.14
Vehicle dimensions.....	7.06
Vehicle electrical status.....	2.02
Vehicle identification.....	3.08
Vehicle identification number.....	7.03
Vehicle info.....	3.06
battery status.....	3.07
error messages.....	3.06

Index

oil status.....	3.07
service interval.....	3.08
tire monitoring.....	3.07
vehicle identification.....	3.08
vehicle lift.....	1.35
lower.....	1.37
operation.....	1.35
raise.....	1.36
Vehicle lifting points.....	6.39
Vehicle Recovery.....	6.40, 6.40
Vehicle settings	
auto alarm.....	4.16
automatic door locking.....	4.16
automatic mirror folding.....	4.16
door unlock.....	4.16
Performance shift cue.....	4.16
reverse mirror dip.....	4.15
Road speed limit.....	4.18
silent door lock.....	4.16
tire type.....	4.17
valet mode.....	4.17
wiper modes.....	4.18
wiper sensitivity.....	4.18
Vehicle settings - Race mode.....	2.32
Vehicle speeds.....	7.05
Vehicle starting.....	2.08
discharged key fob battery.....	6.23
Vehicle use.....	2.50
Vehicle washing.....	6.36

Vehicle weights.....	7.08
Vents	
dashboard.....	5.09
Voice Recognition.....	4.44

W

Warning - engine oil level.....	6.02
Warning - engine oil temperature.....	6.04
Warning light	
Anti-lock Braking System.....	2.34
brakes.....	2.08
engine.....	2.11
seat belt.....	1.16
Supplementary Restraint System.....	1.21
Warning lights.....	2.03
Warning triangle.....	6.08
Washers.....	6.07
windscreen.....	6.07
Washing.....	6.36
exterior.....	6.36
wheels.....	6.36
Wearing seat belts.....	1.16
Weights.....	7.08
Wheel and tire sizes.....	7.08
Wheel removal	
center lock nut torque tool.....	6.11
locking ring removal tool.....	6.11
Wheels.....	6.30

inspecting.....	6.32
interchanging.....	6.34
Wheels and tires.....	6.30
Wheel sizes.....	7.08
Wheel - steering	
manual adjustment.....	1.14
Window demisting - climate control.....	5.06
Windows	
opening and closing.....	5.02
Safety.....	5.02
Windscreen washers.....	6.07
Windscreen wipers.....	1.33
rain sensor.....	1.33
single wipe.....	1.33
wash/wipe.....	1.34
wiper blade replacement.....	6.28
wiper modes.....	4.18
wiper sensitivity.....	4.18
Winter driving.....	2.55
Winter tires.....	7.09
Wiper blade replacement.....	6.28
Wiper modes.....	4.18
Wiper sensitivity.....	4.18

